



Be Sure
to Read this
Manual
Before Use

Operation Manual



www.universal-space.com

CONTENT

Important Safety Instructions.....	2
1. SPECIFICATIONS	4
2. PACKAGE CONTENTS	5
3. PART NAME	6
4. SET UP & INSTALLATION	7
5. HOW TO PLAY.....	10
6. GAME OPTIONS.....	12
7. ERROR MESSAGE AND TROUBLE SHOOTING.....	18
8. MAINTENANCE & INSPECTION	20
9. OVERALL CONSTRUCTION.....	21

Non-technical personnel who do not have technical knowledge and Expertise should refrain from performing such work that this manual require or perform tasks which are not explained in this manual. Failing to comply can cause severe accidents such as electric shock or other serious injuries. All repairs must be performed to original manufacturer specifications.

WARNING: To reduce the risk of fire, electric shock or personal injury, unplug or disconnect the machine from the power supply before servicing.

Thank you for purchasing **Drummer Kids** from Universal Space. We hope you enjoy the product.

This manual contains valuable information about how to operate and maintain your game machine properly and safely. It is intended for the owner and/or personnel in charge of product operation. Carefully read and understand the instructions.

If you need any help during installation and setup please utilize this manual and troubleshooting guide. If the product fails to function properly, *non-technical personnel should under no circumstance attempt to service the machine*. Contact your distributor or manufacturer for help.

Before use, please read **IMPORTANT SAFETY INSTRUCTIONS**.

IMPORTANT SAFETY INSTRUCTIONS

To ensure the safe usage of this product, carefully read and understand these instructions before operating your game.

Save these instructions for future reference.

Use this product only as described in this manual. Other uses not recommended may cause fire, electric shock or personal injury. Unplug the game from the outlet when not in use, when moving from one location to another, and before cleaning/servicing.

Explanations which require special attention are indicated by signs of warning. Depending on the potential hazardous degree, the terms: **NOTE**, **NOTICE**, and **WARNING** are used.

NOTE: A NOTE indicates useful hints or information about product usage.

NOTICE: A NOTICE indicates potential damage to product and how to avoid the problem.

WARNING: A WARNING indicates a potential for product damage or serious personal Injury.

It is important to understand the meaning of the following HAZARD SIGNS before continuing:

High Voltage and Shock Hazard:

High voltage can cause electric shock.
Turn off/unplug power before servicing.



High Temperature Hazard:

This part may cause scalding.
Do not touch. Surface may be hot.



No Touching Hazard:

This part may be hot or can cause electric shock.
Do not touch.



Use the following safety guidelines to help ensure your own personal safety and to help protect your equipment and surrounding environment from potential damage.

 **This product is an indoor game machine. Do not install outdoors.**

Avoid installing in the following places to prevent fire, electric shock, injury and/or machine malfunctioning:



- Places subject to rain/moisture, or places subject to high humidity.
- Places subject to direct sunlight, or places subject to extremely hot or cold temperatures to ensure that it is used within the specified operating range.
- Places where inflammable gas may be present or in the vicinity of highly inflammable/volatile chemicals or items that can easily catch fire
- On unstable or sloped surfaces. The machine may topple or cause unforeseen accidents.
- Vicinity of fire exits, fire extinguishers etc that may block/prevent safety measures

IMPORTANT NOTE:

ALL REPAIRS MUST BE DONE TO ORIGINAL MANUFACTURER SPECIFICATIONS. FAILURE TO DO SO VOID ALL WARRANTIES AND OPERATOR ASSUMES ALL RISKS.

Note: The contents of this manual may be updated without notice.

1. SPECIFICATIONS

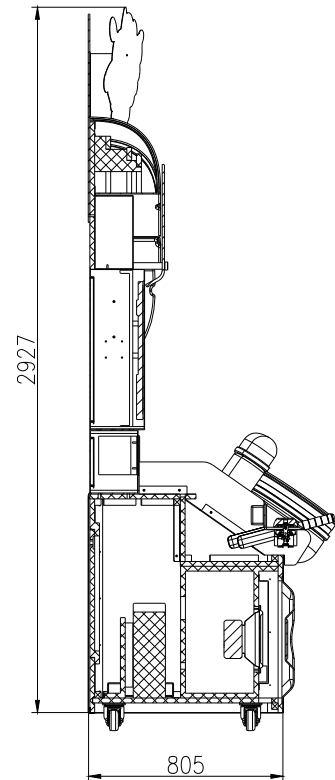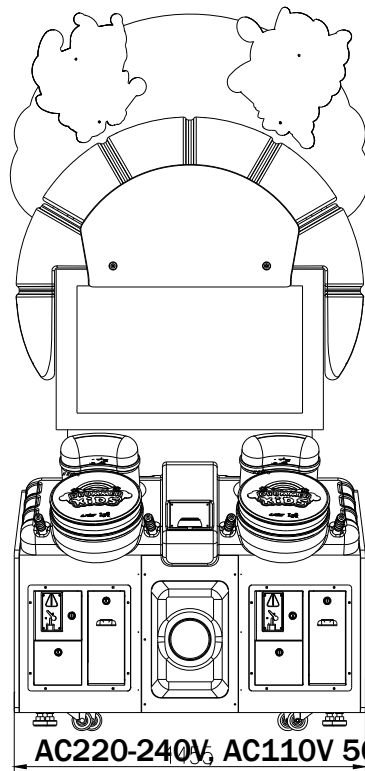

Rated power supply: **AC220-240V, AC110V 50/60Hz**

Min. Power consumption: **120W**

Max. Power consumption: **150W**

Dimensions: **W1455×D805×H2977 (mm)**

Weight: **Approximately 250kg**

! **NOTICE:** After turning off the game, please wait at least **1** minute before restarting again.






Note: Game parameters are subject to change without notice.

! **NOTICE:** After turning off the game, please wait at least **1** minute before restarting again.

2. PACKAGE CONTENTS

Open the package and make sure all the items are included:

- 1 x Body Assembly
- Following accessories

No.	Part No.	Code No.	Name	SPEC.	Illustration	Qty.
1	D122-433-000	25300172002	Key	171B		1
2	D122-434-000	25300171002	Key	171		2
3	D122-432-000	23301000001	Power cord	10A/250V-1.8M		1
4	D122-733-000	41440000040	Manual	English		1
5	D122-431-000	21901000013	Fuse	Φ5×20mm T10A 250VAC		1

If any items are found to be missing, please contact your sales representative for help immediately.

NOTE: Part models are subject to change without notice.

3. PART NAME




4. SET UP & INSTALLATION

! This product is an indoor game machine. Do not install outdoors.

- Refer to IMPORTANT SAFETY INSTRUCTIONS (Pg. 2) for places to avoid
- Place the unit on a dry level surface
- Ventilation openings in the back of the unit must not be obstructed by objects or by wall.


4.1 Play Zone

This machine requires space for playing and for maintenance as shown below.
Leave space around the game upon installation:

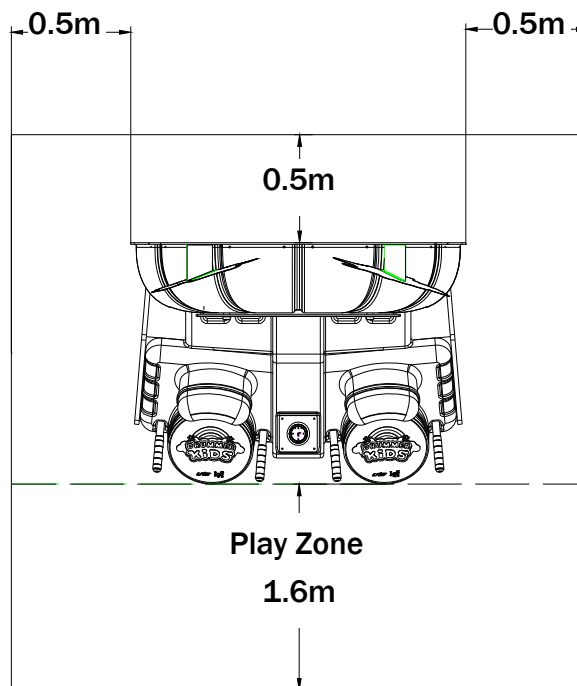

4.2 Level Adjustment

Install this machine on a flat surface. Adjust levers to lift casters off the ground to level the game. If the game is installed on an unsuitable floor, it could cause game malfunction. To secure the game, adjust the Leveler down until it touches the floor, lifting the casters off the ground by 5mm. Repeat the same for all levelers.

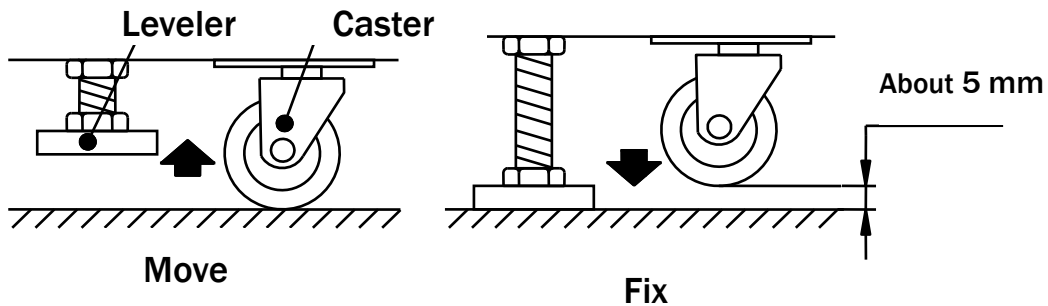


NOTICE

Make sure the machine is level with the ground and all the adjustable legs should stick to the floor closely.

4.3 Transporting the Game

If you need to move the game, adjust the levelers back to an “up” position so the casters touch the ground.

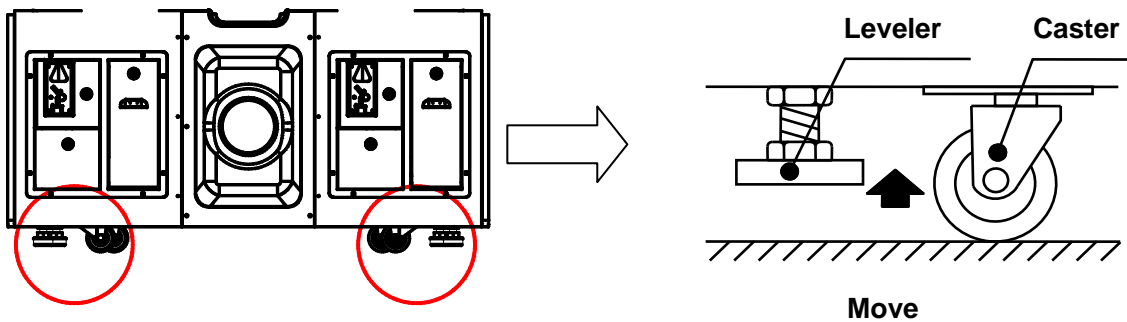


NOTICE

- Be careful not to damage the machine during transport.
- The machine should be handled with care when bringing it down from a higher level.
- Always unplug the game before moving.
- Keep the machine in upright position during transport.
- For longer distance transport, package the game properly to prevent damages

4.4 Connecting Power


! **WARNING:** Check the voltage rating before you connect the equipment to an electrical outlet to ensure that the required voltage and frequency match the available power source. Please refer the label of the machine.

- Do not plug the equipment power cables into an electrical outlet if the power cable is damaged.
- Avoid putting many loads on one electrical outlet as it could generate heat and fire resulting from overload.
- Connect the grounding conductor to the earth terminal (GND):

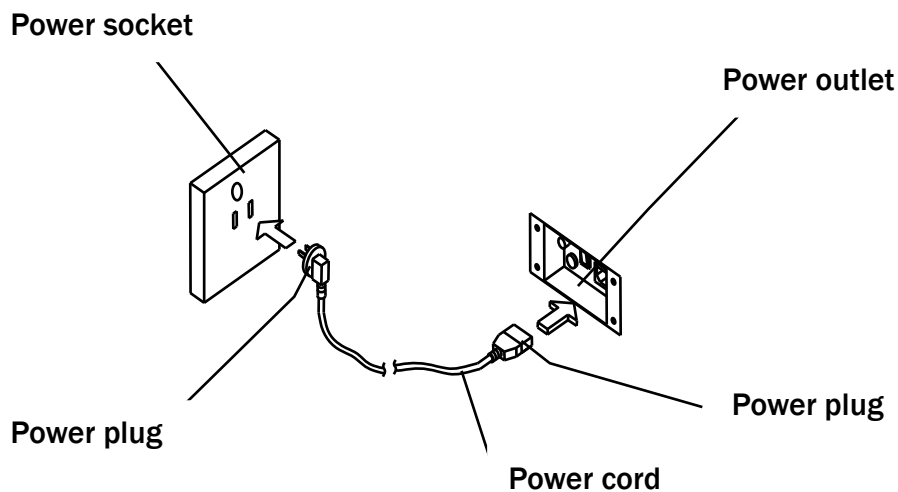


! **WARNING**

Ensure no heavy objects rest on the power cord. Check to make sure the game cabinet does not sit on the power cord as this could damage the cord and become hazardous.

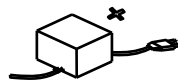

To disconnect the game, grip the plug and pull it from the wall outlet. Never pull by the cord.

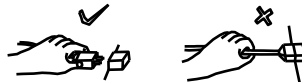

To prevent electric shock, do not touch the power plug when hand is wet.




Ensure that nothing rests on the power cord and that it is not located where it can be stepped on or tripped over.



5. HOW TO PLAY

5.1 Game Operation

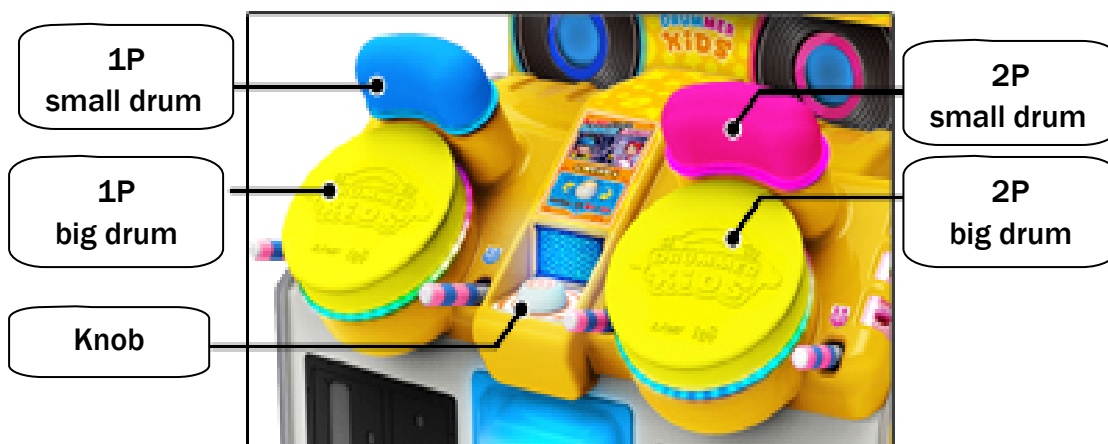

5.2 How To Play

1. Select mode: Use knob to select mode. Hit the yellow drum to confirm.

Easy: Hit the yellow drum only during play.

Challenge: Hit the yellow drum and the small drum during play.



2. Select song: Use knob to select song. Hit the yellow drum to confirm and start to play.

Easy: Songs are random selected.

Challenge: Songs are selected by player. The song is more difficulty if more stars under the name of the song.



5.3 User Interface



5.4 Candy Illustration




5.5 BONUS Game

If two players play at the same time, there is a BONUS game at the end. Hit and race to 50.




6. GAME OPTIONS

6.1 Setting Menu

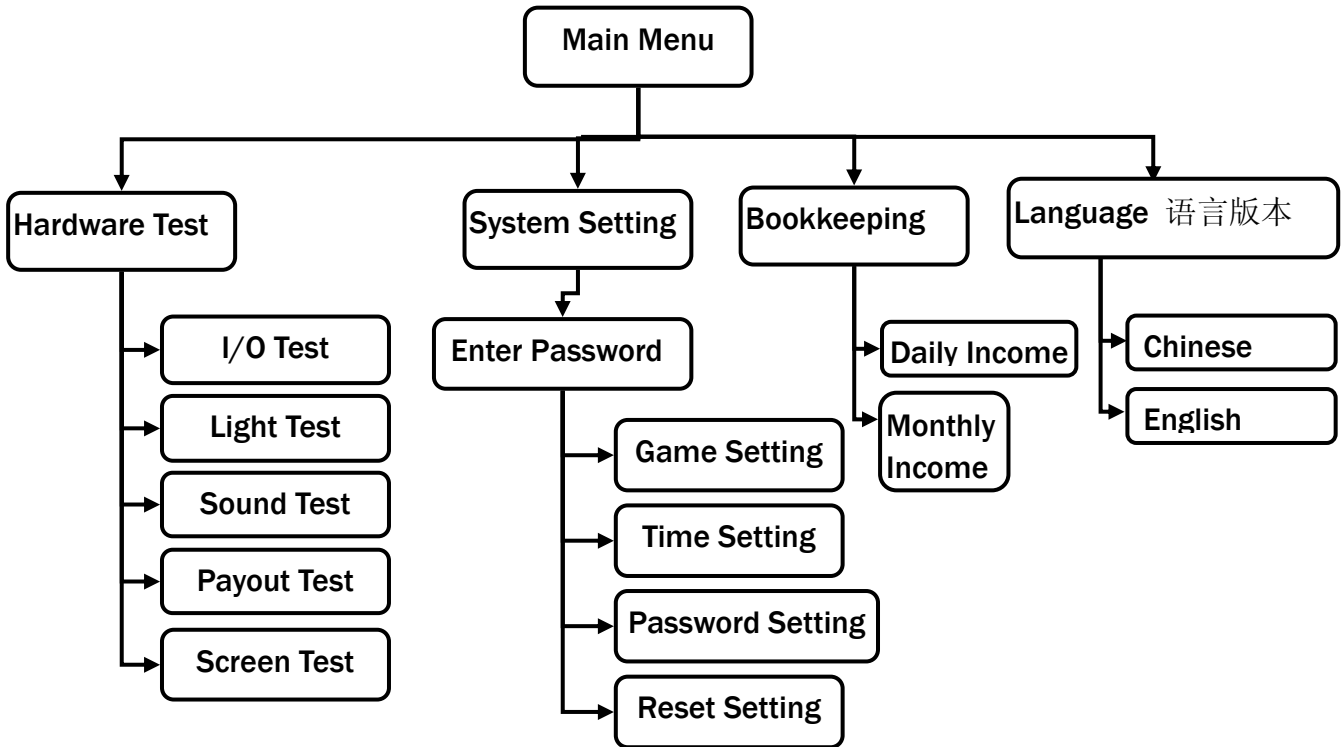

6.2 Mani Menu Operation

1. Press SERVICE button and go into the Main Menu for the settings.
2. Do the operation by hiting the yellow drums and turning the knob.
3. Press “1P test“button to move the selection. Press “2P test” button to confirm the selection.
4. Select EXIT and back to the play mode.

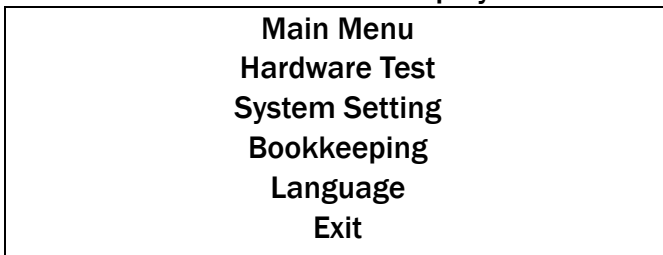


6.3 Hardware Test

Hardware Test I/O Test Light Test Sound Test Payout Test Screen Test Back	Option	Explanation
	I/O Test	Test buttons' function if normal or not on the machine.
	Light Test	Test lights on the machine whether normal or not.
	Sound Test	Test sound output whether normal or not.
	Payout Test	Test ticket dispenser and Coin mech function where normal or not.
	Screen Test	Test monitor whether normal or not.
	Back	Back the Main Menu.

6.3.1 I/O Test

1. Test 1P big drum, 1P small drum, 2P big drum, 2P small drum, the knob, 1P service button, test button, and 2P service button.
2. Hit both yellow drums or both 1P and 2P service button to exit.

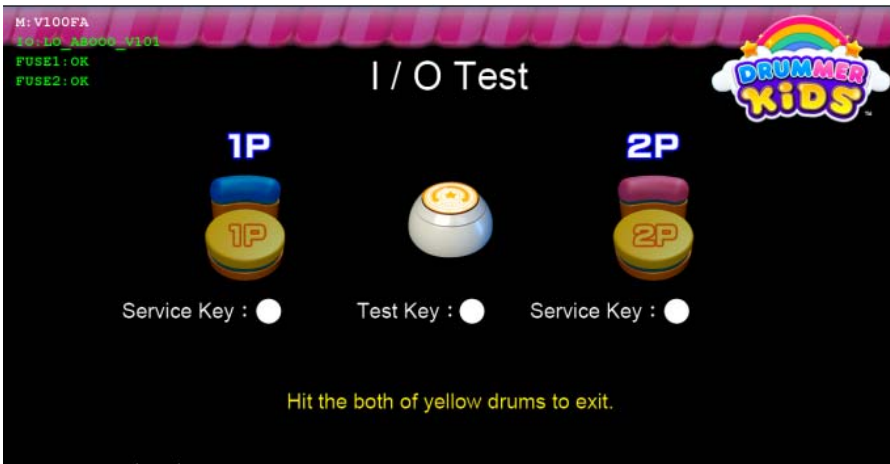


6.3.2 Light Test

1. Lights turn on in order of red, green, blue and full dark.
2. Hit the 1P yellow drum to change the light color.
3. Hit the 2P yellow drum to exit.




6.3.3 Light Test

1. Hit the 1P yellow drum to select items. Hit 2P yellow drum to change sound track.

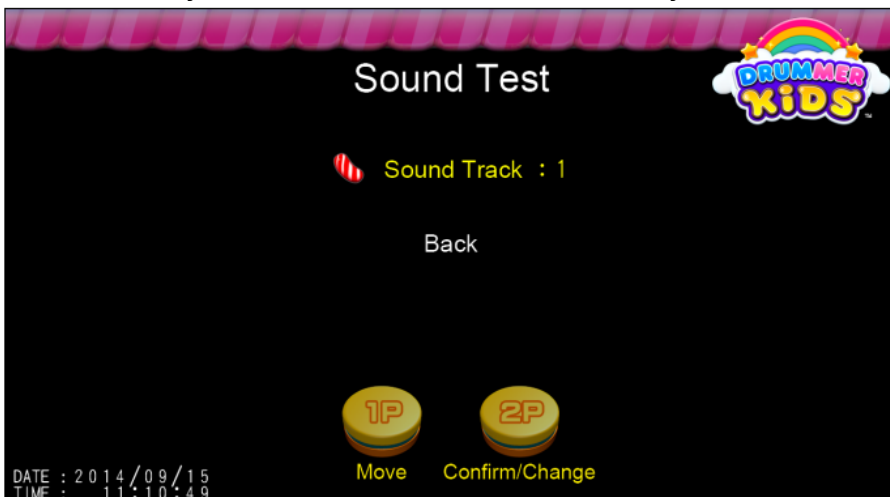


6.3.4 Payout Test

1. Hit the 1P yellow drum to select items. Hit 2P yellow drum to do the test.
2. Ticket dispenser will dispense 5 tickets every time for testing.
3. Insert coins to test the function of the coin mech whether normal or not.

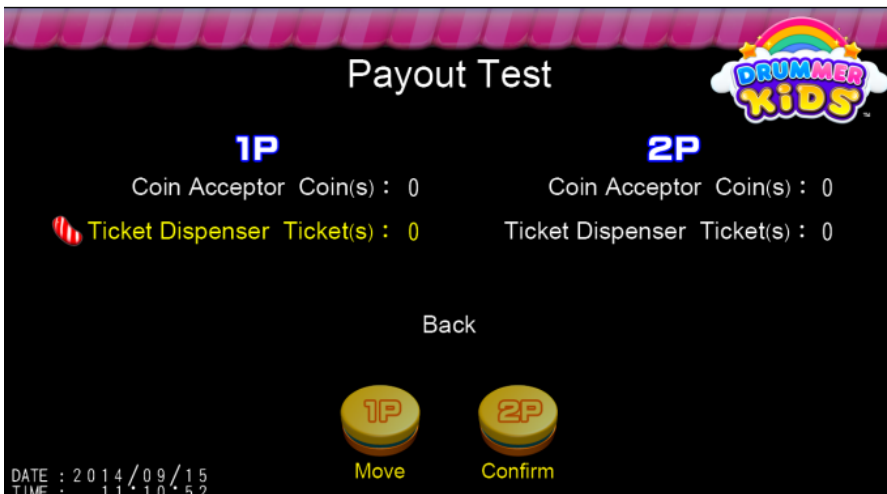

6.3.5 Screen Test


1. Hit 1P or 2P yellow drum or press 1P or 2P service button to exit.

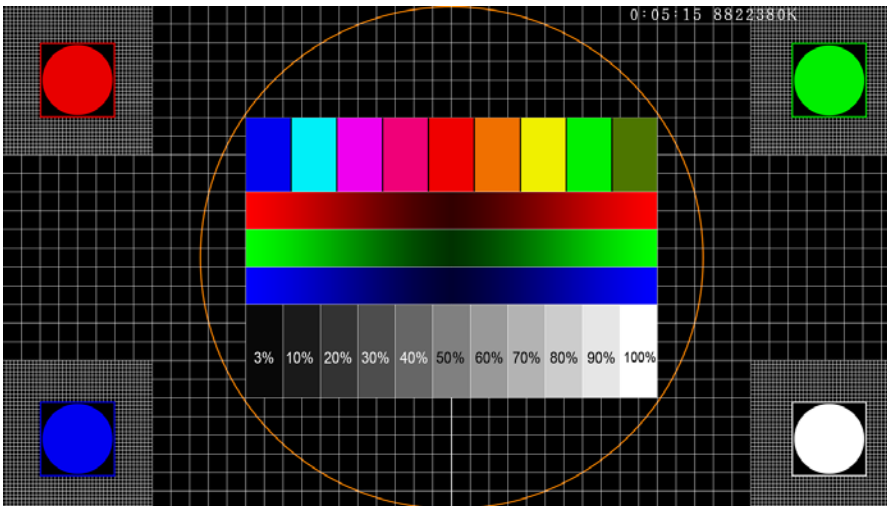

6.4 System Setting

System Setting
Game Setting
Time Setting
Password Setting
Reset Setting
Back

Option	Explanation
Game Setting	Adjust the relevant settings of the game.
Time Setting	Adjust the system time.
Password Setting	Change the password of the game.
Reset Setting	Reset the system date to factory setting.
Back	Back to Main Menu

 **Note:** Please enter password before going into system setting. The initial password is 00000000.



6.4.1 System Setting

1. Hit 1P yellow drum to move. Hit 2P yellow drum to confirm or change options.

* In Free Play mode, ticket payout function is OFF and tickets will be cleared.



Item	Option	Default
Free Play *	On/Off	Off
Ticket out	On/ Off	On
Coin Rate	1 Coin for 1 credit	1
Max Tickets	1 ~ 50	30
Min Tickets	1 ~ 10	10
Game Volume	0 ~ 8	4
Demo Volume	0 ~ 8	4


6.4.2 Time Setting

1. Hit 1P yellow drum to move. Hit 2P yellow drum to confirm or change options.



6.4.3 Password Setting

1. Hit 1P yellow drum to move. Hit 2P yellow drum to confirm. Hit 1P yellow again or turn the knob to change numbers.
2. All 8 numbers need to be entered.
3. New password needs to be entered twice to double confirm.
4. The default password is 00000000.

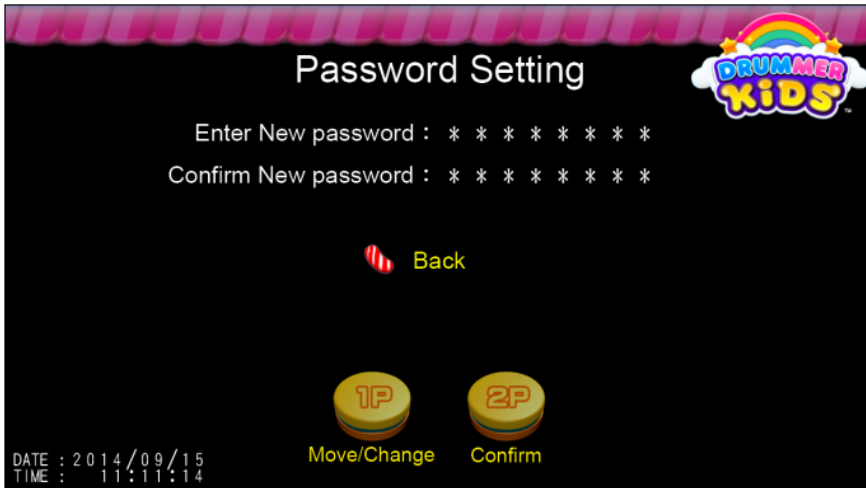

6.4.4 Reset Setting

1. Reset settings to factory defaults. But keep bookkeeping records: All settings will be reset to default. But data in bookkeeping will not be reset.
2. Reset settings to factory defaults. And clear bookkeeping record: All settings will be reset to default. And data in bookkeeping will be cleared at the same time.




6.5 Bookkeeping



Item	Explanation
Daily Income	Display daily income data.
Monthly Income	Display monthly income data.

6.5.1 Daily Income


1. Hit 1P yellow drum to turn to the next page.
2. It records 60 days data. 10 days for one page. Total is 6 pages.

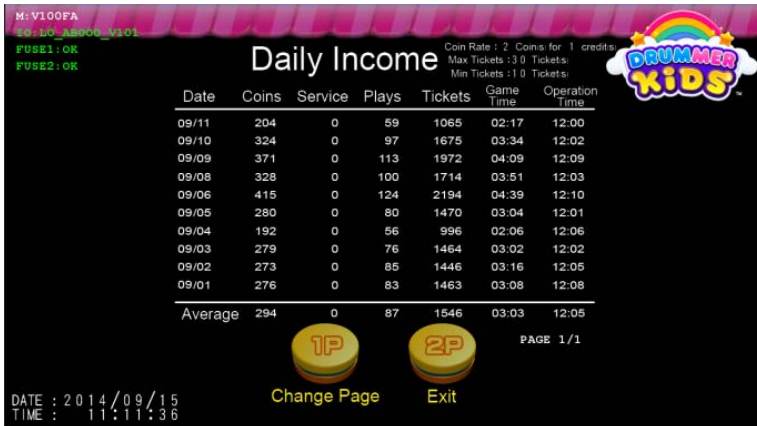

Item	Explanation
Date	The date of the income.
Coins	Inserted coins for that date.
Service	The times for pressing the service button on that date.
Plays	The play times on that date.
Tickets	The ticket payout on that date.
Game Time	Total play time on that date.
Operation Time	Total operation time on that date.

6.5.2 Monthly Income

1. Hit 1P yellow drum to turn to the next page.
2. It records 30 months data. 10 months for one page. Total is 3 pages.

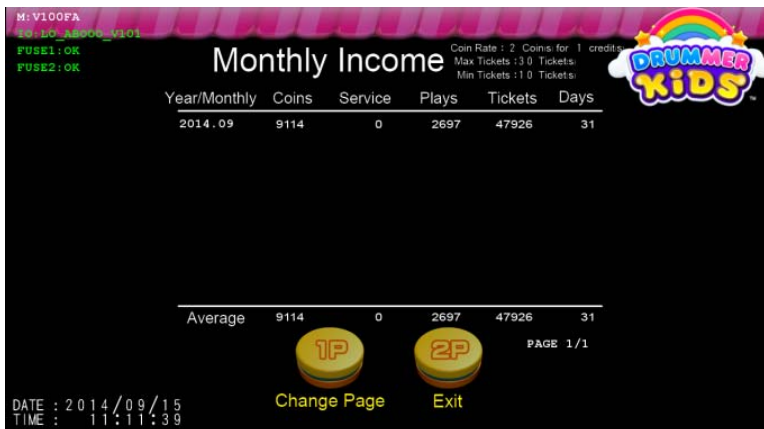

Item	Explanation
Year/Monthly	The month of the income.
Coins	Inserted coins for that month.
Service	The times for pressing the service button in that month.
Plays	The play times in that month.
Tickets	The ticket payout on that month.
Days	Total days of operation in that month.


6.6 Language

1. Hit 1P yellow drum to move. Hit 2P yellow drum to confirm.
2. There are two language can be selected. One is Chinese and the other is Chinese.
3. The language is changed after rebooting the game.



7. ERROR MESSAGE AND TROUBLE SHOOTING

Problem	Cause	Countermeasures
Screen is dark when power on.	Monitor power is not supplied.	Securely insert the power plug into the plug socket or replace with power cable.
	Monitor signal cable doesn't connect or malfunctioning.	Please connect signal cable or replace with signal cable.
Cabinet no reaction and screen is dark after power on.	Power supply/voltage is not correct.	Macke sure that supply/voltage is correct.
	Fuse has died.	Please replace fuse.
	Power is not ON, or power cord is not plugged in properly	Securely insert the power plug into the plug socket.
	Monitor signal cable doesn't connect or malfunctioning.	Please connect signal cable or replace with signal cable.
Cabinet have raster, but no reaction	IO board +5V and +12V power supply is not correct.	A fault with IO board if screen is normal, please send back to manufacturers maintenance it or professional maintenance.
	The fuse is blown.	Replace with specified rating fuse.
Cabinet power off	Power supply/voltage is not correct.	Macke sure that supply/voltage is correct.
Control board power off	5V, 12V, 24V power supply in power box is not correct.。	Please adjust wiring connector connection.
Monitor is blank screen	Monitor power is broken.	Please check supply circuit or replace with power cable.
Monitor image have aberration	Monitor settings are wrong.	Please adjust RGB hue or reselect in OSD menu. Monitor auto adjust color after select AUTOSSET key.
	Monitor visual angle	Adjust monitor set out position.
Monitor image appear cloth grain or ripple	Monitor resolution settings are wrong.	Please adjust monitor resolution setting.
	Adjust monitor menu setting can alleviate the issue.	Please adjust moiré in OSD menu.
	Monitor power cable aging	Replace with monitor power cable.
	Monitor refresh rate setting is wrong.	Please adjust refresh rate setting.
IC control is not satisfactory	5V, 12V, 24V power supply connection error.	Please check power box.
	IC backward card.	Please reinsert IC card.

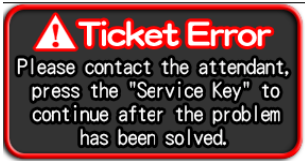Problem	Cause	Countermeasures
Coin mech. no reaction	Coin mech. is broken.	Replace with coin mech.
	Coin mech. signal cable is loose.	Check coin mech. signal loose or not.
	IO control board malfunctioning.	Replace with IO control board.
Coin mech. jam	Sample coin does not clamp well.	Check sample coin clamp well or not, or try another sample coin.
	Coin mouth is not aligning or out of shape.	Check coin mouth aligning or not, adjust coin mouth.
	Coin mech. install inappropriate, red brake be pressed.	Please reinstall coin mech..
Coin mech. not has counted.	No signal feedback.	Please reconnection coin mech., you can hear a "click" as it has any signal.
	PCB board not connected to pull resistance.	Please connected pull resistance.
	Insert coins are not the same as sample coin.	Replace with appropriate coin.
	DIP SW(ON,OFF) is not correct.	Please check DIP SW(ON,OFF) is correct or not.
	Coin mech. power socket bad contact.	Please check coin mech. power socket bad contact or not.
No ticket payout		Check whether there are tickets in ticket dispenser. Go to "Setting Menu">"Hardware Test">"Payout Test" and test.
Hit the drum and no reaction	/	Go to "Setting Menu">"Hardware Test">"I/O Test" to test the yellow drums and the small drums.
Turn the knob and no reaction	/	Go to "Setting Menu">"Hardware Test">"I/O Test" to test the knob.
No light effect	/	Go to "Setting Menu">"Hardware Test">"Light Test" to test the yellow drums and the small drums.
No sound from the speaker	/	Go to "Setting Menu">"System Setting">"Game Setting" to test the yellow drums and the small drums.

8. MAINTENANCE & INSPECTION

8.1 Safety Check

Check the points listed before operating the machine. These checks are necessary for safe machine operation:

1. Try to run the game before operation each day.
2. Conduct monthly routine checks of game components ensure good working condition
3. Check the machine regularly for dust and clean when necessary.

Note: Parts and components require preventative maintenance to be kept running smoothly

8.2 Handling Precautions

When installing or inspecting the machine, be very careful of the following points and pay attention to ensure that the player can enjoy the game safely.

Non-compliance with the following points or inappropriate handling running counter to the cautionary matters herein stated can cause personal injury or damage to the machine




WARNING

- Before servicing the machine, be sure to turn power off. Servicing without turning the power off can cause electric shock or short circuit.
- To avoid electric shock or short circuit, do not plug then unplug the power quickly
- Do not expose power cords and earth wires, these are susceptible to damage.
- Damaged cords and wires can cause electric shock or short circuit and should be replaced immediately.
- When or after installing the product, avoid pulling the power cord to prevent unnecessary wear and tear. Use the power button to disconnect power.
- In case the power cord is damaged, ask for replacement through where the product was purchased from or replace locally. Continued usage of damaged cord can cause fire, electric shock or leakage.
- Perform grounding appropriately. Inappropriate grounding can cause electric shock.
- Use fuses that meet specified rating. Fuses exceeding can cause an electric shock.
- Should a problem occur, turn off the power immediately and stop operating the machine. Unplug the power cord of the service outlet. Operating the machine without correcting the problem may cause a fire or injuries.
- Insert the power plug securely into the outlet. Poor contact may cause overheating, resulting in fire or burns.
- To ensure the warning labels attached on the machine are visible and legible, install the machine in a well-lit location, and keep the labels clean at all times. Make sure the labels are not hidden behind other game machines.


9. OVERALL CONSTRUCTION

9.1 Control Panel Part

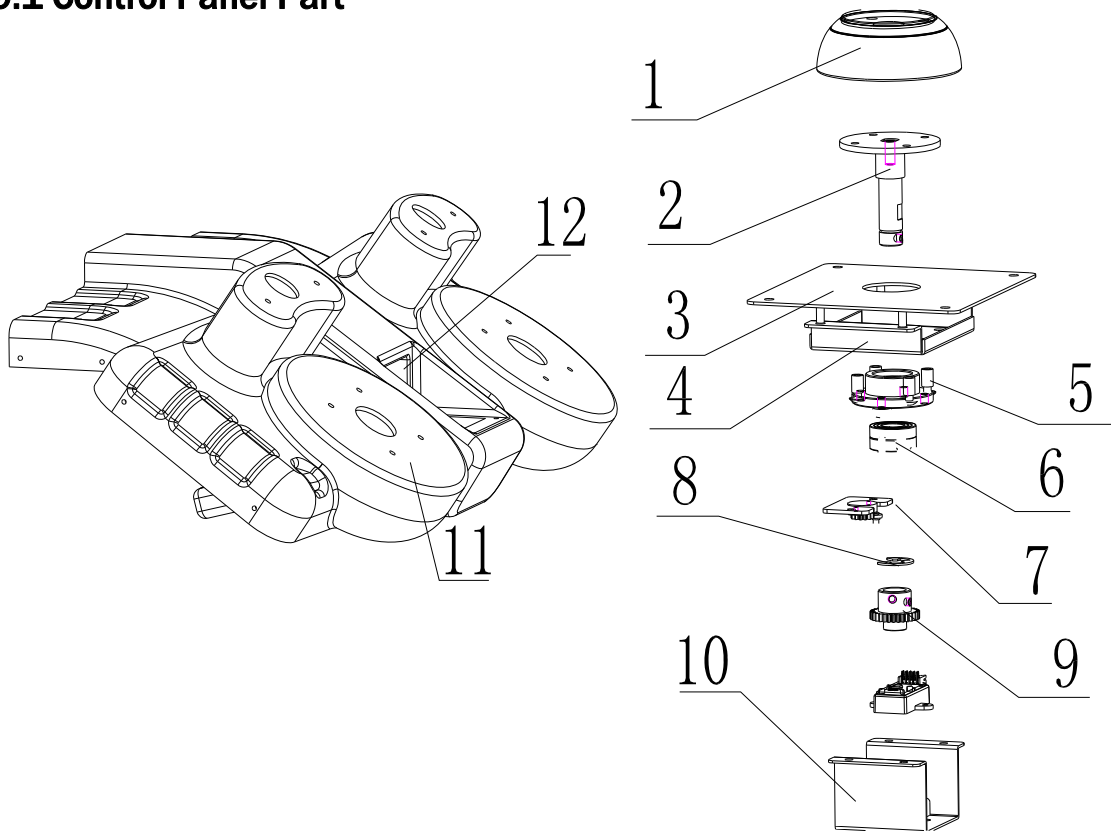


No.	Part No.	Code No.	Name	Material	Qty.
1	D122-703-000	20541403034	Knob decal	Clear plastic	1
2	D122-122-000	20241403023	Knob rotating shaft	White Zinc	1
3	D122-127-000	20241403028	Knob plate	Q235	1
4	D122-121-000	20241403022	Knob fixed bracket	Metal	1
5	D122-123-000	20241403024	Rotating shaft fixed bracket	45	1
6	D122-174-000	20106000318	Deep groove ball BD.	61901Z	1
7	D122-124-000	20241403025	Damper fixed plate	Metal	1
8	D122-177-000	20105000020	A type circlip for shaft	Q235	1
9	D122-126-000	20241403027	Rotating gear	45	1
10	D122-125-000	20241403026	Magnet sensor bracket	Metal	1
11	D122-618-000	20441403001	Control panel	FRP	1
12	D122-702-000	20541403033	Control panel decal	Clear plastic	1

9.2 Monitor Part

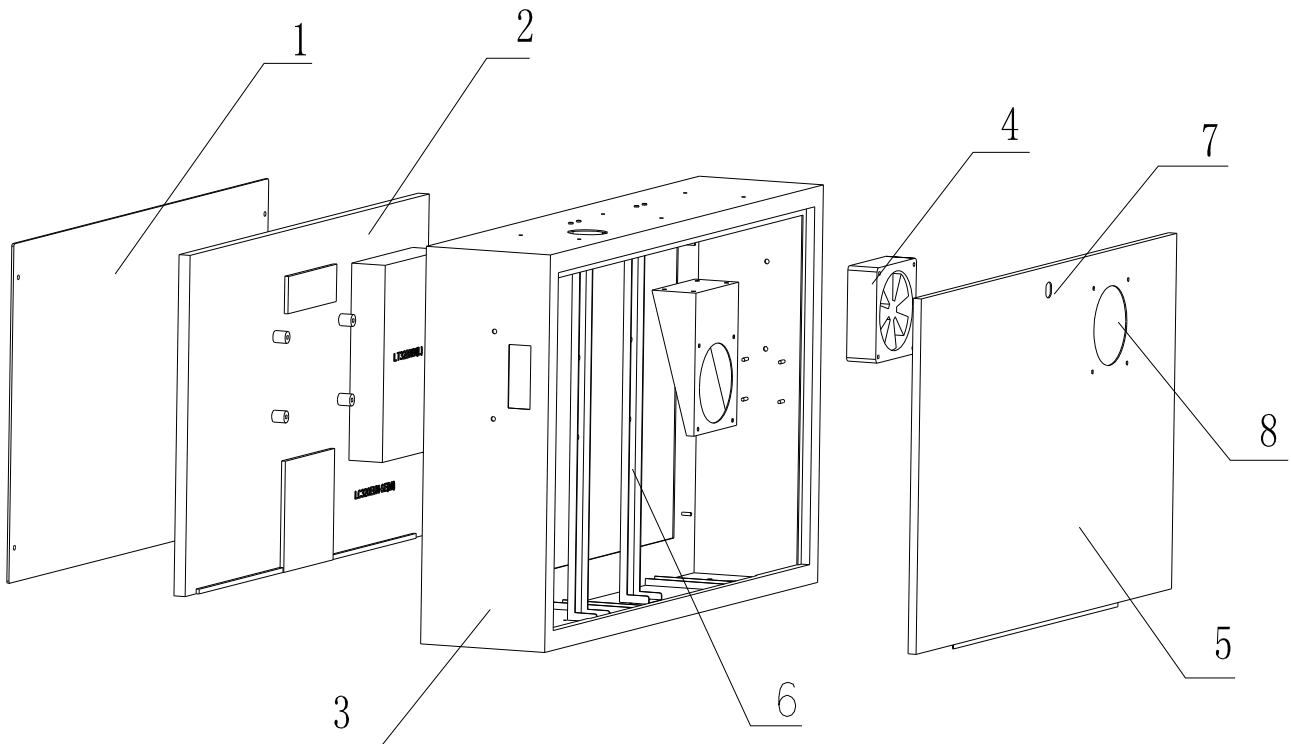


No.	Part No.	Code No.	Name	Material	Qty.
1	D122-609-000	20641403012	Monitor plastic	Clear plastic	1
2	D122-401-000	21201032004	Monitor	32"	1
3	D122-132-000	20241403032	Monitor frame	Q235	1
4	D122-428-000	22702000002	Fan	4"	1
5	D122-134-000	20241403034	Monitor rear door	Q235	1
6	D122-133-000	20241403033	Monitor mounted bracket	Q235	2
7	D122-434-000	25300171001	Lock	171	7
8	D122-417-000	22702000010	Fan net	4"	1

9.3 Speaker Part

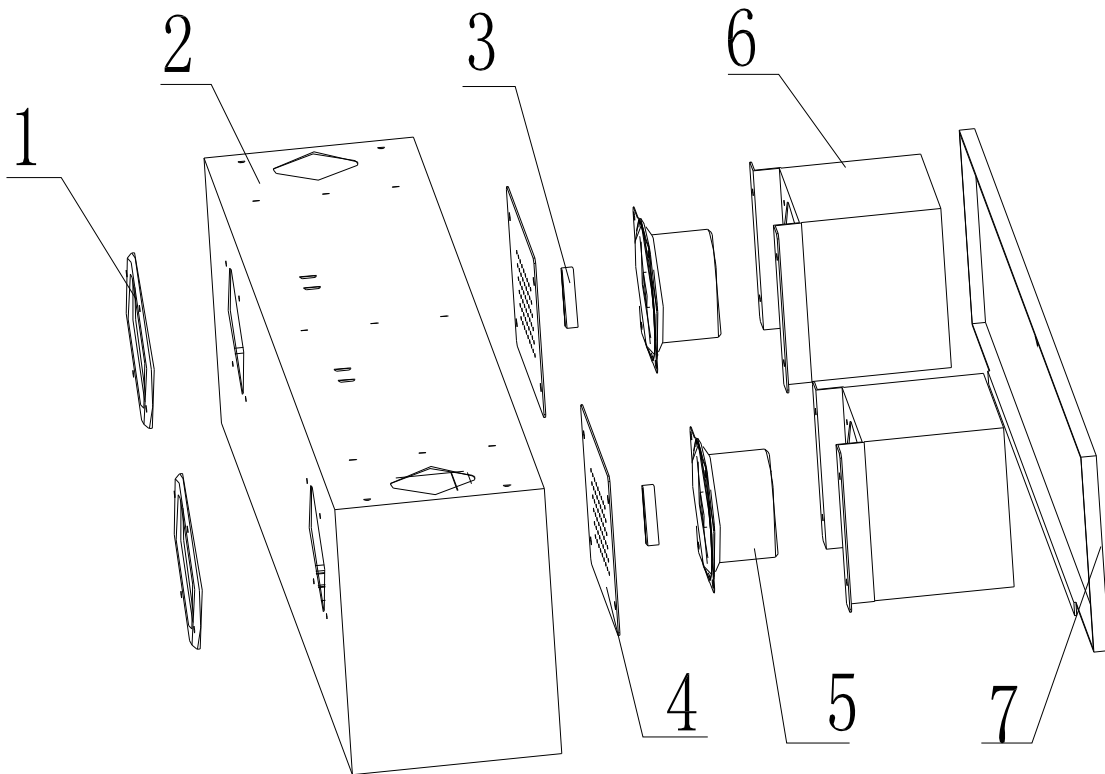


No.	Part No.	Code No.	Name	Material	Qty.
1	D122-521-000	20341403027	Loudspeaker box	MDF	2
2	D122-135-000	20241403035	Speaker box	Q235	1
3	D122-601-000	20641403003	Speaker light cover	White plastic	2
4	D122-611-000	20641403014	Loudspeaker net	White plastic	2
5	D122-404-000	22801000037	Speaker		2
6	D122-137-000	20241403037	Speaker bracket	Q235	2
7	D122-136-000	20241403036	Speaker box rear door	Q235	1

9.4 Small Drum Part

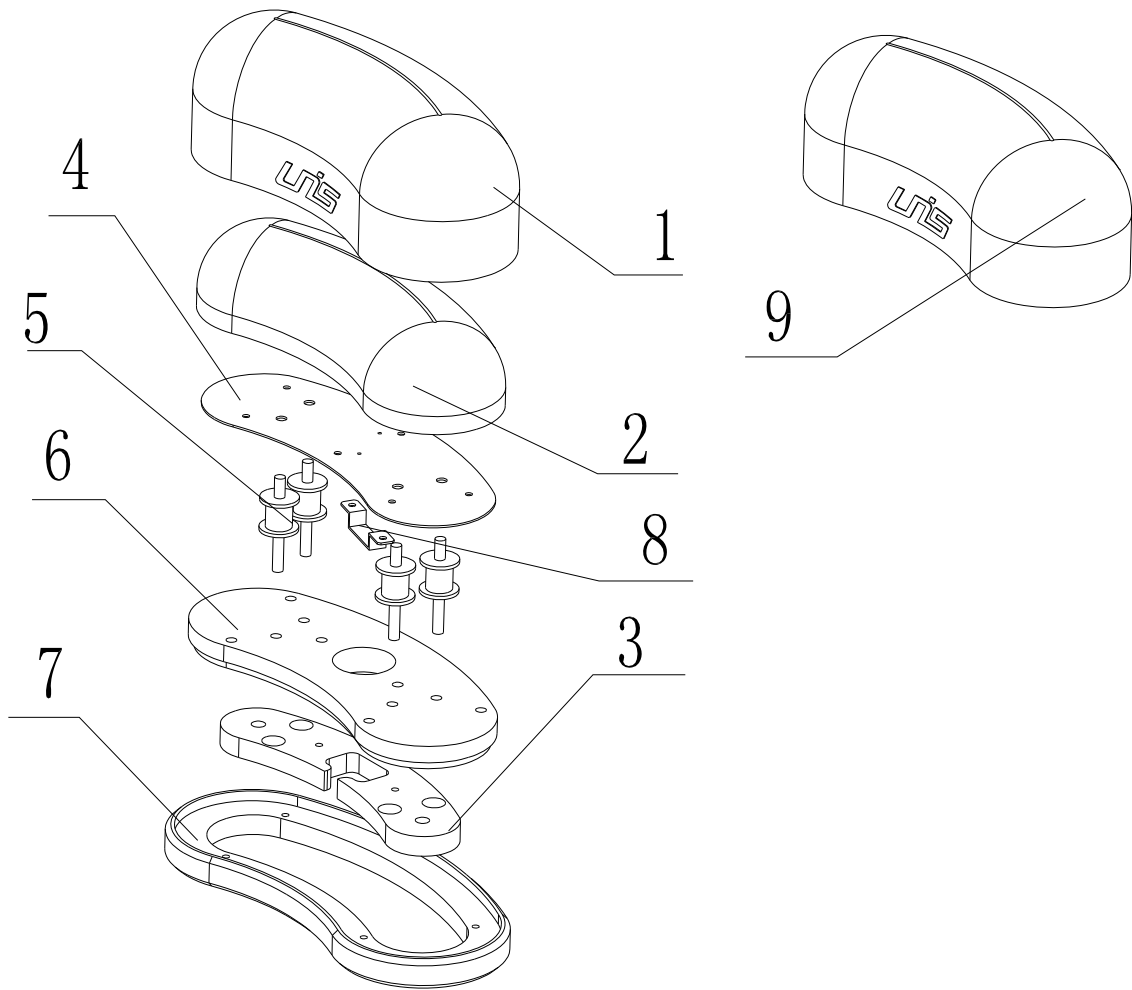


No.	Part No.	Code No.	Name	Material	Qty.
1	D122-606-000	20641403009	Red small drum skin	EPDM	1
2	D122-607-000	20641403010	Small drum skin base	ABS	2
3	D122-520-000	20341403026	Small drum plate A	Plywood	2
4	D122-131-000	20241403031	Small drum metal plate	Metal	2
5	D122-147-000	26000012000	Shake-proof screw A		8
6	D122-519-000	20341403025	Small drum wooden plate	Plywood	2
7	D122-608-000	20641403011	Small drum plastic	White plastic	2
8	D122-130-000	20241403030	Sensor fixed plate	Metal	1
9	D122-617-000	20641403015	Blue small drum skin	EPDM	1

9.5 Big Drum Part

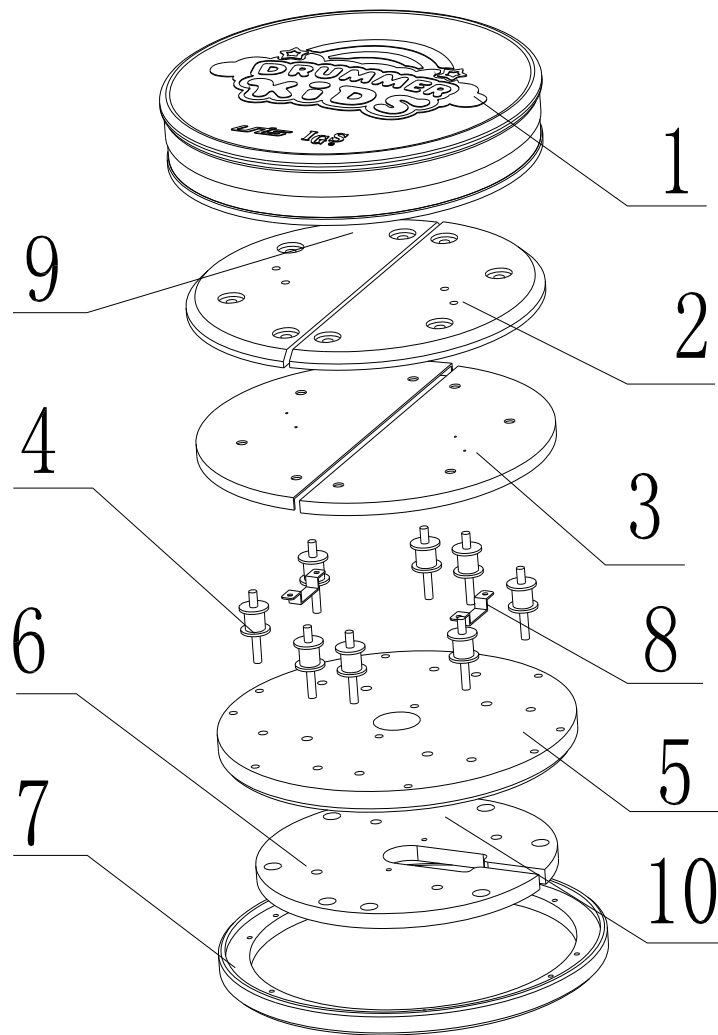

No.	Part No.	Code No.	Name	Material	Qty.
1	D122-128-000	20641403005	Big drum skin	EPDM	2
2	D122-516-000	20341403022	Big drum wooden plate	Plywood	4
3	D122-129-000	20241403029	Big drum metal plate	Metal	4
4	D122-147-000	26000012000	Shake-proof screw A		16
5	D122-517-000	20341403023	Big drum wooden plate A	Plywood	2
6	D122-518-000	20341403024	Big drum wooden plate B	Plywood	2
7	D122-604-000	20641403007	Big drum plastic	White plastic	2
8	D122-130-000	20241403030	Sensor fixed plate	Metal	2
9	D122-603-000	20641403006	Shake-proof foam	EVA	6
10	D122-605-000	20641403008	Big drum noise	Black foam	2


9.6 Big Drum Part

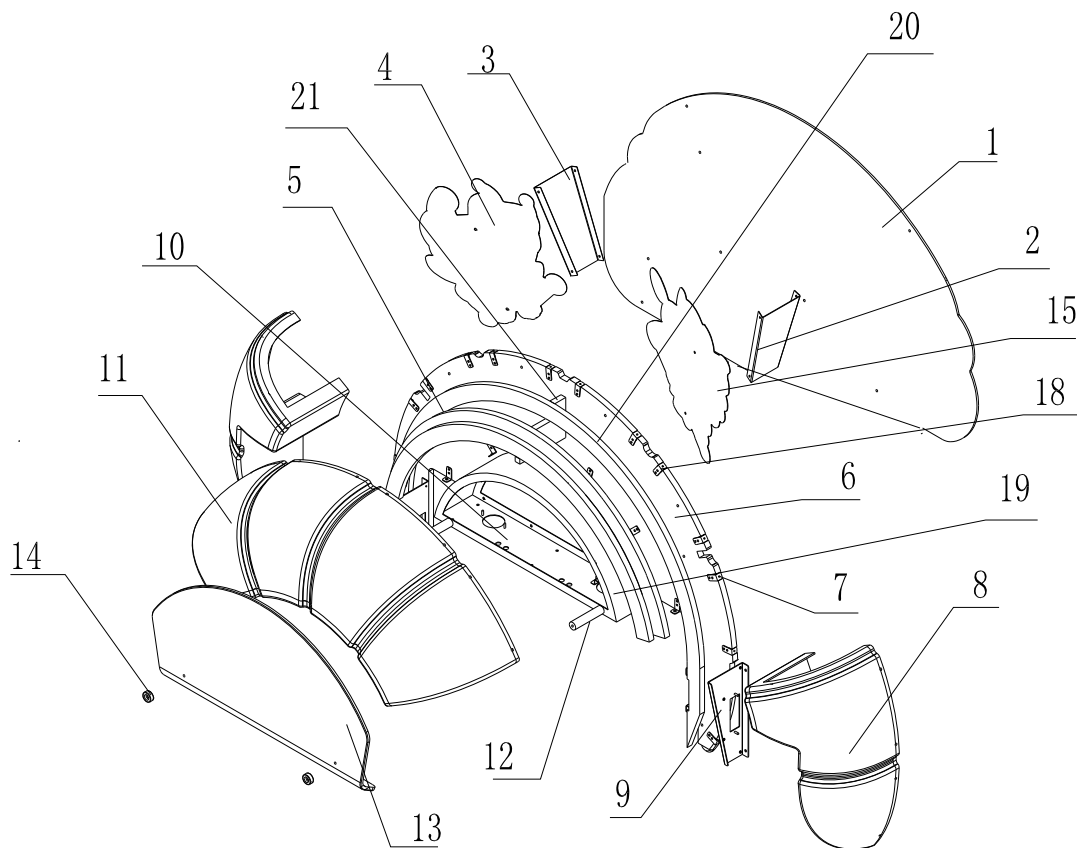

No.	Part No.	Code No.	Name	Material	Qty.
1	D122-704-000	20541403035	Marquee back sign	POP+PVC	1
2	D122-616-000	20641403002	Right character bracket	Clear PVC	1
3	D122-615-000	20641403001	Left character bracket	Clear PVC	1
4	D122-705-000	20541403037	Left character decal	Clear PVC	1
5	D122-524-000	20341403005	Marquee plate B	white wooden plate	1
6	D122-527-000	20341403001	Marquee bed plate	white wooden plate	1
7	D122-139-000	20241403005	Marquee fixed plate	Metal	22
8	D122-614-000	20241403004	Right angle marquee	White plastic	1
9	D122-143-000	20241403007	Right reinforced racket	Q235	1


No.	Part No.	Code No.	Name	Material	Qty.
10	D122-138-000	20241403008	Marquee bracket	Q235	1
11	D122-613-000	20241403002	Middle marquee	White plastic	1
12	D122-140-000	20241403009	Marquee fixed screw	Welding part	2
13	D122-714-000	20541403055	Marquee decal	Clear plastic	1
14	D122-141-000	20241403003	Marquee fixed pin	Stainless steel	2
15	D122-706-000	20541403038	Right character decal	Clear PVC	1
16	D122-142-000	20241403006	Left reinforced bracket	Q235	1
17	D122-612-000	20241403001	Left angle marquee	White plastic	1
18	D122-139-000	20241403005	Marquee fixed plate	Metal	22
19	D122-526-000	20341403003	Marquee plate D	white wooden plate	1
20	D122-523-000	20341403004	Marquee plate A	white wooden plate	1
21	D122-525-000	20341403006	Marquee plate C	white wooden plate	1

9.7 Cabinet Part

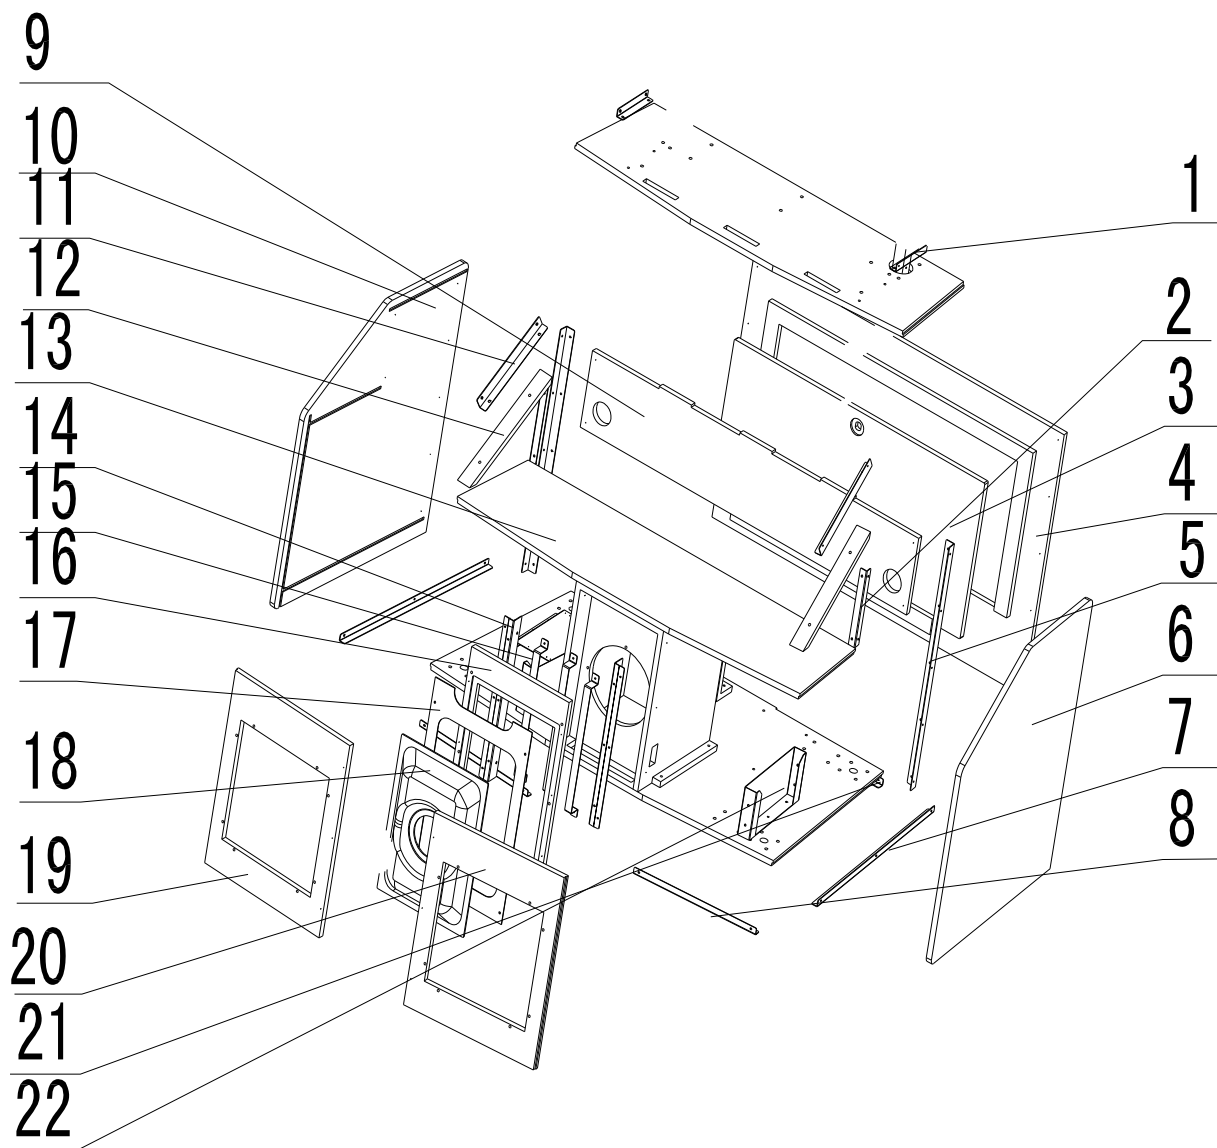


No.	Part No.	Code No.	Name	Material	Qty.
1	D122-109-000	20241403011	Control panel fixed plate B	Q235	2
2	D122-117-000	20241403018	Cabinet fixed plate B	Metal	2
3	D122-511-000	20341403017	Rear door	white wooden plate	1
4	D122-507-000	20341403013	Rear door frame	white wooden plate	1
5	D122-118-000	20241403019	Cabinet fixed plate C	Metal	2
6	D122-503-000	20341403009	Right side plate	white wooden plate	1
7	D122-111-000	20241403013	Cabinet protected plate A	Q235	2
8	D122-113-000	20241403015	Cabinet protected plate C	Q235	2
9	D122-510-000	20341403016	Cabinet middle plate	white wooden plate	1
10	D122-502-000	20341403008	Left side plate	white wooden plate	1
11	D122-110-000	20241403012	Control panel fixed plate A	Q235	2
12	D122-513-000	20341403019	Control panel supported plate	white wooden plate	1
13	D122-509-000	20341403015	Control panel bed plate	white wooden plate	1
14	D122-116-000	20241403017	Cabinet fixed plate A	Metal	2
15	D122-114-000	20241403016	Light bracket A	Metal	3
16	D122-506-000	20341403012	Front panel	white wooden plate	1
17	D122-108-000	20241403010	Bass metal plate	Q235	1
18	D122-601-000	20641403003	Speaker light cover	White plastic	1
19	D122-504-000	20341403010	Left side panel	white wooden plate	1
20	D122-505-000	20341403011	Right side panel	white wooden plate	1
21	D122-112-000	20241403014	Cabinet protected plate B	Q235	1
22	D122-144-000	26000007000	Ticket bin	Q235	2

9.8 Caster Part

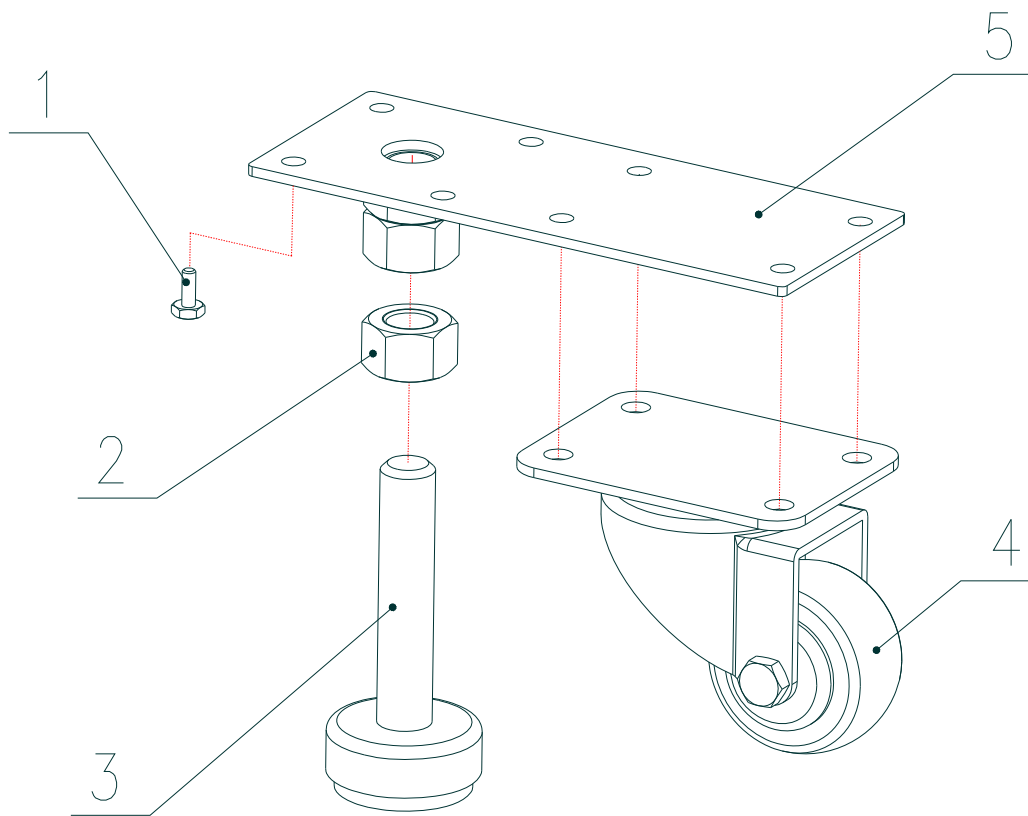


No.	Part No.	Code No.	Name	Material	Qty.
1	D122-182-000	20104000004	Cross recessed hexagon screw kit	M6×25	32
2	D122-181-000	20102040014	Hexagon nut	Q235	4
3	D122-145-000	26000008000	Leveller	Q235	4
4	D122-437-000	25501000056	Caster	3-2689-52	4
5	D122-146-000	26000010000	Caster bracket	Q235	4



9.9 Coin mech Part

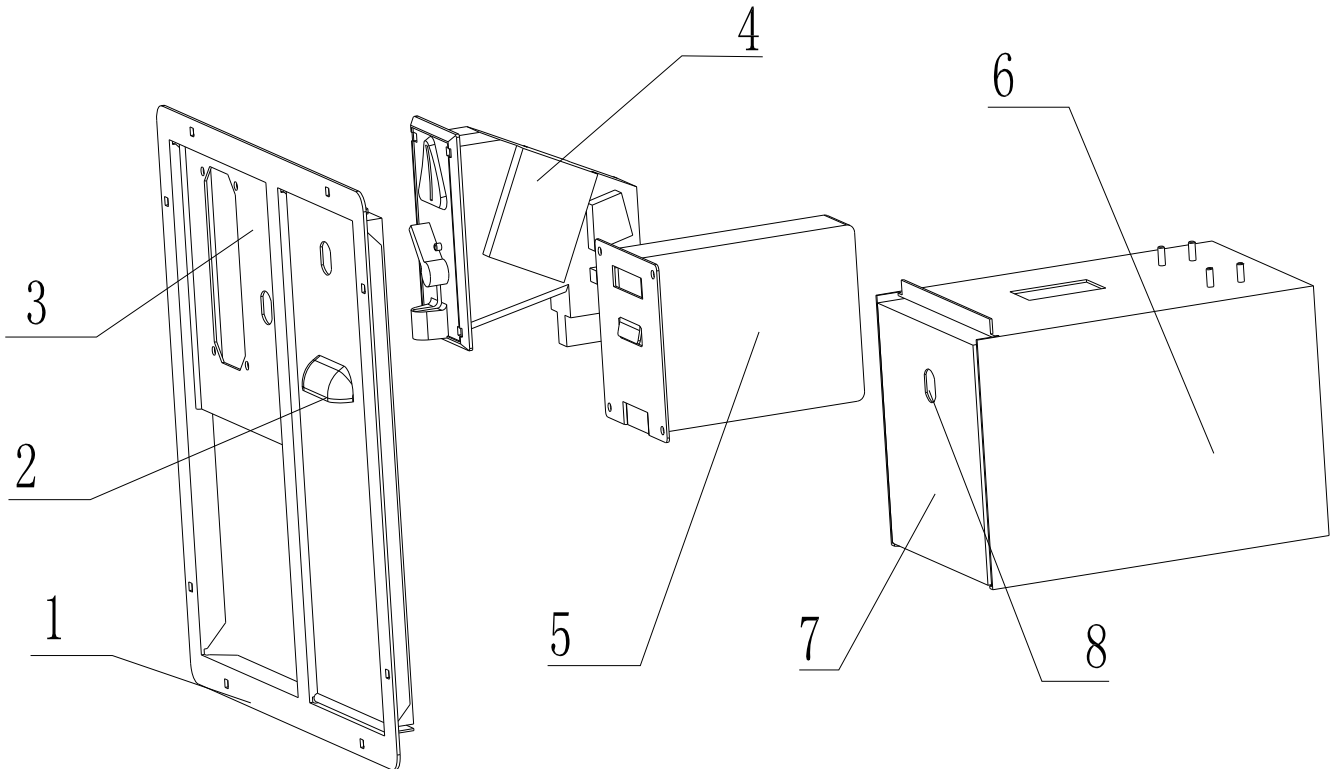




No.	Part No.	Code No.	Name	Material	Qty.
1	D122-101-000	20210911042	Door frame	Q235	1
2	D122-107-000	20210911048	Ticket door	Q235	1
3	D122-106-000	20210911047	Coin door	Q235	1
4	D122-406-000	22301000001	Coin mech		1
5	D122-405-000	23100000006	Ticket dispenser	CL-022Q-386	1
6	D122-104-000	20210911045	Coin outer box	Q235	1
7	D122-105-000	20210911046	Coin box	Q235	1
8	D122-435-000	25300172001	Lock	171B	2

9.10 Electrical Parts

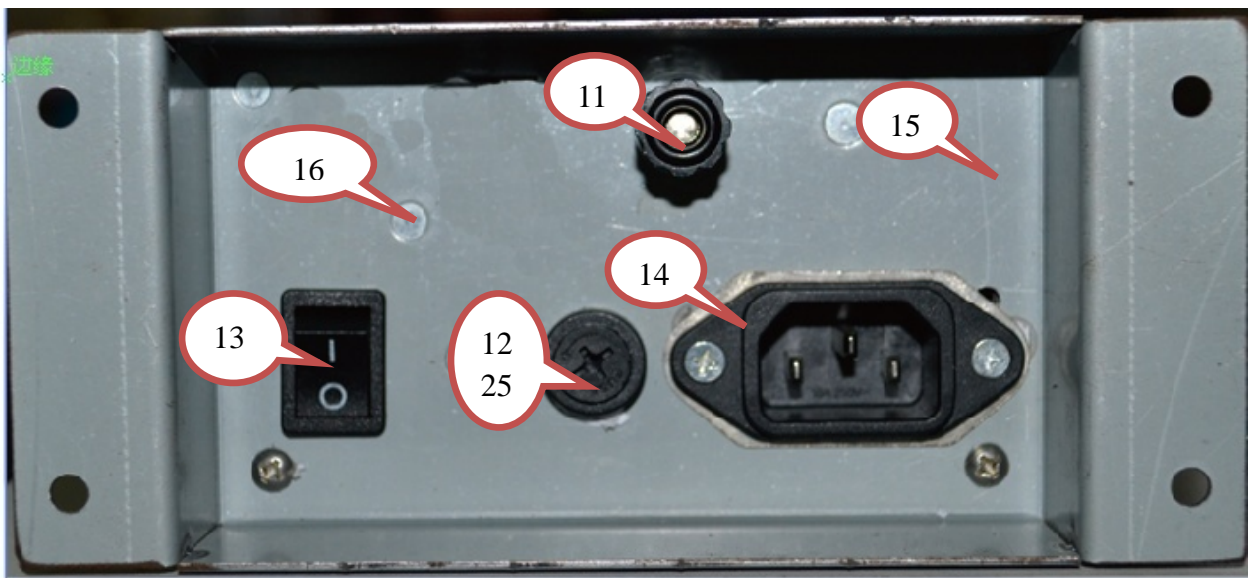

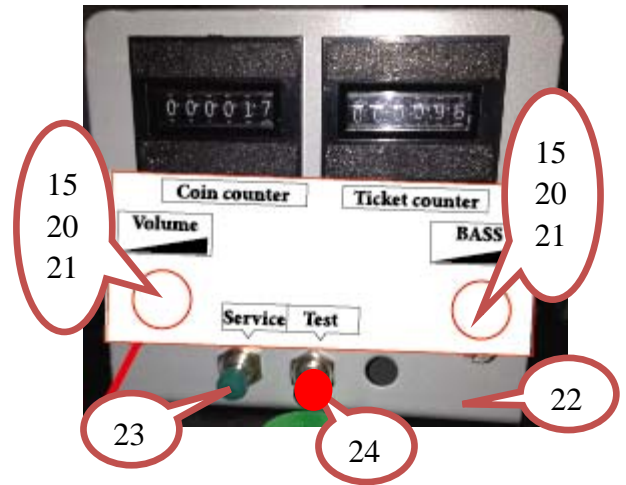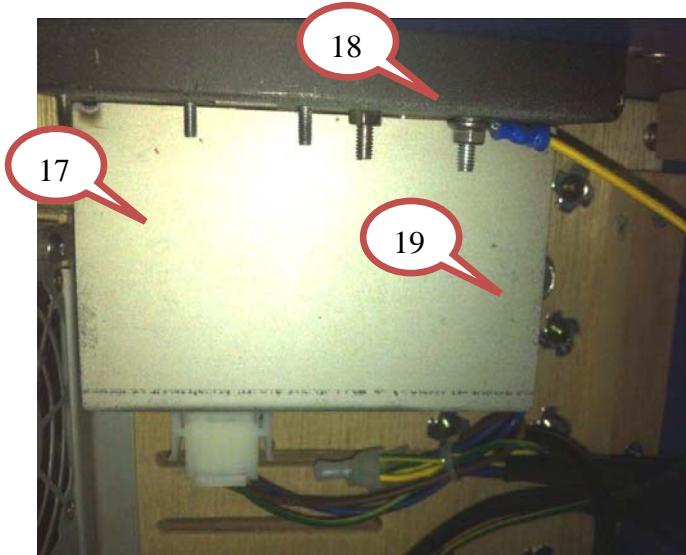

No.	Part No.	Code No.	Name	SPEC.	Qty.
1	D122-404-000	22801000037	Speaker	4Ω30W N	2
2	D122-401-000	21201032004	Monitor	32"	1
3	D122-410-000	22002013002	RGB flexible light belt	DC12V	9.5
4	D122-405-000	23100000006	Ticket dispenser	CL-022Q-386	1
5	D122-414-000	23000000006	Counter	C-012	1
6	D122-406-000	22301000001	Coin mech	Comparator	1
7	D122-411-000	22002019001	Front panel light belt	5050RGB	2.32
8	D122-403-000	22801000078	Bass speaker	8Ω8" 180W	1
9	D122-409-001	1113-50004100	Knob		1
10	D122-602-000	20641403004	Drum stick	AE	4
11	D122-419-000	21412000001	Terminal	10A/15A/250V	1
12	D122-422-000	21901000012	Fuse	Φ5×20mm T5A 250VAC	2
13	D122-418-000	22601000005	Rocker SW	T125/55	1
14	D122-420-000	23201000001	Filter	YB10A1 10A/250V	1
15	D122-426-000	21709000002	POT pcb	VR.PCB	2
16	D122-001-003	26000042003	Cable cover	Metal	1
17	D122-001-001	26000042001	Power outlet box	Metal	1
18	D122-001-000	26000042000	Power outlet	Assembly	1
19	D122-001-002	26000042002	Power outlet cover	Metal	1
20	D122-423-000	22403000001	POT knob	black	2
21	D122-427-000	22501000033	POT	RB50K	2
22	D122-115-000	20241403038	Counter bracket	Q235	1
23	D122-415-000	22402030001	Green button	DS-316	1
24	D122-416-000	22402050001	Red button	PB:11C02R	1
25	D122-421-000	21902000006	Fuse socket	110V/250V/10A	1

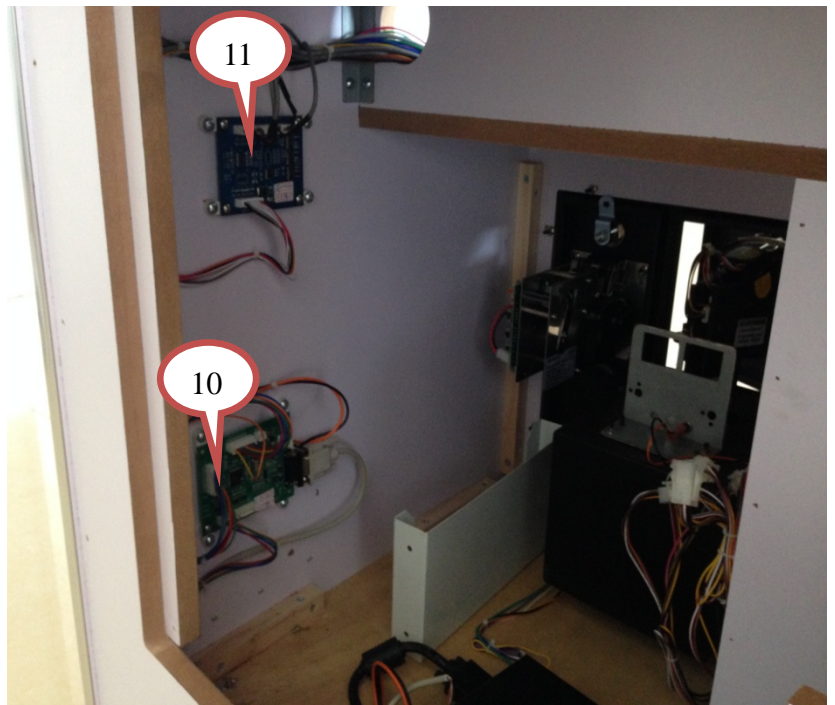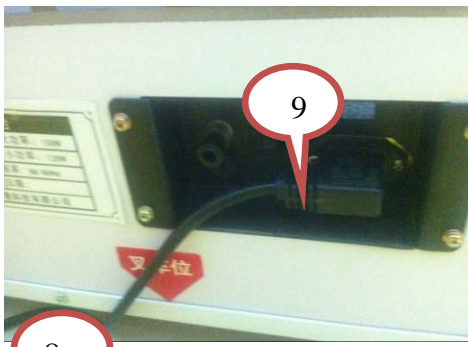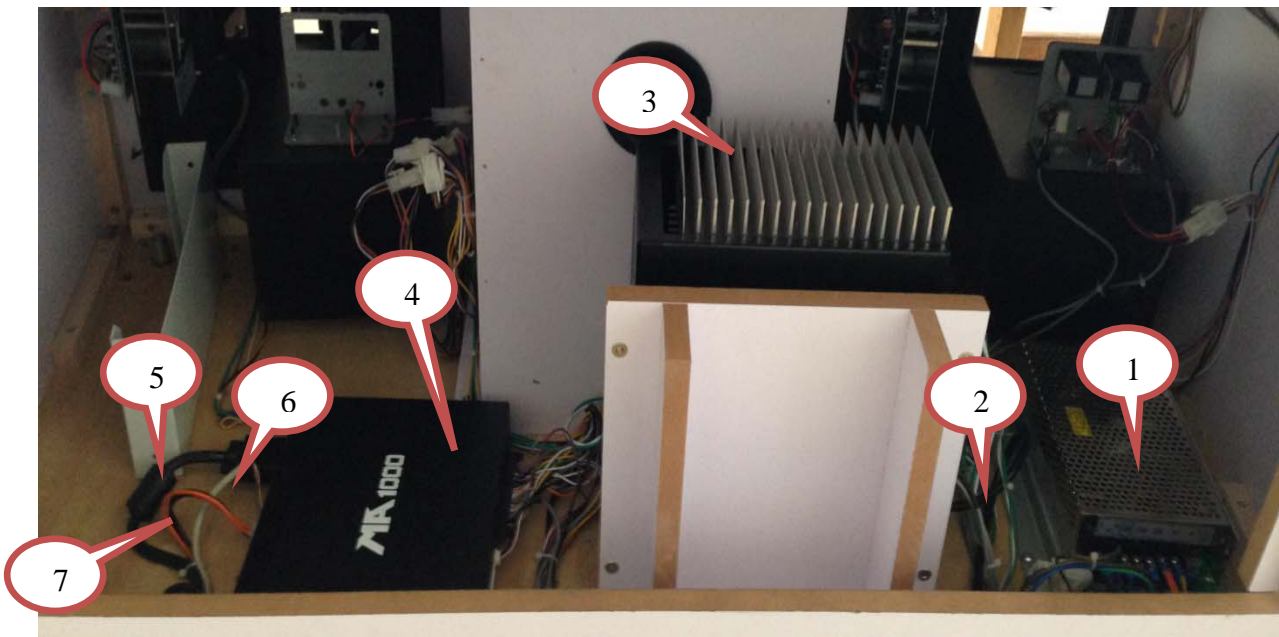


No.	Part No.	Code No.	Name	SPEC.	Qty.
1	D122-408-000	21602000029	Power supply	EPT-H150S12	1
2	D122-425-000	23301050002	Power cord	3×0.75mm 0.5m	2
3	D122-402-000	22803000011	AMP	Gc-360W	1
4	D122-409-002	5641-00000014	Main board	Kit	1
5	D122-424-000	23307000009	Video cable	DB15M-DB15M(2.5m)	1
6	D122-412-000	23303000002	Serial cable	DB9F-DB9F(1.5)	0.5
7	D122-413-000	23305000003	Audio cable	3.5 head 1.8M	1
8	D122-429-000	23309000158	Cable set		1
9	D122-432-000	23301000001	Power cord	10A/250V-1.8M	1
10	D122-409-003	5651-00000143	Sensor board		1
11	D122-409-004	5651-00000117	IO controlled board		1

9.11 Decal Parts



No.	Part No.	Code No.	Name	SPEC.	Qty.
1	D122-714-000	20541403055	Marquee decal	Clear plastic	1
2	D122-705-000	20541403037	Left character decal	Clear PVC	1
3	D122-704-000	20541403035	Marquee back sign	POP+PVC	1
4	D122-706-000	20541403038	Right character decal	Clear PVC	1
5	D122-710-000	20541403042	Monitor frame decal	White PVC 100u sticker	1
6	D122-708-000	20541403040	Pink speaker ring decal	Clear plastic	1
7	D122-713-000	20541403046	Control panel right side decal	White PVC 100u sticker	1
8	D122-719-000	20541403060	Right drum stick decal	White PVC 100u sticker	2
9	D122-702-000	20541403033	Control panel decal	Clear plastic	1
10	D122-717-000	20541403058	Right side decal	White PVC 100u sticker	1
11	D122-701-000	20541403032	Speaker light decal	Clear plastic	1
12	D122-715-000	20541403056	Game play decal	0.3PVC sticker	1
13	D122-716-000	20541403057	Left side decal	White PVC 100u sticker	1
14	D122-709-000	20541403041	Knob bottom decal	White PVC 100u sticker	1
15	D122-725-000	25600000034	Ticket sticker	White PVC 100u sticker	2
16	D122-718-000	20541403059	Left drum stick decal	White PVC 100u sticker	2
17	D122-712-000	20541403045	Control panel left side decal	White PVC 100u sticker	1
18	D122-703-000	20541403034	Knob decal	Clear plastic	1
19	D122-707-000	20541403039	Blue speaker ring decal	Clear plastic	1
20	D122-711-000	20541403043	Speaker decal	White PVC 100u sticker	1

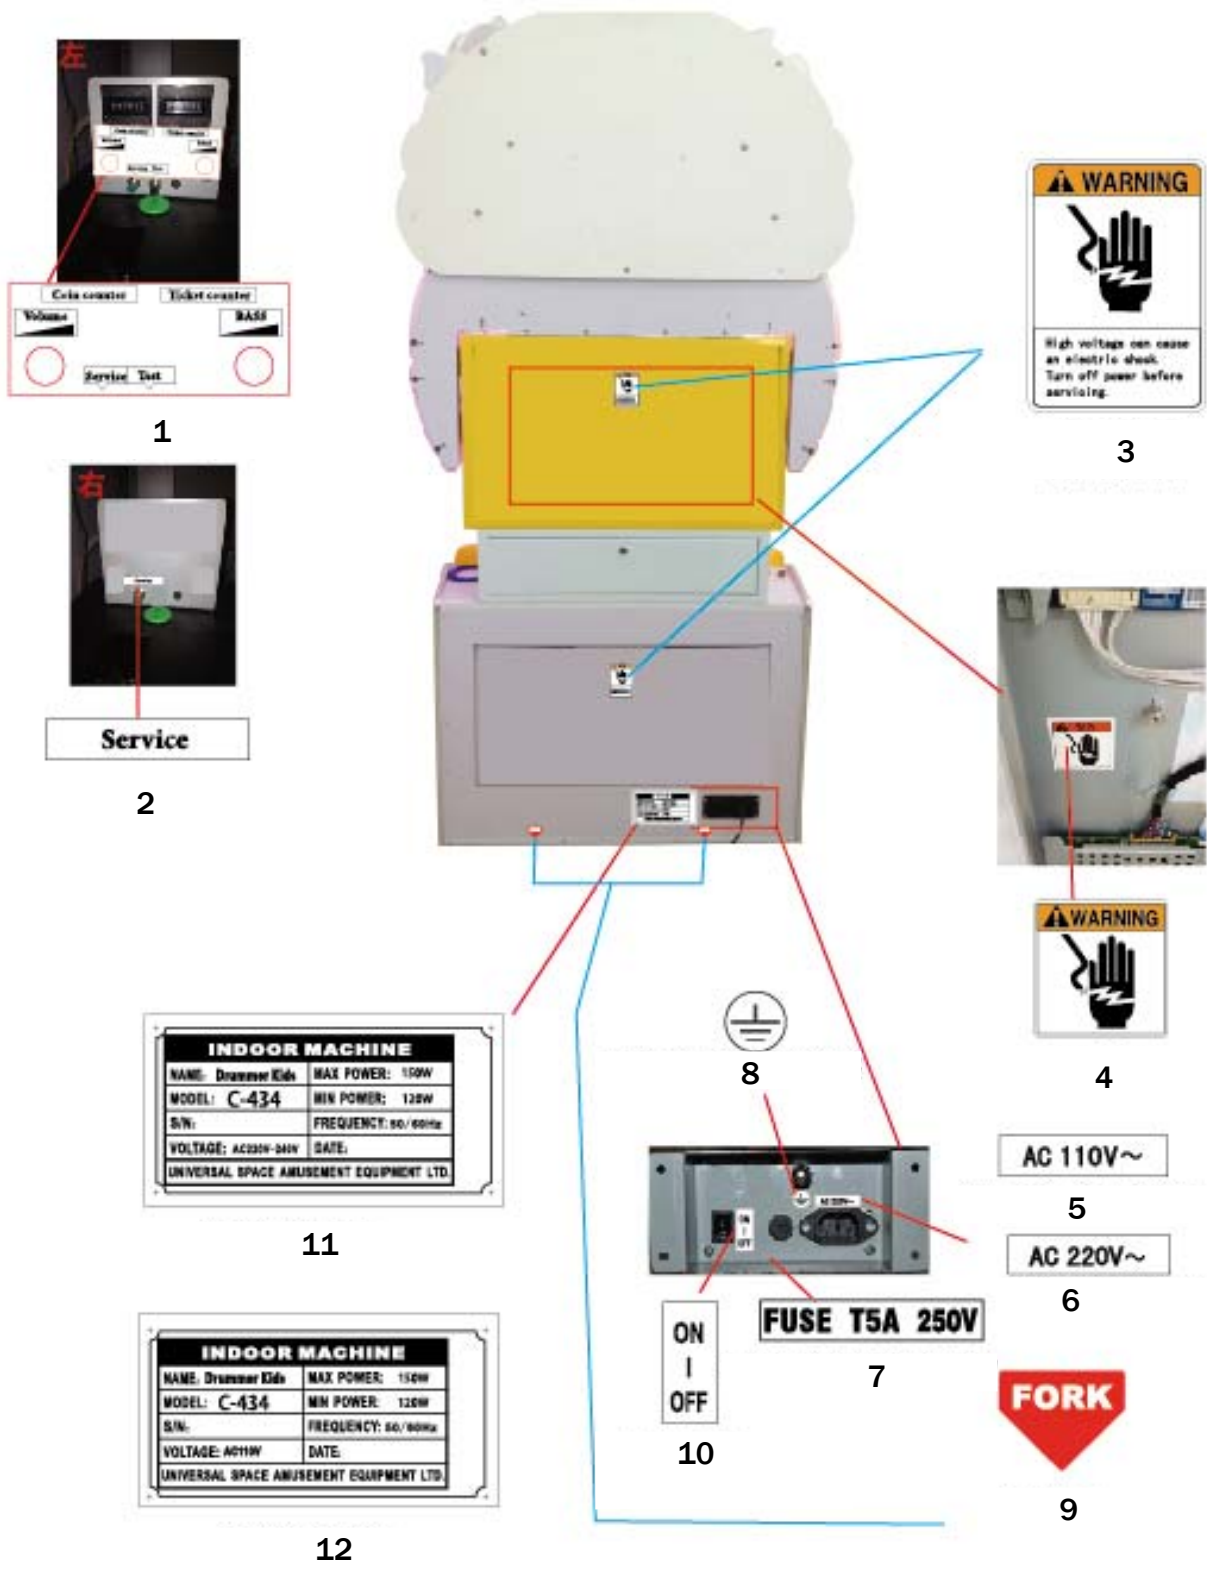

INDOOR MACHINE	
NAME: Drummer Kids	MAX POWER: 150W
MODEL: C-434	MIN POWER: 120W
S/N:	FREQUENCY: 60/60Hz
VOLTAGE: AC220V-240V	SAFE:
UNIVERSAL SPACE AMUSEMENT EQUIPMENT LTD.	



INDOOR MACHINE	
NAME: Drummer Kids	MAX POWER: 150W
MODEL: C-434	MIN POWER: 120W
S/N:	FREQUENCY: 60/60Hz
VOLTAGE: AC110V	DATE:
UNIVERSAL SPACE AMUSEMENT EQUIPMENT LTD.	

1	D122-720-000	20541403061	Counter label	White PVC 100u sticker	1
2	D122-723-000	25600000009	Service label	White PVC 100u sticker	1
3	D122-728-000	25600000037	Warning label -L	White PVC 100u sticker	2
4	D122-727-000	25600000036	Warning label -S	White PVC 100u sticker	1
5	D122-729-000	25600000071	AC 110V label	White PVC 100u sticker	1
6	D122-731-000	25600000072	AC 220V label	White PVC 100u sticker	1
7	D122-730-000	25600000074	Fuse label	White PVC 100u sticker	1
8	D122-732-000	25600000091	GND label	White PVC 100u sticker	1
9	D122-726-000	25600000035	Fork label	White PVC 100u sticker	2
10	D122-724-000	25600000017	Power SW label	White PVC 100u sticker	1
11	D122-721-000	20541403062	Uncertified 220V nameplate	1MMPVC	1
12	D122-722-000	20541403063	Uncertified 110V nameplate	1MMPVC	1



Have Questions? Contact us!

www.universal-space.com

 International Support Center	 USA Support Center
Tel: +1-905-477-2823 Fax: +1-905-477-2660 Email: service@universal-space.com (Contact: Clement Yau)	Tel: 972-241-4263 Fax: 214-919-4918 Email: tsnelling@unisusasupportcenter.com (Contact: Tim Snelling)