

OPERATORS MANUAL

LET'S BOUNCE



PLEASE NOTE

Read this manual before operating the machine.

Visit www.laigames.com for support.



Correspondence regarding this machine should be addressed to your closest LAI Games office, or LAI Games Distributor. For contact details, refer to the back page of this manual.

© LAI Games

Copyright Notice:

Authorization is hereby provided to you to copy this manual in its entirety provided such copies are used for non-commercial purposes and solely for use with LAI Games products. This authorization is specifically conditioned to include all legends, copyright, proprietary and other notices which appear herein are unaltered on any and all copies you make.

Table of Contents

SAFETY PRECAUTIONS.....	6
MACHINE INSTALLATION AND INSPECTION	7
INTRODUCTION.....	8
DESCRIPTION.....	8
PACKAGING	8
CONTENTS.....	8
SPECIFICATIONS	8
DIMENSIONS	8
ELECTRIC SUPPLY.....	8
ASSEMBLY	8
CONTENTS DETAILED	10
GAMEPLAY AND MODES.....	11
OBJECTIVE	11
HOW TO PLAY	11
ATTRACT MODE	12
PLAY MODE	12
OPERATION	13
GAME SETTINGS.....	13
AUDITS	16
INPUT AND OUTPUT TESTS	17
OUTPUT TESTS	17
INPUT TESTS.....	17
RUN TESTS.....	17
GAME HISTORY	18
ERRORS.....	18
SECTION A: SERVICE INSTRUCTIONS.....	20
LOCATING AND ACCESSING PARTS	20
CABINET FRONT	20
BACKBOARD	21
PLAYER PANEL.....	22
CABINET INNER	22
CABINET REAR.....	23

CABINET SIDE	24
OPERATOR PANEL / SERVICE CONTROLS	24
PARTS DESCRIPTION	25
HEADER DISPLAY	25
BACKBOARD	25
SPEAKERS	25
PLAYFIELD.....	25
COUNTERS.....	26
BUTTONS.....	26
VOLUME KNOB.....	26
COIN MECHANISM / BILL ACCEPTOR / CARD SYSTEM	26
TICKET MECHS.....	26
PLAYFIELD FUSES – FB214.....	26
GAME BOARD – FB216.....	27
SOUND BOARD – FB106.....	27
BALL DISPENSER.....	27
POWER INLET/MAINS SWITCH.....	27
POWER SUPPLY	27
LAMPS	27
MAINTENANCE.....	28
EXTERIOR.....	28
INTERIOR.....	28
SECTION B: TECHNICAL DETAILS	29
POWER SUPPLY	29
COIN OPTIONS REFERENCE GUIDE.....	30
UNIVERSAL CARD LINK CONNECTION	30
TICKET MECHANISMS.....	31
WIRING DIAGRAMS.....	32
MECHANICAL ILLUSTRATIONS	52
MAIN ASSEMBLY	52
FRONT PANEL.....	53
PANEL DOOR AND BASE FRONT PANEL	54
COIN DOOR AND TICKET DOOR	55
COIN PLATE WITH DBA AND CASH BOX.....	56

OPERATOR PANEL AND POWER SUPPLY.....	57
PLAYER PANEL.....	58
RIGHT AND LEFT PLAYER PANEL STOPPER.....	59
BALL GATE AND DB BOX	60
BALL GATE MOTOR AND DISPLAY SIGN	61
BALL LIFTER AND BALL HOPPER CHUTE.....	62
DISPLAY PANEL AND BASE DISPLAY PANEL.....	63
BASE SCORE PANEL	64
BOARD DISPLAY ROUND 1 AND BOARD DISPLAY ROUND 2	65
RIGHT AND LEFT SIDE WALLS.....	66
MAIN PLAYFIELD, BEAM FOUR TILES AND BEAM FIVE TILES.....	67

SAFETY PRECAUTIONS

The following safety precautions and advisories used throughout this manual are defined as follows.

WARNING: Disregarding this text could result in **serious injury**.

CAUTION: Disregarding this text could result in damage to the machine.

NOTE: An advisory text to help understand.

PLEASE READ THE FOLLOWING

WARNING: **Always** turn **OFF** Mains AC power and unplug the game before opening or replacing any parts.

Always grasp the plug, not the line cord, when unplugging the game from an electrical outlet.

Always connect the Game Cabinet to a grounded electrical outlet with a securely connected ground line.

Do Not install the Game Cabinet outdoors or in areas of high humidity, direct water contact, dust, high heat or extreme cold.

Do Not install the Game Cabinet in areas that would present an obstacle in case of an emergency, i.e. near fire equipment or emergency exits.

CAUTION: **Always** use a Digital Multimeter, logic tester or oscilloscope for testing integrated circuit (IC) logic PC boards. The use of a continuity tester is not permitted.

Do Not connect or disconnect any of the integrated circuit (IC) logic PC boards while the power is **ON**.

Do Not use any fuse that does not meet the specified rating.

Do Not subject the game cabinet to extreme temperature variations. Reliability of electrical components deteriorates rapidly over 60 °C.

MACHINE INSTALLATION AND INSPECTION

When installing and inspecting **Let's Bounce**, be very careful of the following points and pay attention to ensure that the players can enjoy the game safely.

- Be sure to turn the power **OFF** before working on the machine.

WARNING: Always turn **OFF** mains power before removing safety covers and refit all safety covers when work is completed.

- Make sure the power cord is not exposed on the surface (floor, ground, etc.) where people walk.
- Check that the rubber glide feet levellers are set correctly on the floor so that the game cabinet is level and stable.
- Always make complete connections for the integrated circuit (IC) logic PC Boards and other connectors. Insufficient insertion can damage the electrical components.
- Only qualified personnel should inspect or test the integrated circuit (IC) logic PC Boards.
- If any integrated circuit (IC) logic PC Boards should need servicing, please contact the nearest LAI Games Distributor (refer to the back page of this manual).

INTRODUCTION

Congratulations on your purchase of **Let's Bounce** by LAI Games. We hope you take the time to read this manual and learn about the many features and user-friendly adjustments that can be made to fine-tune the game for maximum earning potential.

DESCRIPTION

Let's Bounce is an addictive and rewarding single or multiplayer game that is easy to play but hard to master. Players bounce ping pong balls across a field of illuminated tiles, aiming to hit each tile at least once and clear the playfield, before the time runs out.

PACKAGING

CONTENTS

- Let's Bounce unit
- Operator Manual
- 2 x coin door keys
- IEC Power Cord
- Parts & Accessories

SPECIFICATIONS

DIMENSIONS

- Weight: 431kg (950.19lb) (excluding packaging)
- Weight: 501kg (1104.52lb) (including packaging)
- Height: 2245mm (88.4") (excluding header)
- Height: 2848.7mm (122.1") (including header)
- Width: 1222mm (48.1")
- Length: 3130mm (123.2")
- Power: Maximum 600W

ELECTRIC SUPPLY

The game can operate on a universal mains input voltage between 85-266VAC 47/63Hz single phase.

The supply must be a three-wire grounded supply.



An adjustment screw is available for fine-tuning the output voltage.

LOCATION REQUIREMENTS

- Ambient temperature: 5C - 40C
- Ambient humidity: Low
- Ambient U.V. radiation: Very low
- Vibrations level: Low

ASSEMBLY

Coming mid-January 2017

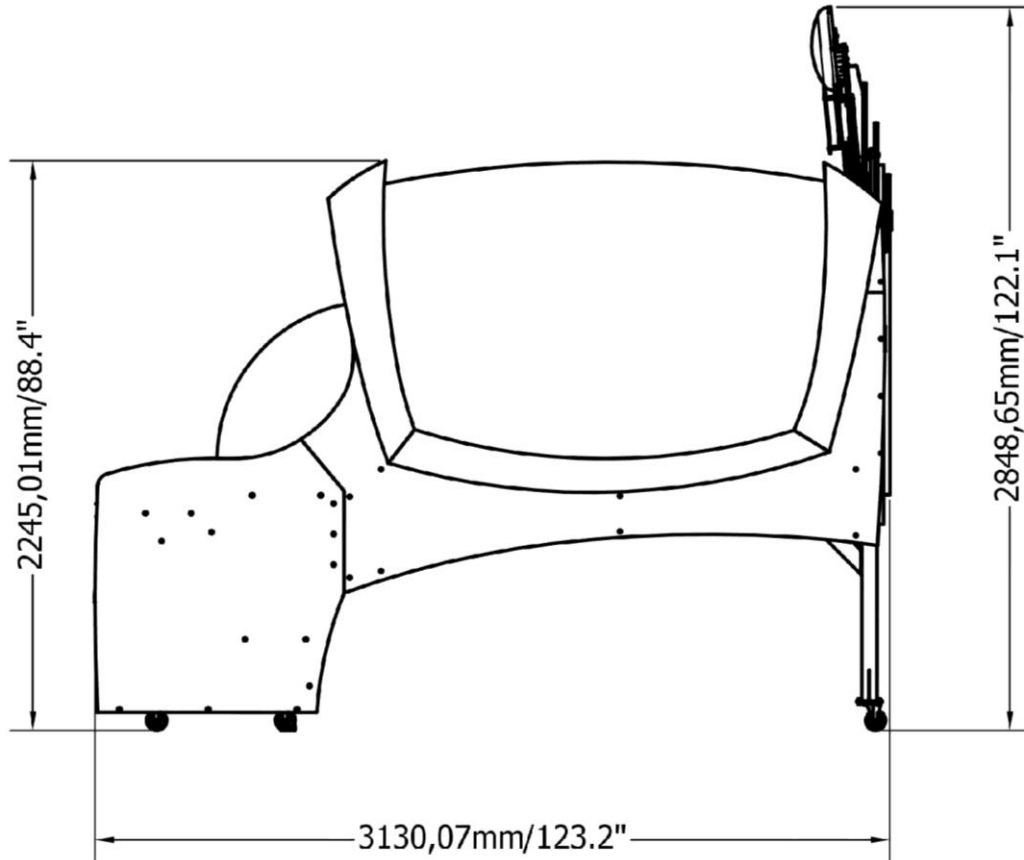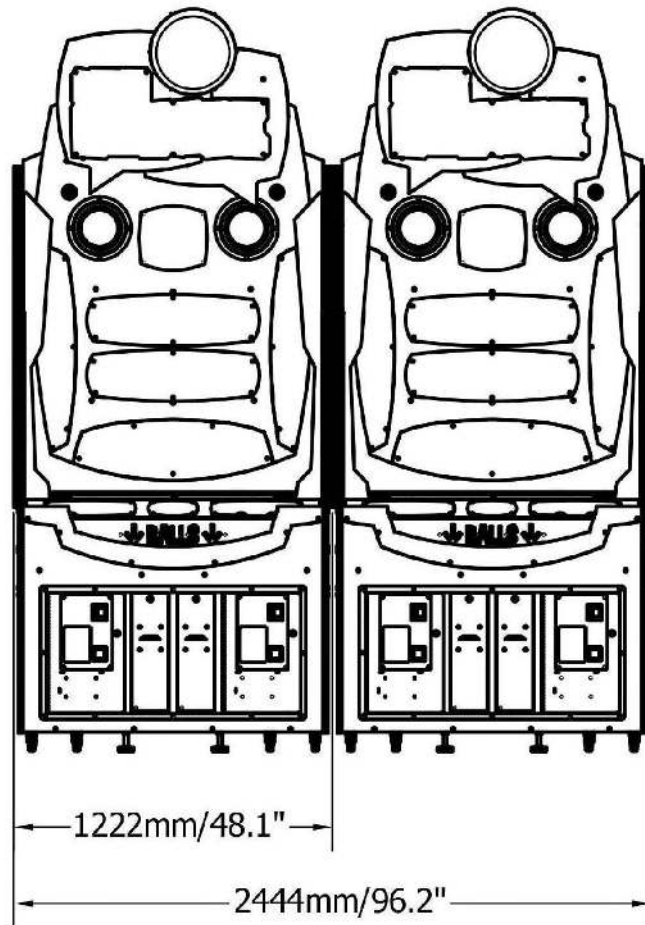


CONTENTS DETAILED


Stand



Main Cabinet

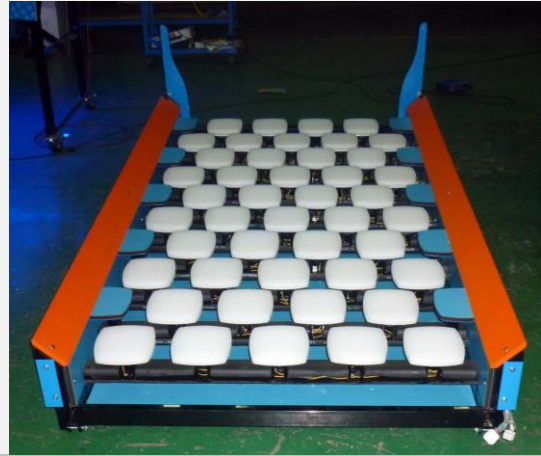

Side Cabinet x2

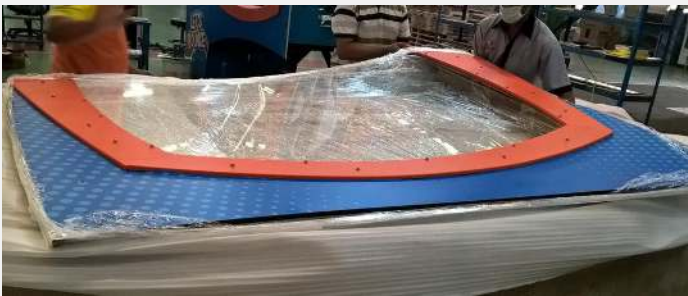

Front Cabinet



Backboard



GAMEPLAY AND MODES

OBJECTIVE

At the start of the game, the **Let's Bounce** playfield is made up of all orange tiles. Each tile awards points and turns blue after being hit. Orange tiles award more points when hit than blue. The player is given a set number of ping pong balls and must clear all the orange tiles from the playfield in the allocated time frame.

If there are two players, they alternate rounds.

See setting 12, Game Mode, for more information on the different game modes available.

HOW TO PLAY

Bar Mode

- Pay to play
- Ping pong balls are vended
- Round one begins
- Bounce ping pong balls off the bounce pad
- Aim to hit all orange tiles
- Round one time runs out
- OR
- All orange tiles are cleared and a mini bonus state is entered
- Round two begins
- Aim to hit all orange tiles
- Round two time runs out
- OR
- All orange tiles are cleared and a mini bonus state is entered
- Game ends

Arcade Mode

- Pay to play
- Ping pong balls are vended
- Round one begins
- Bounce ping pong balls off the bounce pad
- Aim to hit all orange tiles
- Round one time runs out
- Bonus round begins
- Aim to hit as many rainbow tiles as possible
- Bonus round time runs out
- Game ends

ATTRACT MODE

Attract mode provides a visual and audio display while the game is not being played.

PLAY MODE

Let's Bounce has two play modes. The standard *Coin Play* mode, where a coin or coins are inserted, or *Free Play* mode, where no coins are necessary.

COIN PLAY

Coin Play mode is entered from *Attract mode*, by inserting coins in any of the two coin slots on the front of the machine cabinet, then following the instructions in the "How to Play" section.

FREE PLAY

Free play can be set in one of three ways:

- Entering the operator menu by pressing the red TEST button, then entering the game settings. From here, enter free play settings and turn free play mode on.
- For a single free game, just press the green SERVICE button once.
- Push and hold the green SERVICE button for 5 seconds. This is a temporary free mode, and the game will return to normal when reset.

OPERATION

GAME SETTINGS

1. **Coin 1 Coins per Credit** *Default 1, Adjustable 1 – 20*
Sets the number of coins that need to be inserted in exchange for each game credit.
2. **Coin 1 Games per Credit** *Default 1, Adjustable 1 – 20*
Sets the number of games granted for each credit.
3. **Coin 1 Multi Bonus Credits** *Default Off, Adjustable On / Off*
Turn on the first stage of bonus credits for coin mech 1. Turning this setting on will activate settings 3-1 to 3-6.
 - 3.1. **Coin 1, Stage 1, Number of Coins** *Default Off, Adjustable Off / 1 – 99*
This sets the number of coins that need to be inserted into coin mechanism 1 to reach the bonus credit stage 1.
This setting is only active if setting 3 is ON.
 - 3.2. **Coin 1, Stage 1, Number of Bonus Credits** *Default Off, Adjustable Off / 1 – 99*
This sets the number of bonus credits that are given when credit stage 1 is reached.
This is the number of bonus credits given, on top of what has been paid for.
This setting is only active if setting 3 is ON.
 - 3.3. **Coin 1, Stage 2, Number of Coins** *Default Off, Adjustable Off / 1 – 99*
This sets the number of coins that need to be inserted into coin mechanism 1 to reach the bonus credit stage 2.
This setting is only active if 3-1 and 3-2 are active.
 - 3.4. **Coin 1, Stage 2, Number of Bonus Credits** *Default Off, Adjustable Off / 1 – 99*
This sets the number of bonus credits that are given when credit stage 2 is reached.
This is the number of bonus credits given, on top of what has been paid for.
This setting is only active if 3-1 and 3-2 are active.
 - 3.5. **Coin 1, Stage 3, Number of Coins** *Default Off, Adjustable Off / 1 – 99*
This sets the number of coins that need to be inserted into coin mechanism 1 to reach the bonus credit stage 3.
This setting is only active if 3-3 and 3-4 are active.
 - 3.6. **Coin 1, Stage 3, Number of Bonus Credits** *Default Off, Adjustable Off / 1 – 99*
This sets the number of bonus credits that are given when credit stage 3 is reached.
This is the number of bonus credits given, on top of what has been paid for.
This setting is only active if 3-3 and 3-4 are active.
4. **Coin 2 Coins per Credit** *Default 1, Adjustable 1 – 20*
Sets the number of coins in coin mech 2 input that need to be inserted in exchange for each game credit.
5. **Coin 2 Games per Credit** *Default 1, Adjustable 1 – 20*
Sets the number of games granted for each credit from coin mech 2 input.

6. **Coin 2 Multi Bonus Credits** *Default Off, Adjustable On / Off*
Turn on the first stage of bonus credits for coin mech 2. Turning this setting on, will activate settings 6-1 to 6-6.
- 6.1. **Coin 2, Stage 1, Number of Coins** *Default Off, Adjustable Off / 1 – 99*
This sets the number of coins that need to be inserted into coin mechanism 2 to reach the bonus credit stage 1.
This setting is only active if setting 6 is ON.
- 6.2. **Coin 2, Stage 1, Number of Bonus Credits** *Default Off, Adjustable Off / 1 – 99*
This sets the number of bonus credits that are given when credit stage 1 is reached.
This is the number of bonus credits given, on top of what has been paid for.
This setting is only active if setting 6 is ON.
- 6.3. **Coin 2, Stage 2, Number of Coins** *Default Off, Adjustable Off / 1 – 99*
This sets the number of coins that need to be inserted into coin mechanism 2 to reach the bonus credit stage 2.
This setting is only active if 6-1 and 6-2 are active.
- 6.4. **Coin 2, Stage 2, Number of Bonus Credits** *Default Off, Adjustable Off / 1 – 99*
This sets the number of bonus credits that are given when credit stage 2 is reached.
This is the number of bonus credits given, on top of what has been paid for.
This setting is only active if 6-1 and 6-2 are active
- 6.5. **Coin 2, Stage 3, Number of Coins** *Default Off, Adjustable Off / 1 – 99*
This sets the number of coins that need to be inserted into coin mechanism 2 to reach the bonus credit stage 3.
This setting is only active if 6-3 and 6-4 are active.
- 6.6. **Coin 2, Stage 3, Number of Bonus Credits** *Default Off, Adjustable Off / 1 – 99*
This sets the number of bonus credits that are given when credit stage 3 is reached.
This is the number of bonus credits given, on top of what has been paid for.
This setting is only active if P6-3 and P6-4 are active.
7. **Common Coin** *Default Off, Adjustable On / Off*
If the setting is ON, coin 1 and coin 2 contribute to the same coin pool. If the setting is off, they are counted separately.
This setting is only active is P20, Card System, is set to off.
8. **Attract Sound** *Default 3 minutes, Adjustable Off, On, 2m, 3m, 4m, 5m, 10m, 30m*
Controls the delay between the attract mode audio loop repeating.
9. **Error Message Alert** *Default Display & Audio, Adjustable Display & Audio, Audio Only, Display Only, Off*
Controls how the game indicates an error has occurred. Errors can be shown on the display and/or with an error voice message that is played through the speakers, or hidden completely.
10. **Free Mode** *Default Off, Adjustable On / Off*
Sets if the game requires a credit to start playing. If set to on, the game can be played for free.

11. **Prize Type** *Default Ticket, Adjustable Off / Ticket / Coupon*
Defines the type of prize given to the player. This only affects how the jackpot number and tickets owing number is displayed.
If set to "off" then no prize is paid out.
If set to "tickets" then prize numbers shown on displays are the same as the number of tickets dispensed from the mech.
If set to "coupons" (1 ticket = 2 coupons), then prize numbers displayed to the player double the number of tickets dispensed from the mech.
12. **Game Mode** *Default Arcade, Adjustable Bar / Arcade*
Defines how the game operates.
Bar: Round one and two are the same. If the playfield is cleared on either round, then an extra bonus rainbow round is activated. There are no bonus points for reaching the Beat Score setting value, but if the bonus round is activated, bonus tickets are added to the prize payout.
Arcade: Round two bonus rainbow round is only triggered if the player clears the playfield in round one. If the total score is higher than the Beat Score setting value, then the Bonus Ticket setting value is added to the prize payout.
13. **Bonus Ball** *Default 5, Adjustable 1-10*
Set how many balls are dispensed in the bonus rainbow round.
14. **Game Time** *Default 30, Adjustable 30-60*
Sets how many seconds a normal round lasts.
15. **Bonus Time** *Default 7, Adjustable 1-60*
Sets how many seconds bonus rainbow round lasts.
16. **Beat Score** *Default 6500, Adjustable 5500-7000*
Sets the total score that a player must beat to be awarded the Bonus Tickets setting value.
17. **Points per Ticket** *Default 100, Adjustable 1-1000*
Sets how many points are required to dispense 1 ticket from the mech.
18. **Maximum Tickets** *Default 200, Adjustable 1-1000*
Sets the maximum number of tickets allowed to be dispensed based on the game score.
19. **Mercy Tickets** *Default 5, Adjustable 1-500*
Activate or deactivate the card system on the machine.
20. **Bonus Tickets** *Default 50, Adjustable 10-5000*
Sets the number of bonus tickets that are awarded to the player when they meet the criteria dependant on the game mode (setting 12).
21. **Card System** *Default On, Adjustable On / Off*
Activate or deactivate the card system on the machine.

AUDITS

1. **Total Coins 1**
Shows the number of coins inserted on COIN1 input.
2. **Total Coins 2**
Shows the number of coins inserted on COIN2 input.
3. **Total Service Credits**
Shows the number of times the service button was used to issue 1 credit to the game.
4. **Single Player Games**
Shows the total number of single player games played.
5. **Double Player Games**
Shows the total number of double player games played.
6. **Total Games Played**
Shows the total number of games completed.
7. **High Score**
The highest score achieved.
8. **Total Tickets**
Shows the number of tickets paid out from all ticket mechs.
9. **Average Tickets Per Game**
Shows the average number of tickets won from each game.
10. **Total Skips**
The number of times the “end turn” button has been pressed.
11. **Total Time Skipped**
The total number of seconds of gameplay that have been skipped as a result of pressing the “end turn” button.
12. **Average Time Skipped**
The average amount of game time remaining when the “end turn” button is pressed.
13. **Cleared Playfield**
The number of rounds where the playfield was cleared.
14. **Jackpot**
The number of times “bonus tickets” were won.
15. **Checksum**
Manufacturers audit for error checking.

INPUT AND OUTPUT TESTS

OUTPUT TESTS

1. **All Outputs**
Flash all lamps, run playfield colors and player panel button lamps.
2. **Tiles**
Flash all playfield tile lights in order of tile 1 to 45.
3. **Score**
Count all seven segment displays from 0000 – 9999.
4. **Lights**
Flash the player one, player two, player panel buttons, round, score, clear and winner lamps.

INPUT TESTS

The display will read ON or OFF to indicate if the currently selected input is active or not.

- **Up Button**
- **Down Button**
- **Test / Enter Button**
- **Back / Service Button**
- **Utility Button**
- **Single Player Button**
- **Double Player Button**
- **End Turn Button**
- **Ball Sensor**
- **Home Sensor**
- **Player Sensor**
- **Return Sensor**
- **Coin 1**
- **Coin 2**
- **Ticket 1**
- **Ticket 2**

RUN TESTS

1. **Run Ticket Mechs**
Try dispense a single ticket from both ticket mechs.
2. **Run Ball Dispenser Motor**
Set the ball gate to the return position and run the ball lifter motor.
3. **Run Ball Gate Motor**
Toggle the ball gate between the home, to playfield and to player positions.
4. **Run Tile Sensor**
Activate playfield tiles so they will light up when hit. Use this to check tile sensitivity.
5. **Max Load**
Runs all outputs at the same time at maximum power. Seven segments are set to 8888, audio plays, all motors run and all lights turn on.

GAME HISTORY

This menu lists the data on the last 10 game plays. Each entry lists five pieces of data:

- SPL / DPL – Single player or double player game
- P1 – Player one's score
- P2 – Player two's score
- T1 – The number of tickets paid out to player one
- T2 – The number of tickets paid out to player two

ERRORS

Name	Cause	Solution
Error ticket 1	The game has run out of tickets or if there is a jam on ticket mech 1	Refill the ticket mechs and ensure there is no jam. Clear the error by viewing it in the errors menu and pressing the right button. The game will automatically pay out remaining tickets if there is activity on the ticket sensor.
Error ticket 2	The game has run out of tickets or if there is a jam on ticket mech 2	Refill the ticket mechs and ensure there is no jam. Clear the error by viewing it in the errors menu and pressing the right button. The game will automatically pay out remaining tickets if there is activity on the ticket sensor.
Coin 1 error	The coin sensor has been pressed for a long period of time.	Release the coin sensor to clear the error.
Coin 2 error	The coin sensor has been pressed for a long period of time.	Release the coin sensor to clear the error.
Error button jam	A button has been pressed for more than five seconds.	Check for and clear anything that might be jamming any of the button sensors.

Error Ball Jam	The ball lifter (rotating wheel) is activated, but the sensor is not detecting any balls.	The game will try and resolve this error by itself during attract mode. If this fails, check for and clear any ball jams in the lifter mechanism. Check for and clear anything that might be jamming the ball lifter sensor. Check the lifter motor by running it via the run tests menu.
Error EEP NJ <i>Only applicable to New Jersey firmware</i>	EEPROM memory related to the NJ game state saving system can't be read.	Clear the error by viewing it in the errors menu and pressing the right button. If the error still occurs, the IC is faulty and needs to be replaced.
Error PSet <i>This error will cause game operation to stop</i>	The CPU cannot read or write to its on-board EEPROM program settings, or is receiving errors during communication with the EEPROM.	Clear the error by viewing it in the errors menu and pressing the right button. If the error still occurs, the IC is faulty and needs to be replaced.
Error History	The CPU cannot read or write to its on-board EEPROM history data, or is receiving errors during communication with the EEPROM.	Clear the error by viewing it in the errors menu and pressing the right button. If the error still occurs, the IC is faulty and needs to be replaced.
Error EEP Audit R <i>This error will cause game operation to stop</i>	The CPU cannot read or write to its on-board EEPROM resettable audits, or is receiving errors during communication with the EEPROM.	Set all audits to default by viewing the error in the errors menu and pressing the right button. Set resettable audits back to default by going into the audits menu and press and hold the right button. If the error still occurs, the IC is faulty and needs to be replaced.
Error EEP Audit UR <i>This error will cause game operation to stop</i>	The CPU cannot read or write to its on-board EEPROM unresettable audits, or is receiving errors during communication with the EEPROM.	Set all audits to default by viewing the error in the errors menu and pressing the right button. If the error still occurs, the IC is faulty and needs to be replaced.

SECTION A: SERVICE INSTRUCTIONS

NOTE: Be sure to read the following carefully before servicing the machine.

LOCATING AND ACCESSING PARTS

The following pictures identify the location of the main serviceable items.

CABINET FRONT



1. Header
2. Backboard
3. Playfield
4. Bounce pad
5. Player panel
6. Coin door 1
7. Ticket door 1
8. Ticket door 2
9. Coin door 2

BACKBOARD




1. Speakers
2. Timer display lamp
3. Player 1 and 2 lamps
4. Player 1 and 2 round 1 score lamps
5. Player 1 and 2 round 1 clear lamps
6. Player 1 and 2 round 2 score lamps
7. Player 1 and 2 round 2 clear lamps
8. Player 1 and 2 total score lamps
9. Player 1 and 2 winner lamps
10. Round 1 lamp
11. Round 2 lamp
12. Total score lamp

PLAYER PANEL



1. Bounce pad
2. End turn button
3. Single player button
4. Double player button
5. Credit display


CABINET INNER

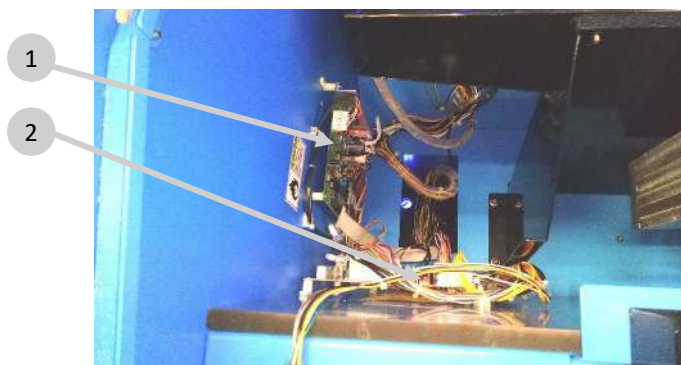

1. FB216 Game Control PCBs
2. FB106 Sound Board




1. Ball lifter
2. FB86 Sensor PCB

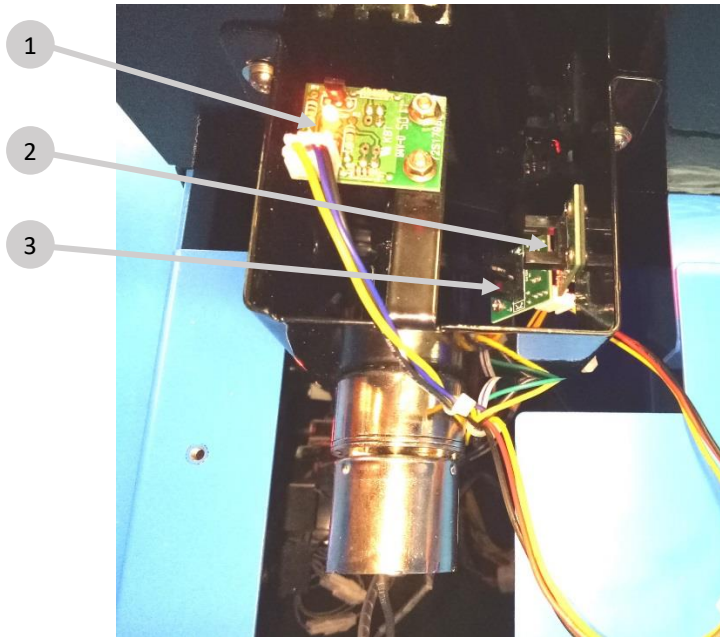

1. Ball gate sensor – player
2. Ball gate sensor – home
3. Ball gate sensor - return

CABINET REAR

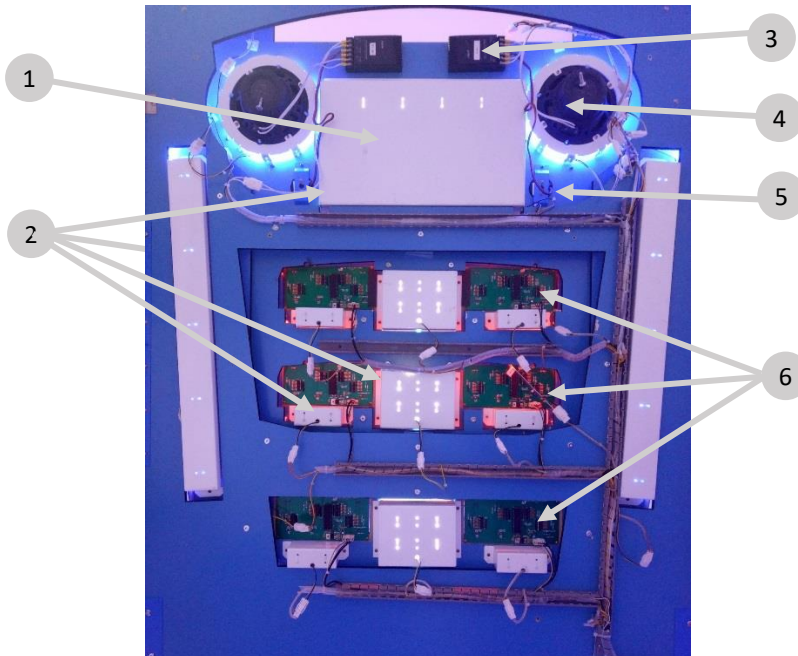

1. FB63 display PCB
2. Lightboxes / lamps x12
3. Speaker crossover
4. Woofer speaker
5. Tweeter speaker
6. FB44 display PCB x6

CABINET SIDE



1. FB214 Fuse PCB x5 (behind side panel)

OPERATOR PANEL / SERVICE CONTROLS



1. Up button
2. Back / service button
3. Test / enter button
4. Down button
5. Volume control
6. Utility button
7. Coin 1 counter
8. Coin 2 counter
9. Ticket 1 counter
10. Ticket 2 counter
11. UCL connector

PARTS DESCRIPTION

HEADER DISPLAY

The header is a static sign illuminated by LED strip lighting.

BACKBOARD

The backboard at the rear of the game mounts the speakers, FB63 timer display, FB44 score displays, and LED strip lamps. All components are accessible by removing the guards behind the backboard.

SPEAKERS


Two component speakers are wired to the left and right outputs from the FB106 sound board. Each speaker pair consists of a crossover, woofer speaker and tweeter speaker.

PLAYFIELD

CAUTION: Take care when working around the playfield tiles and ensure mounting mechanism is not damaged.

The playfield consists of 45 tiles. Each tile is a delicate assembly containing one FB205 Sensor PCB. The FB205 is a sensitive PCB used to detect the vibration caused by a ping-pong ball hit. Extra care should be taken when handing and cleaning so as not to damage the mounting.

Each FB205 is programmed with firmware and communicates with the FB216 using an RS485 data bus. Ensure DIP switches on each FB205 are set so that each PCB has a unique address as defined in the image below. Correct addressing is critical and starts as 1 and increases to 45 from left to right and from front to back.

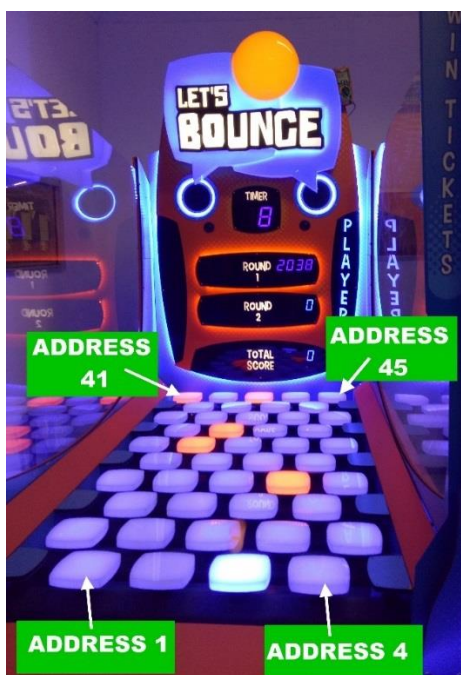

Addresses are set via DIP switches using binary coding. Patterns are shown below:

ADDRESS	SW6	SW5	SW4	SW3	SW2	SW1
1	ON	ON	ON	ON	ON	OFF
2	ON	ON	ON	ON	OFF	ON
3	ON	ON	ON	ON	OFF	OFF
4	ON	ON	ON	OFF	ON	ON
5	ON	ON	ON	OFF	ON	OFF
6	ON	ON	ON	OFF	OFF	ON
7	ON	ON	ON	OFF	OFF	OFF
8	ON	ON	OFF	ON	ON	ON
9	ON	ON	OFF	ON	ON	OFF
10	ON	ON	OFF	ON	OFF	ON
11	ON	ON	OFF	ON	OFF	OFF
12	ON	ON	OFF	OFF	ON	ON
13	ON	ON	OFF	OFF	ON	OFF
14	ON	ON	OFF	OFF	OFF	ON
15	ON	ON	OFF	OFF	OFF	OFF

COUNTERS

Counters will increment for each coin inserted and each ticket paid out. Counters are under firmware control and are not directly connected to the mechanisms.

BUTTONS

Press the green SERVICE/BACK button to issue a service credit from attract mode. Press and hold the green SERVICE/BACK button to enter temporary Free Play Mode. This will remain in place until machine power is reset.

Press the red TEST/ENTER button to enter the operator menu from attract mode.

When in the operator menu, use four up/down/left/right buttons to navigate through the menu.

VOLUME KNOB

Use to adjust the speaker's sound level.

COIN MECHANISM / BILL ACCEPTOR / CARD SYSTEM

Credits can be inserted via a coin mech, bill acceptor and/or card system connection. All interfaces are located inside the front coin doors.

TICKET MECHS

Tickets won are paid out from two ticket mechs. Being a 2-player game, tickets are paid out on the mech corresponding to the player. Player 1 tickets are paid out on ticket mech 1 and player 2 tickets are paid out on ticket mech 2. The exception being when the "Card System" game setting is set to ON. If a 2-player game is played by crediting only a single player position then all tickets are paid out on that player's ticket mech.

PLAYFIELD FUSES – FB214

Each tile on the playfield receives an independent power and data connection. Each tile is fused by the FB214 PCBs which are located behind the side panel.

GAME BOARD – FB216

The FB216 is the main control board for the game. It contains the application firmware and output drivers to control the lamps, displays and tiles.

SOUND BOARD – FB106

The FB106 is the sound driver board containing the sound files and amplifier. Volume is adjusted by the potentiometer on the operator panel.

BALL DISPENSER

The ball dispenser is a 2-stage mechanism consisting of a ball lifter and a ball gate.

The lifter is a rotating plate to lift the ball to the ball gate. Balls are counted by the FB84 IR Sensor PCB.

The ball gate is used to hold the balls before dispensing them to the player. Gate position is detected by the FB165 sensor PCB.

POWER INLET/MAINS SWITCH

The power inlet is a standard IEC inlet socket with a mains power switch, located at the rear of the machine. There is a main power fuse internal in this IEC socket. The fuse should be a M205, 250VAC, 8A.

WARNING: ALWAYS turn OFF mains power and unplug the game before replacing any fuses.
ALWAYS use the correctly rated fuse.

POWER SUPPLY

The entire machine is powered by a single 600W 12V power supply. AC input is universal 85-265VAC 47-63Hz.

LAMPS

WARNING: Always turn OFF mains power and unplug the game, before replacing any lamps.
Always replace the lamps with the same or equivalent size, wattage and voltage.

All button lamps are 12VDC T10 LED or equivalent.

All Playfield tile lights are FB205 PCBs.

All remaining lighting is RGB LED strip.

Contact your nearest LAI Games office for replacement LED strip to ensure color is matched.

MAINTENANCE

EXTERIOR

- Regularly dust and clean the external cabinet areas as required, using a soft water-damp cloth and mild soap.
- Check for blown bulbs and replace as required.
- Check all LED strips are functioning and repair as required.
- Check that all playfield tiles are operating and positioned correctly. Tiles should all be at the same level, orientation, and spacing.
- Check all foam padding on the playfield cross-beam mounts is intact with no exposed metal. Re-glue any foam that has come loose
- Check below the playfield for stuck balls, clear out any obstructions to allow balls to roll freely.

INTERIOR

- Regularly dust and vacuum the interior of the cabinet, taking care to remove any objects that may have fallen.
- Check and tighten all fixing hardware and fasteners as required.
- Check the ball dispenser sensors are clear, blow out any dust from the optical sensors.
- Check the ball lifter is free to rotate and balls are free from obstruction.
- Check the balls are clean and undamaged. Discard any balls that are cracked or deformed.

SECTION B: TECHNICAL DETAILS

WARNING: Always turn **OFF** mains power and unplug the game before cleaning the interior of the machine.

WARNING: It is advised that anybody using SECTION B for repairing or modifying any of the components of the game should be a qualified technician, having at least a basic knowledge of digital components, integrated circuits and electricity.

POWER SUPPLY

The universal AC input power supplies generates 12VDC for the entire machine. The power supply output voltage should be 12VDC. It can be adjusted when necessary by turning the blue adjustment trimpot with a small Philips screwdriver.




COIN OPTIONS REFERENCE GUIDE

By default, the coin door contains a micro switch connected to the COIN2 input for crediting the machine.

A 9 way Molex connector has been installed on the coin door which can be optionally used to make adaptors for most electronic coin systems and comparators.

The following picture illustrates the connector pinout.

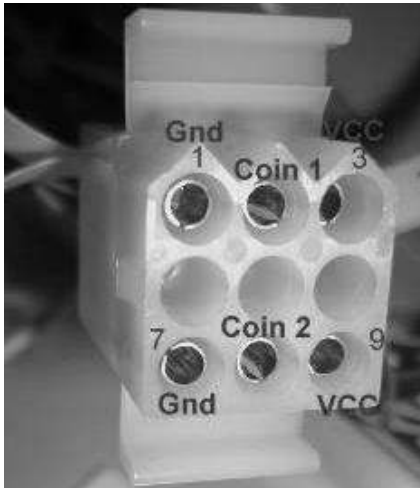

Shell part number: Molex 03-09-1092


Pins: Molex 02-09-1119 (loose)
Molex 02-09-1117 (chain)

PIN1 = GND
PIN2 = COIN1 input
PIN3 = 12VDC
PIN7 = GND
PIN8 = COIN2 input
PIN9 = 12VDC

Contact your nearest LAI Games distributor for harnessing to suit different coin comparators and bill acceptors.

UNIVERSAL CARD LINK CONNECTION

A 9 pin Universal Card Link connector exists on the operator panel inside the coin door.

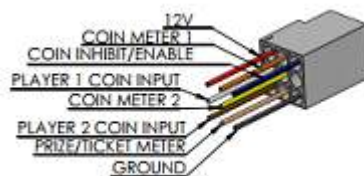

Mating shell part number: Molex 9-pin housing: 03-09-2092

Pins part number: Wire Gauge and Terminals: 02-09-2103 (14-20 gauge wire) or 02-09-2118 (18-22 gauge wire)

Pin 1. +12v- Supply to Card System.

Pin 2. Coin 1- input to the game PCB.

Pin 3. Coin 2- input to the game PCB.

Pin 4. Coin meter 1- is connected to the coin meter 1 output from the game PCB and can be used by card systems for monitoring purposes.

Pin 5. Coin meter 2- is connected to the coin meter 2 outputs from the game PCB and can be used by card systems for monitoring purposes.

Pin 6. Ticket Meter- is connected to the Ticket 1 Meter output from the game PCB and can be used by card systems for monitoring purposes.


Pin 7. Empty

Pin 8. Empty

Pin 9. Ground- is connected to the common Ground connection, the same ground as the Game PCB.

TICKET MECHANISMS

2 x ticket mechs can be fitted inside the ticket doors. Connections are available through a standard 4 way Molex receptacle. Deltronic DL-1275 mechs are installed by default.

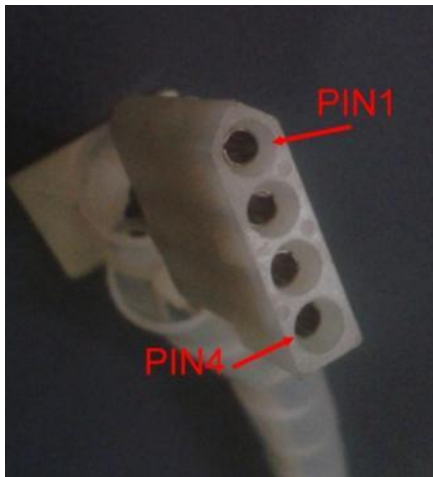

Shell part number:
Molex 03-09-1042


Pins:
Molex 02-09-1119 (loose)
Molex 02-09-1117 (chain)

PIN1 = NOTCH
PIN2 = GND
PIN3 = DRIVE
PIN7 = 12VDC



WIRING DIAGRAMS

(Next Page)

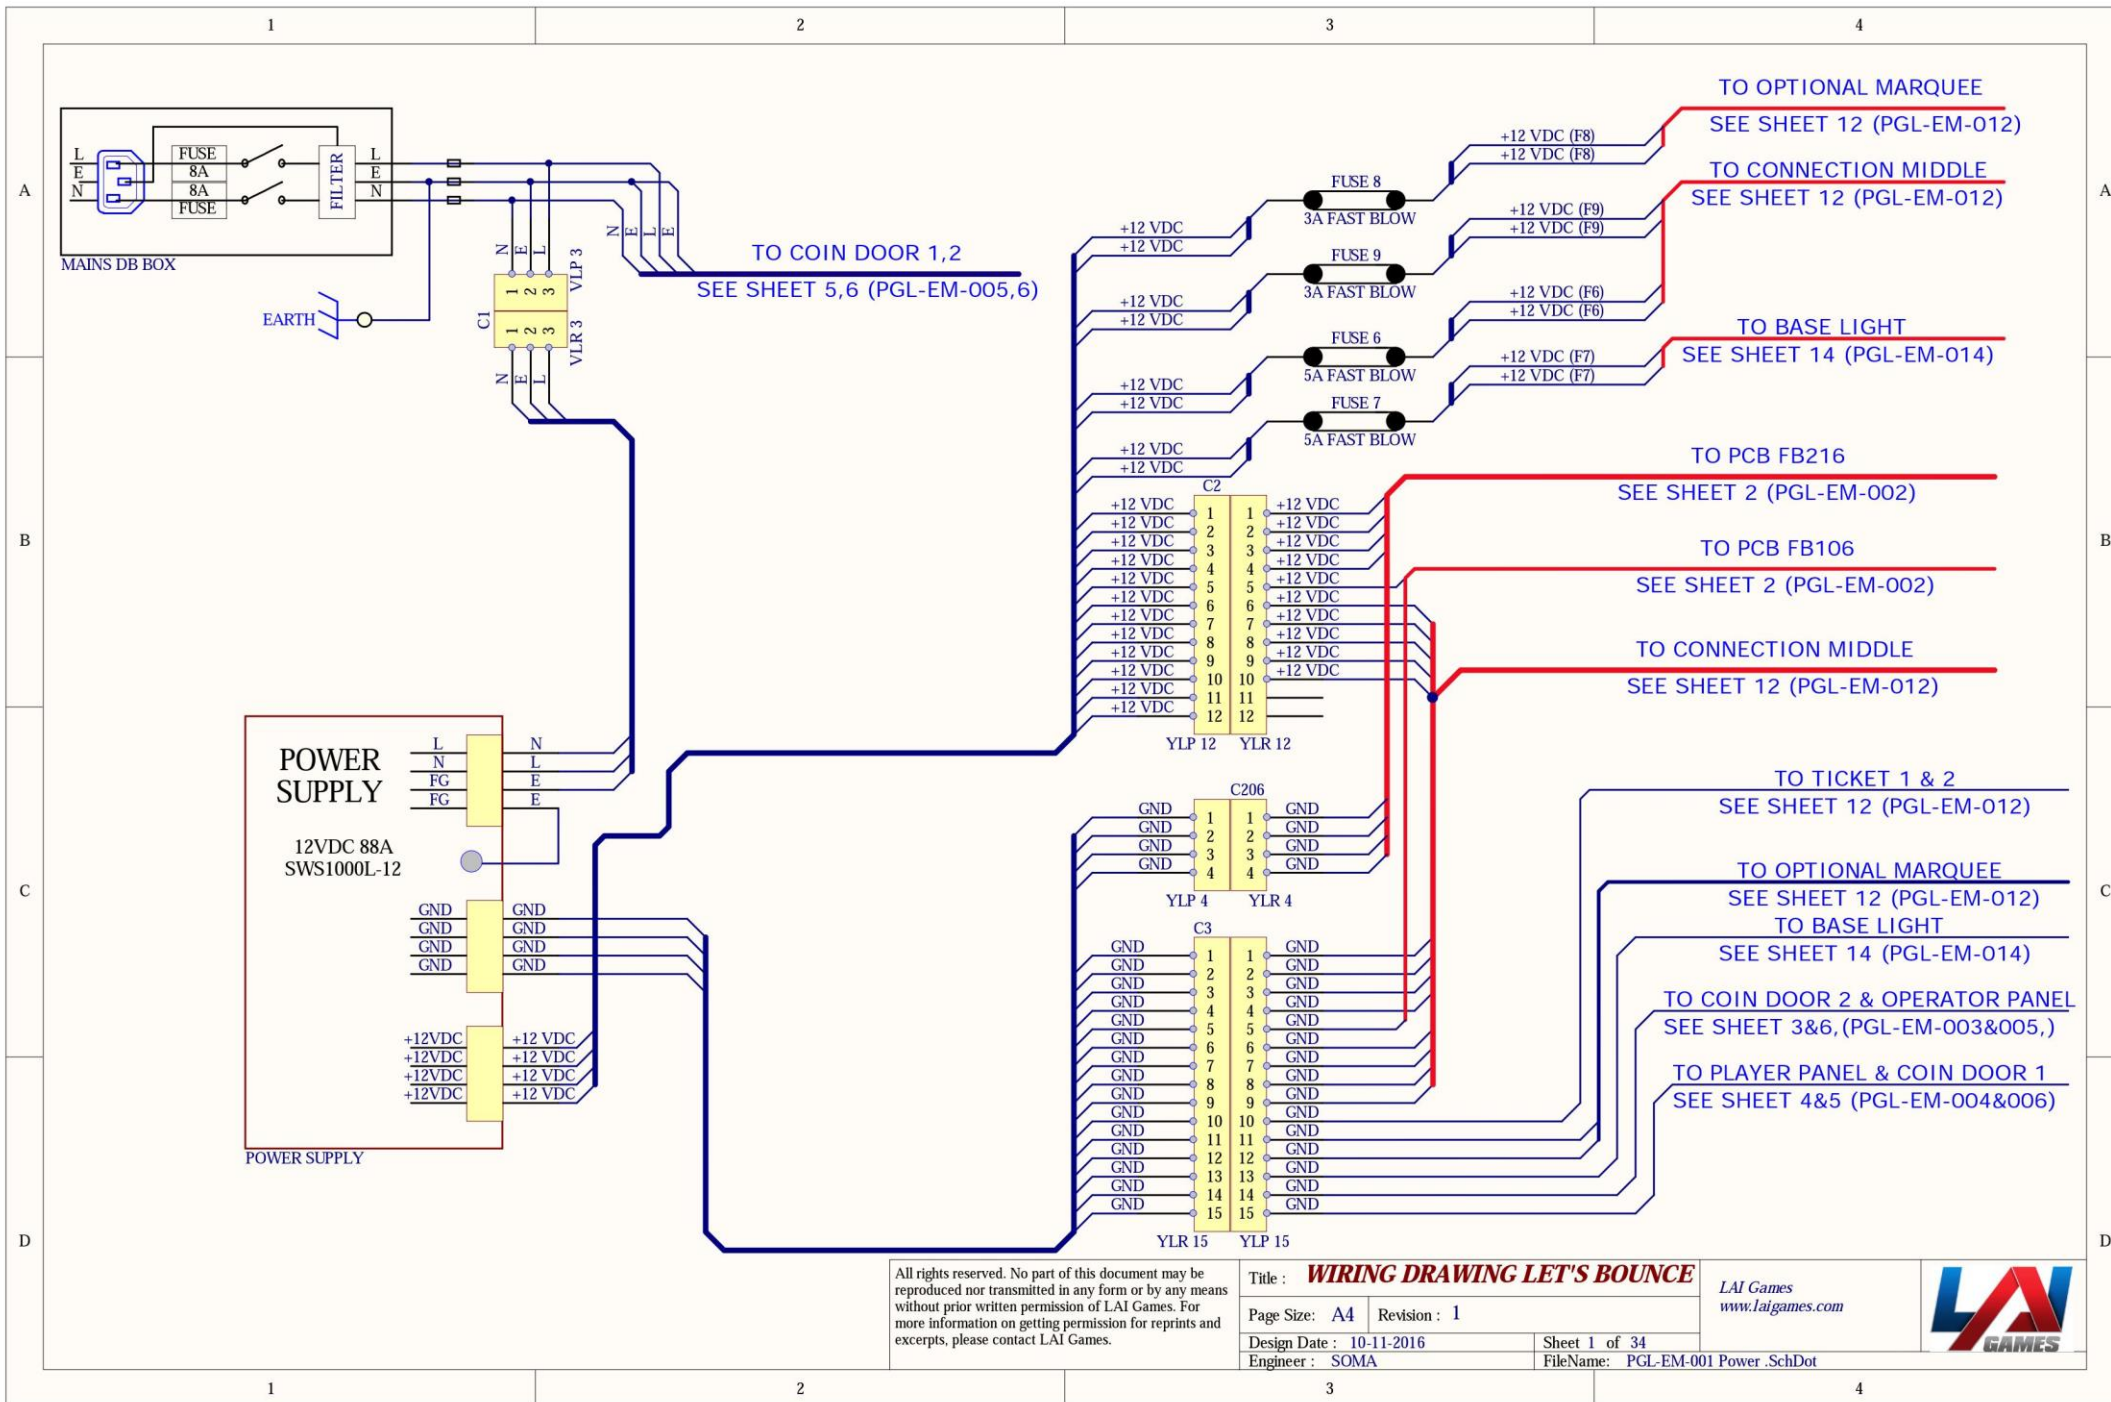


All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title : **WIRING DRAWING LET'S BOUNCE**
 Page Size : A4 Revision : 1
 Design Date : 10-11-2016
 Engineer : SOMA

LAI Games
www.laigames.com



Sheet 1 of 34
 FileName: PGL-EM-001 Power .SchDot

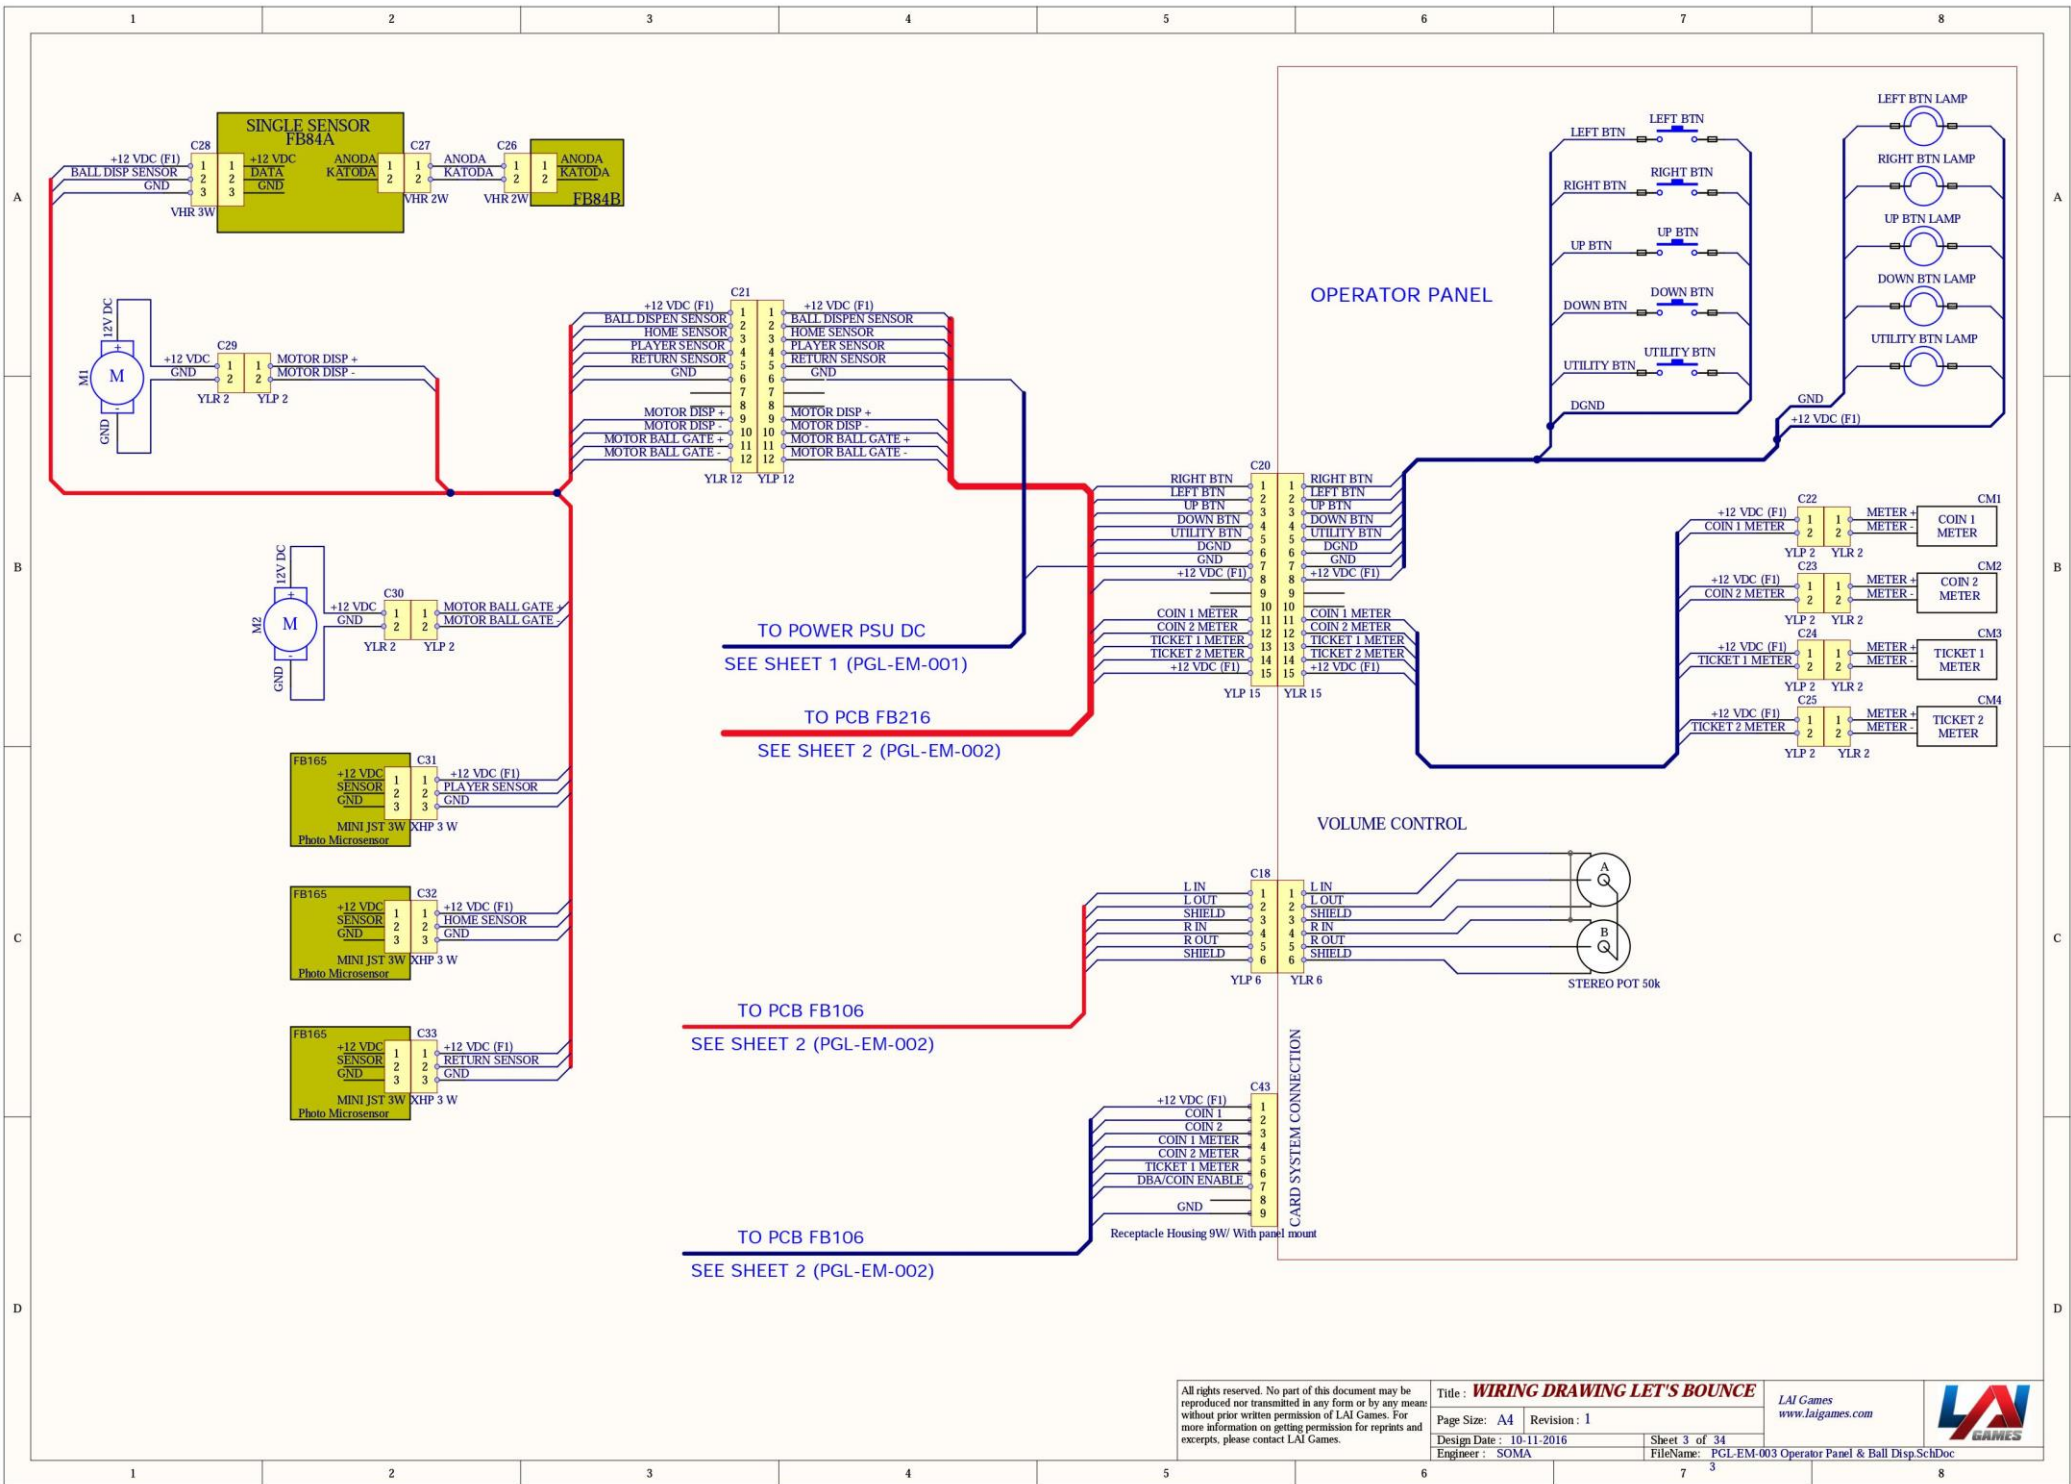


All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title : **WIRING DRAWING LET'S BOUNCE**
 Page Size : A4 Revision : 1
 Design Date : 10-11-2016
 Engineer : SOMA

LAI Games
www.laigames.com



Sheet 3 of 34
 FileName: PGL-EM-003 Operator Panel & Ball Disp.SchDoc

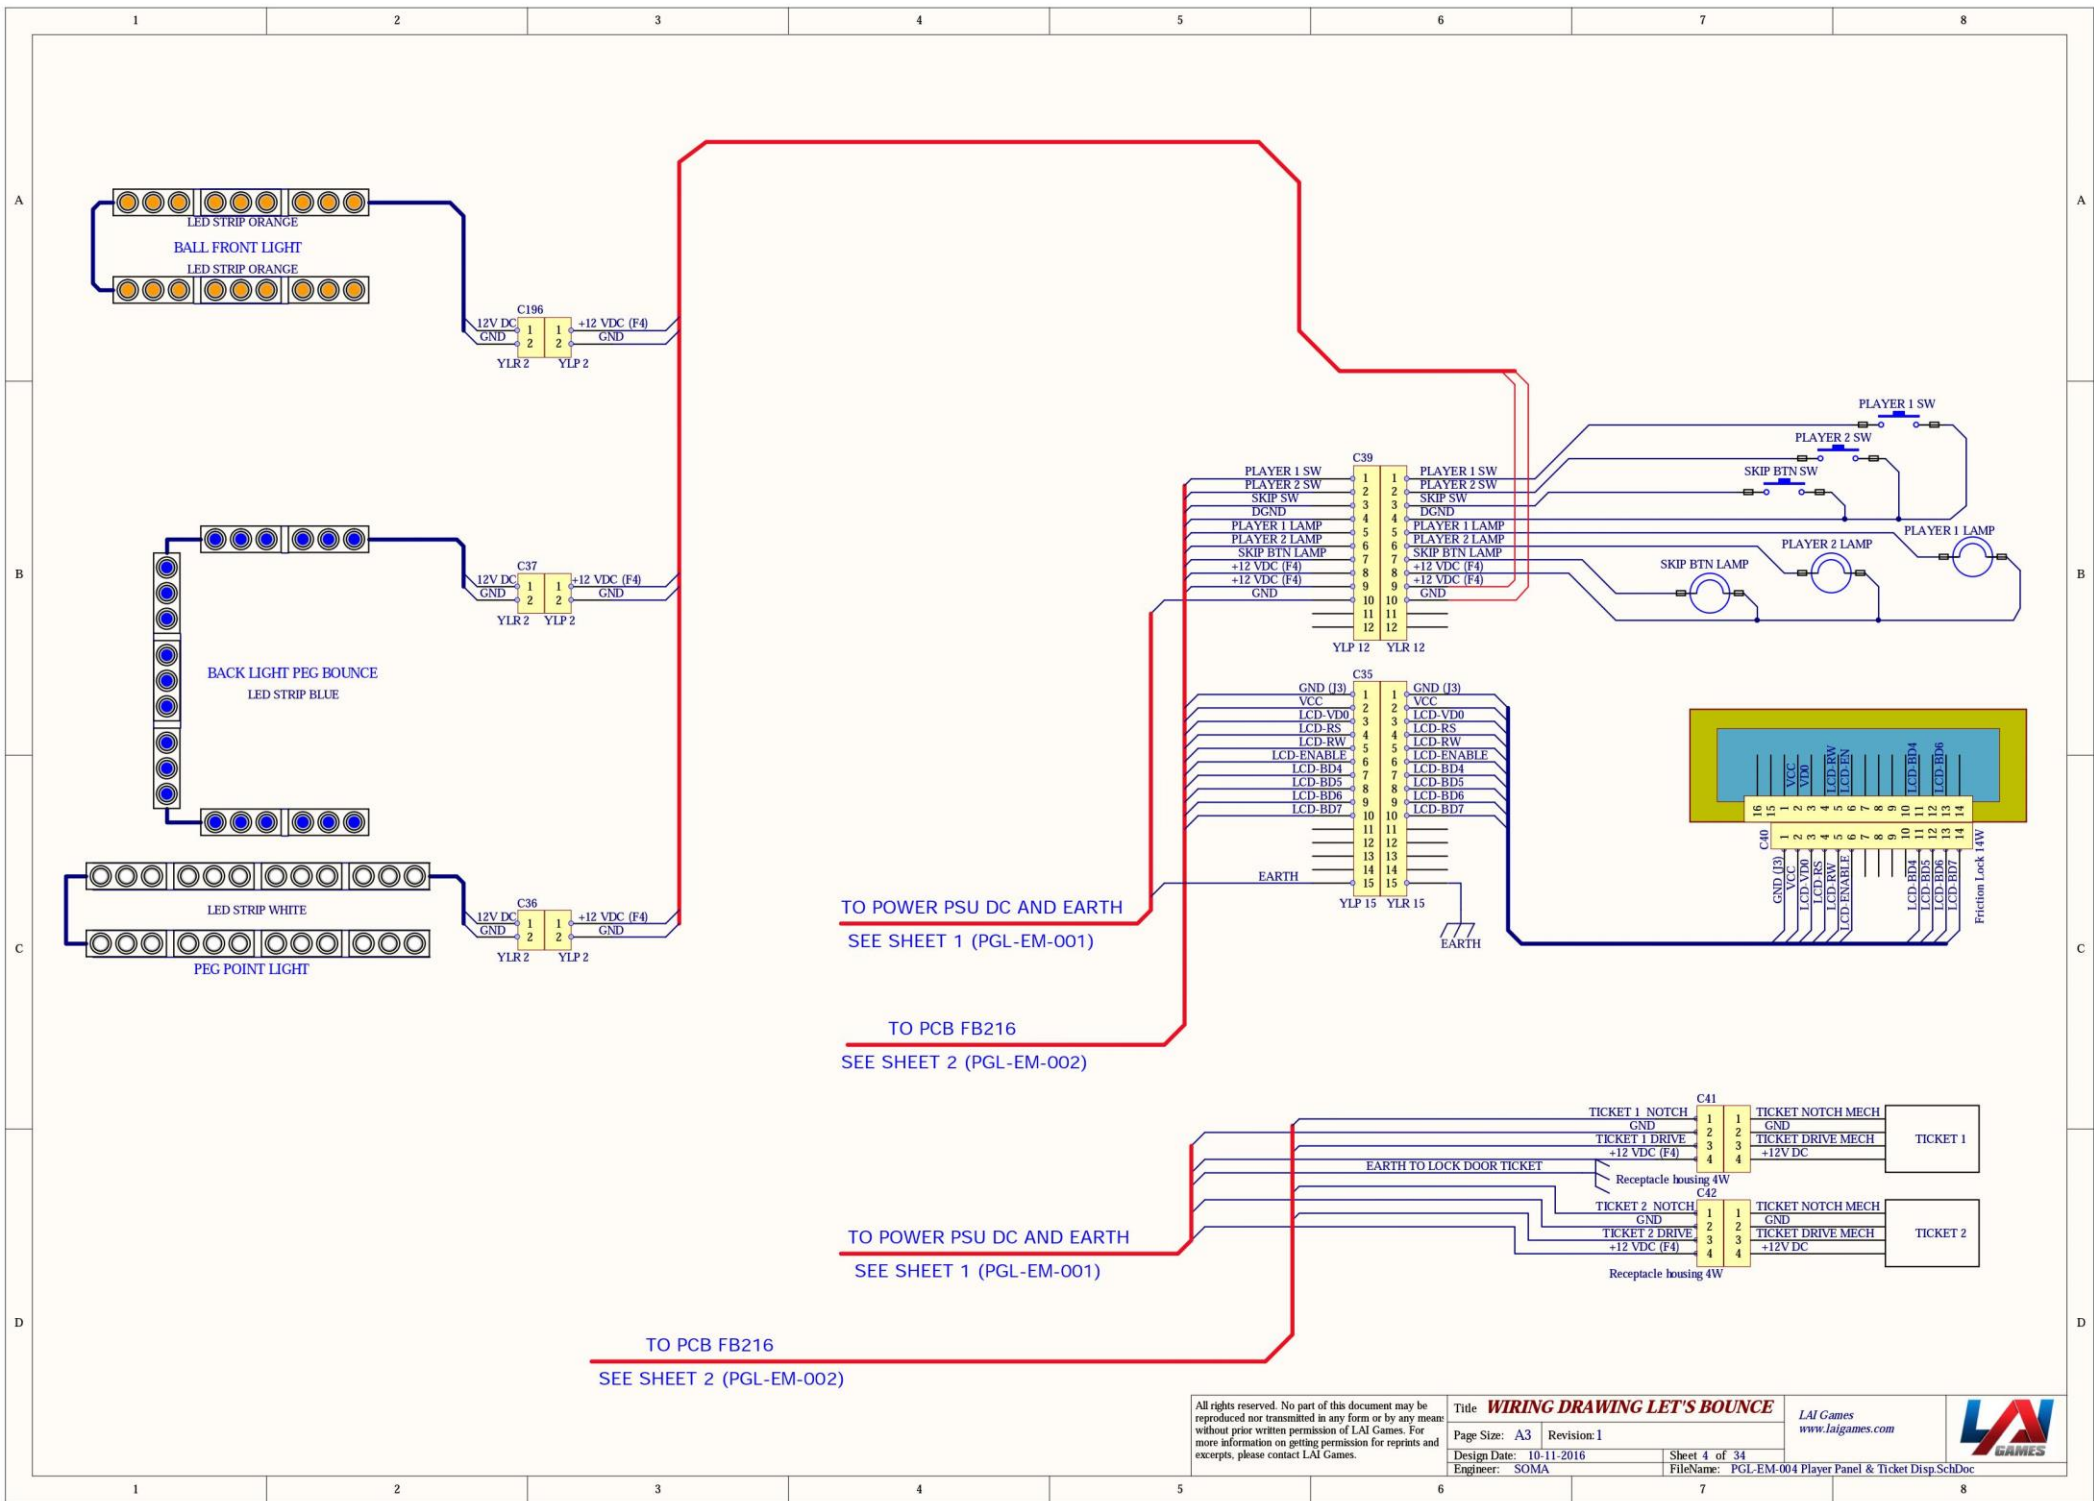


TO POWER PSU DC AND EARTH
SEE SHEET 1 (PGL-EM-001)

TO PCB FB216
SEE SHEET 2 (PGL-EM-002)

TO POWER PSU DC AND EARTH
SEE SHEET 1 (PGL-EM-001)

TO PCB FB216
SEE SHEET 2 (PGL-EM-002)

COIN DOOR 1

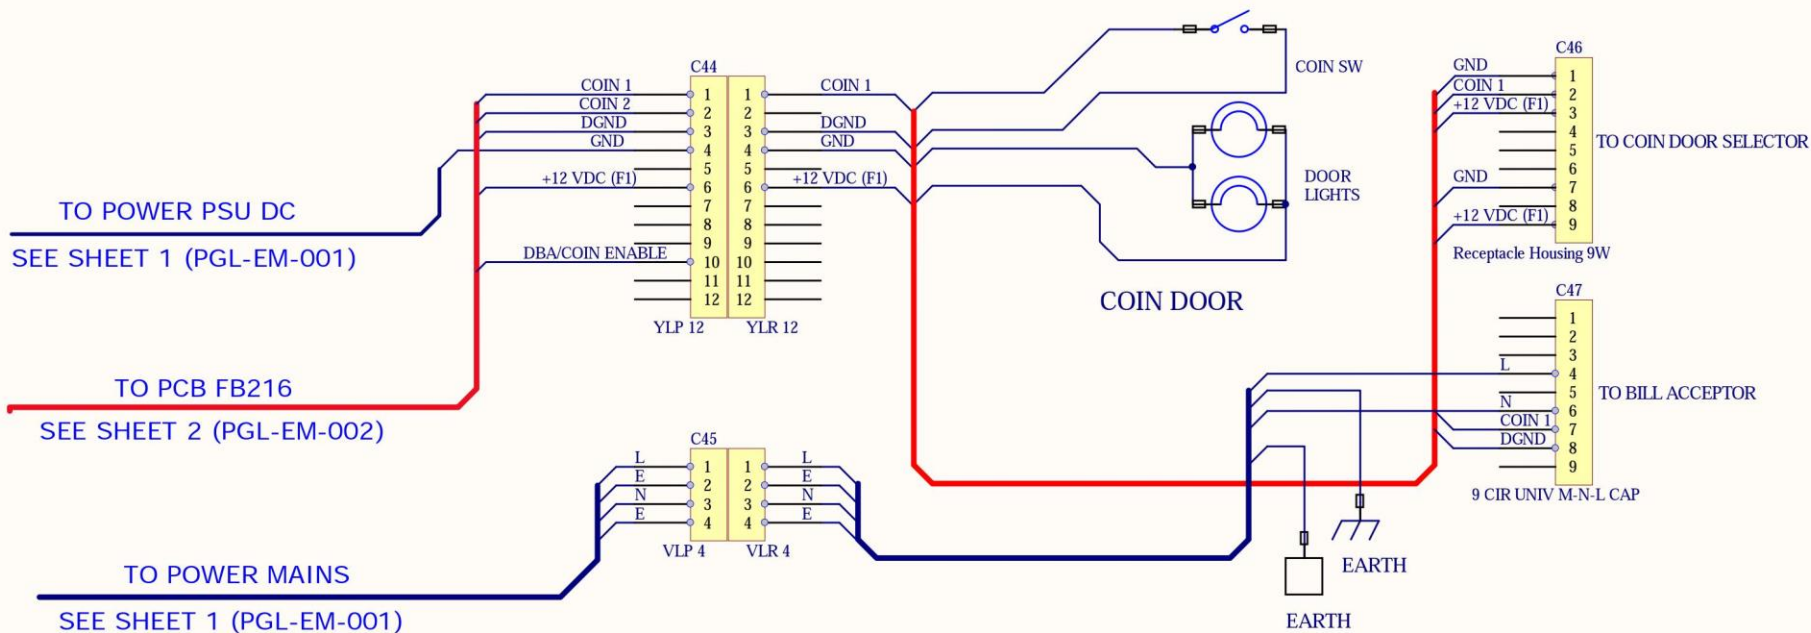

All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title : **WIRING DRAWING LET'S BOUNCE**

Page Size : A4 Revision : 1

Design Date : 10-11-2016

Engineer : SOMA


LAI Games
www.laigames.com

Sheet 5 of 34

FileName : PGL-EM-005 Coin Door 1.SchDot



COIN DOOR 2

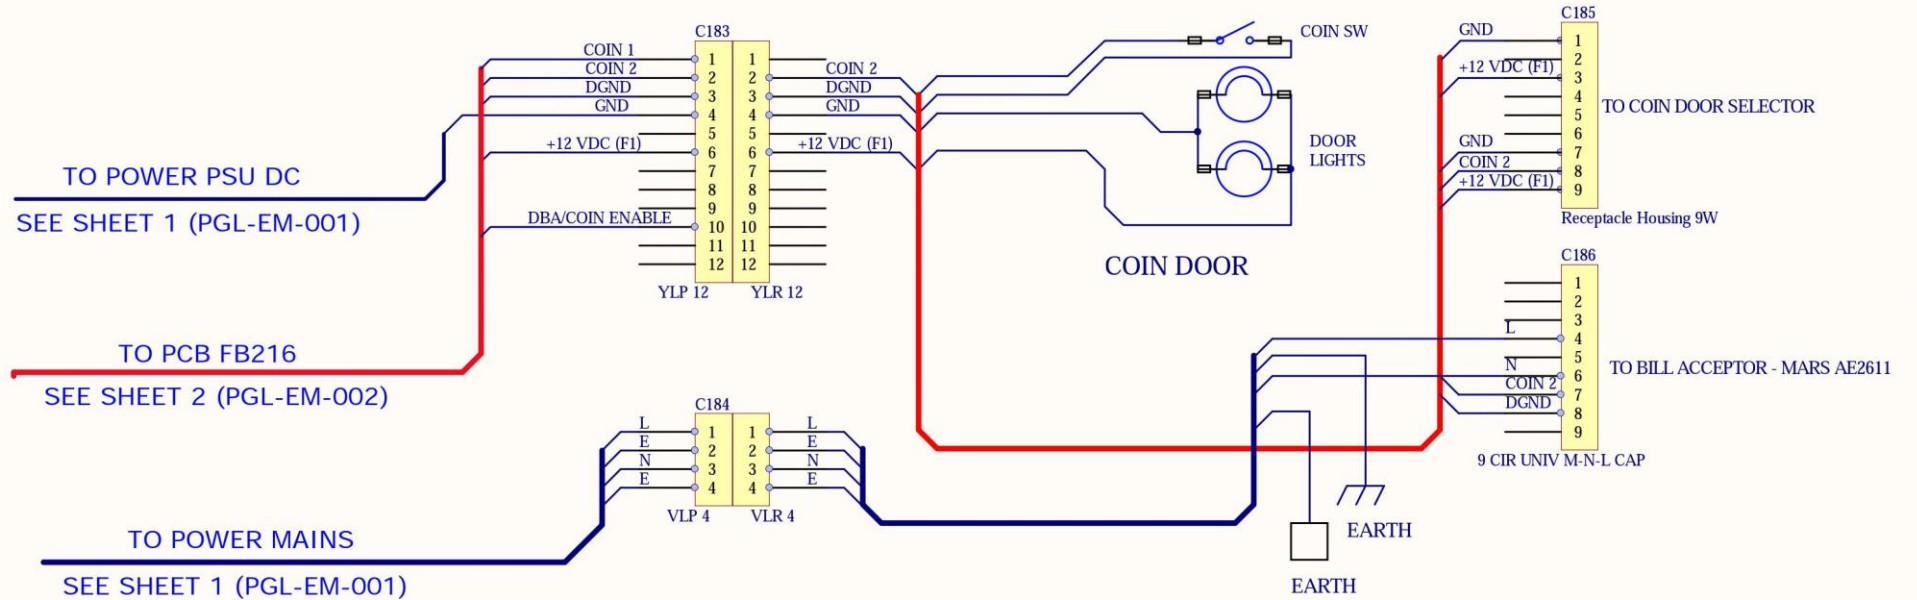

All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title : **WIRING DRAWING LET'S BOUNCE**

Page Size : A4 Revision : 1

Design Date : 10-11-2016


Engineer : SOMA


Sheet 6 of 34

FileName : PGL-EM-006 Coin Door 2.SchDot

LAI Games
www.laigames.com



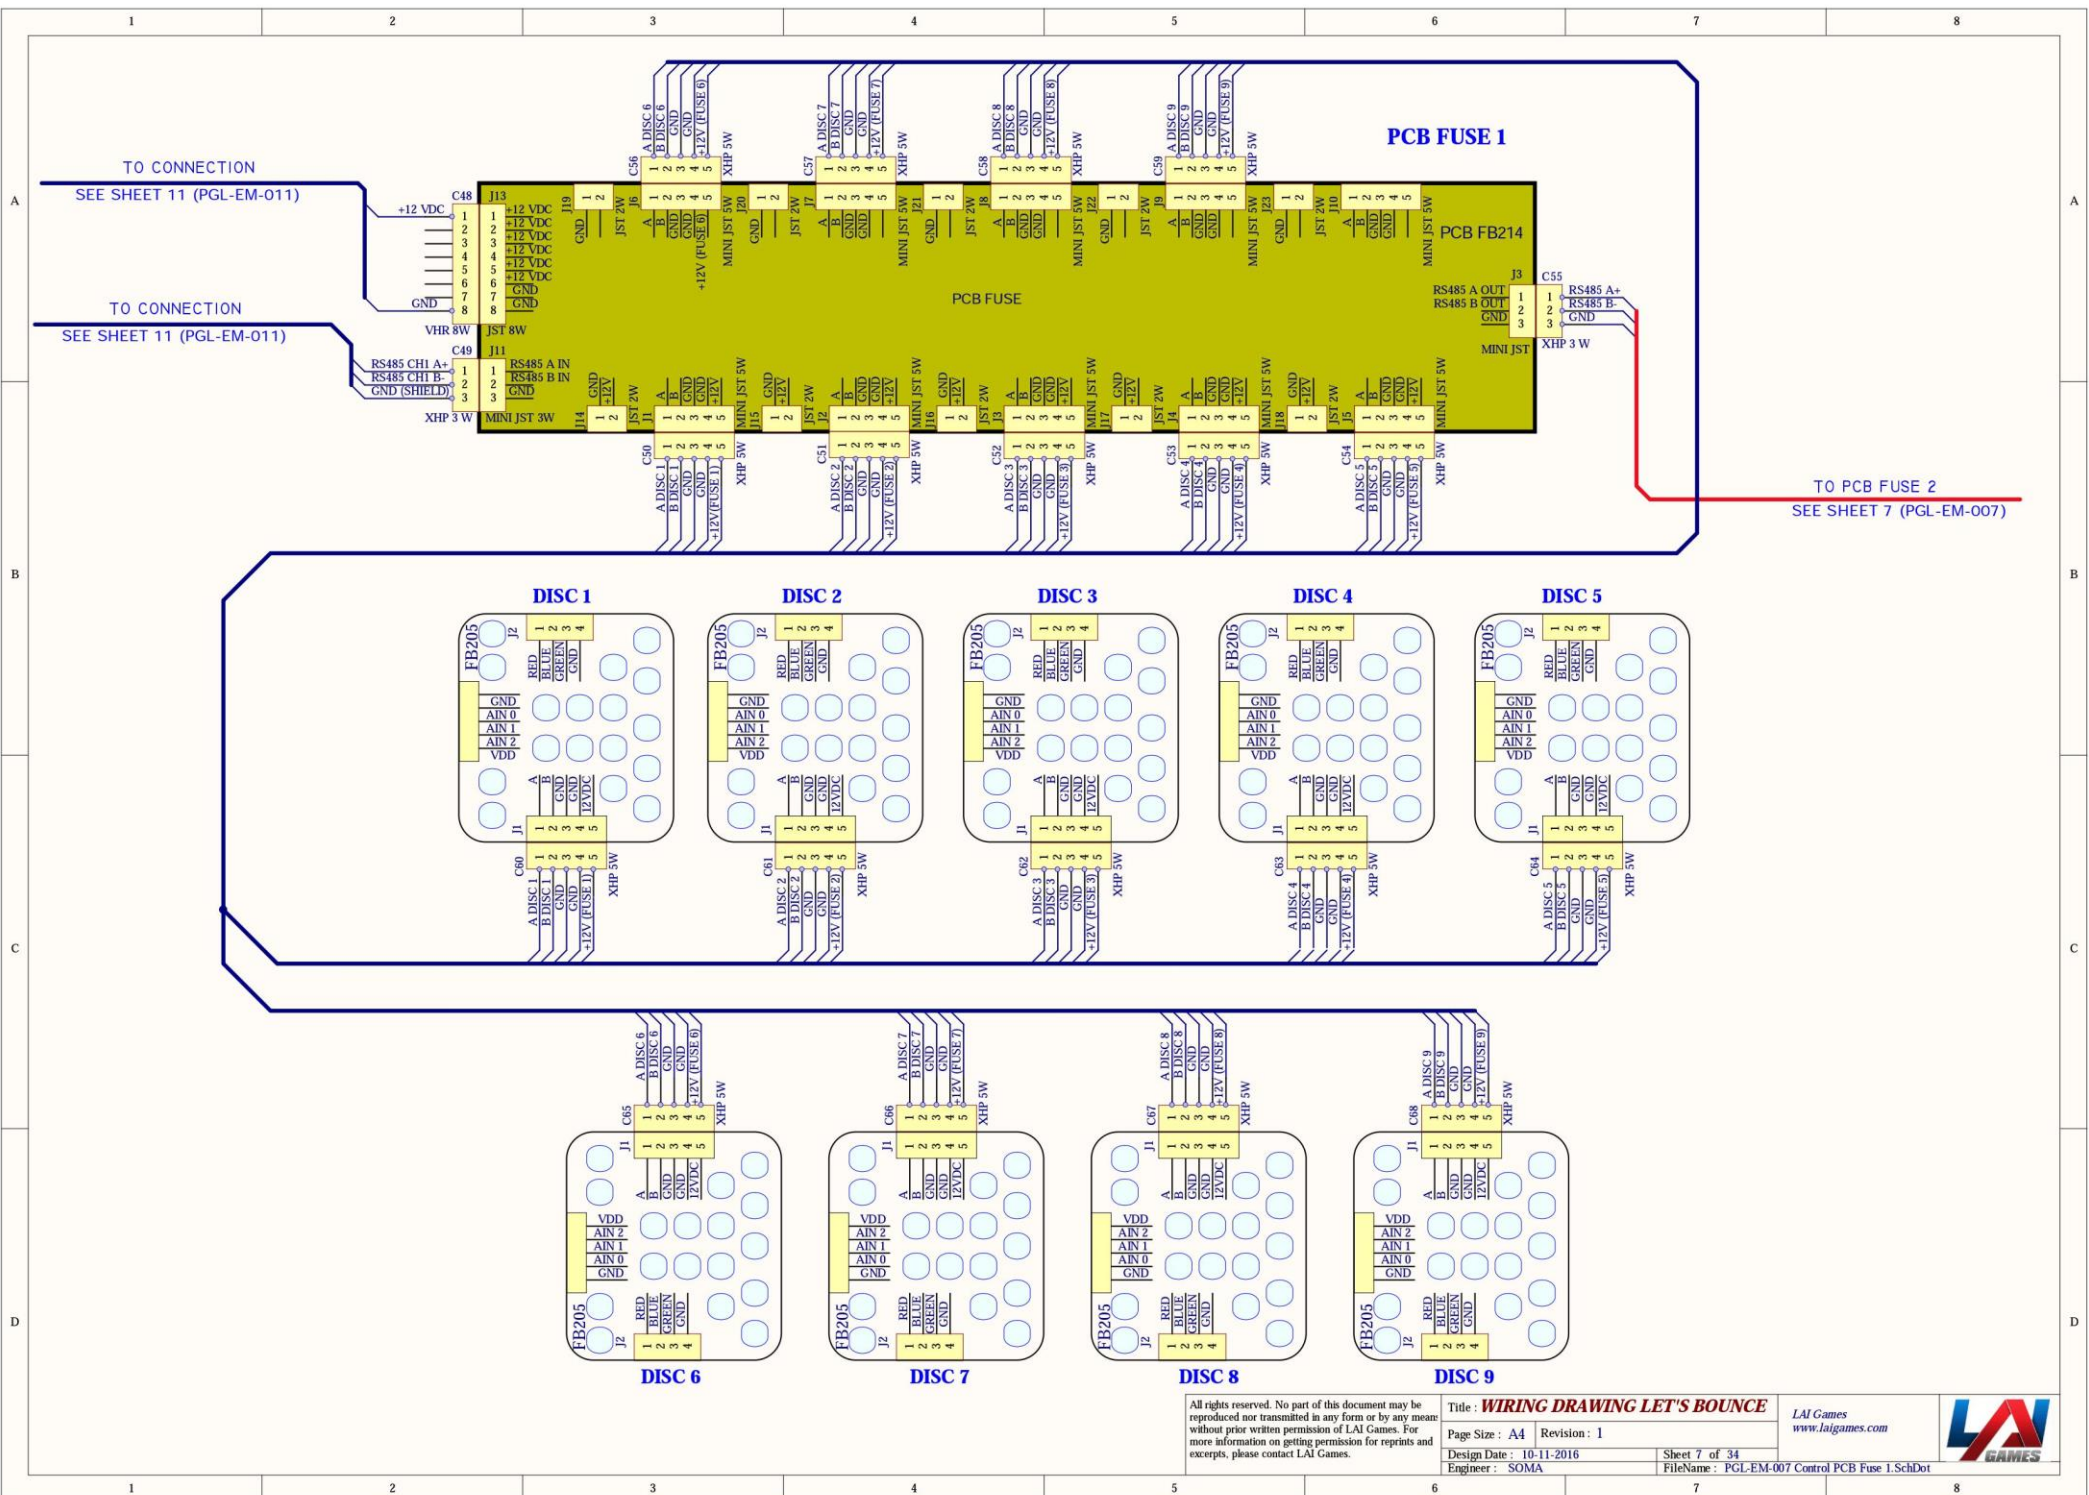

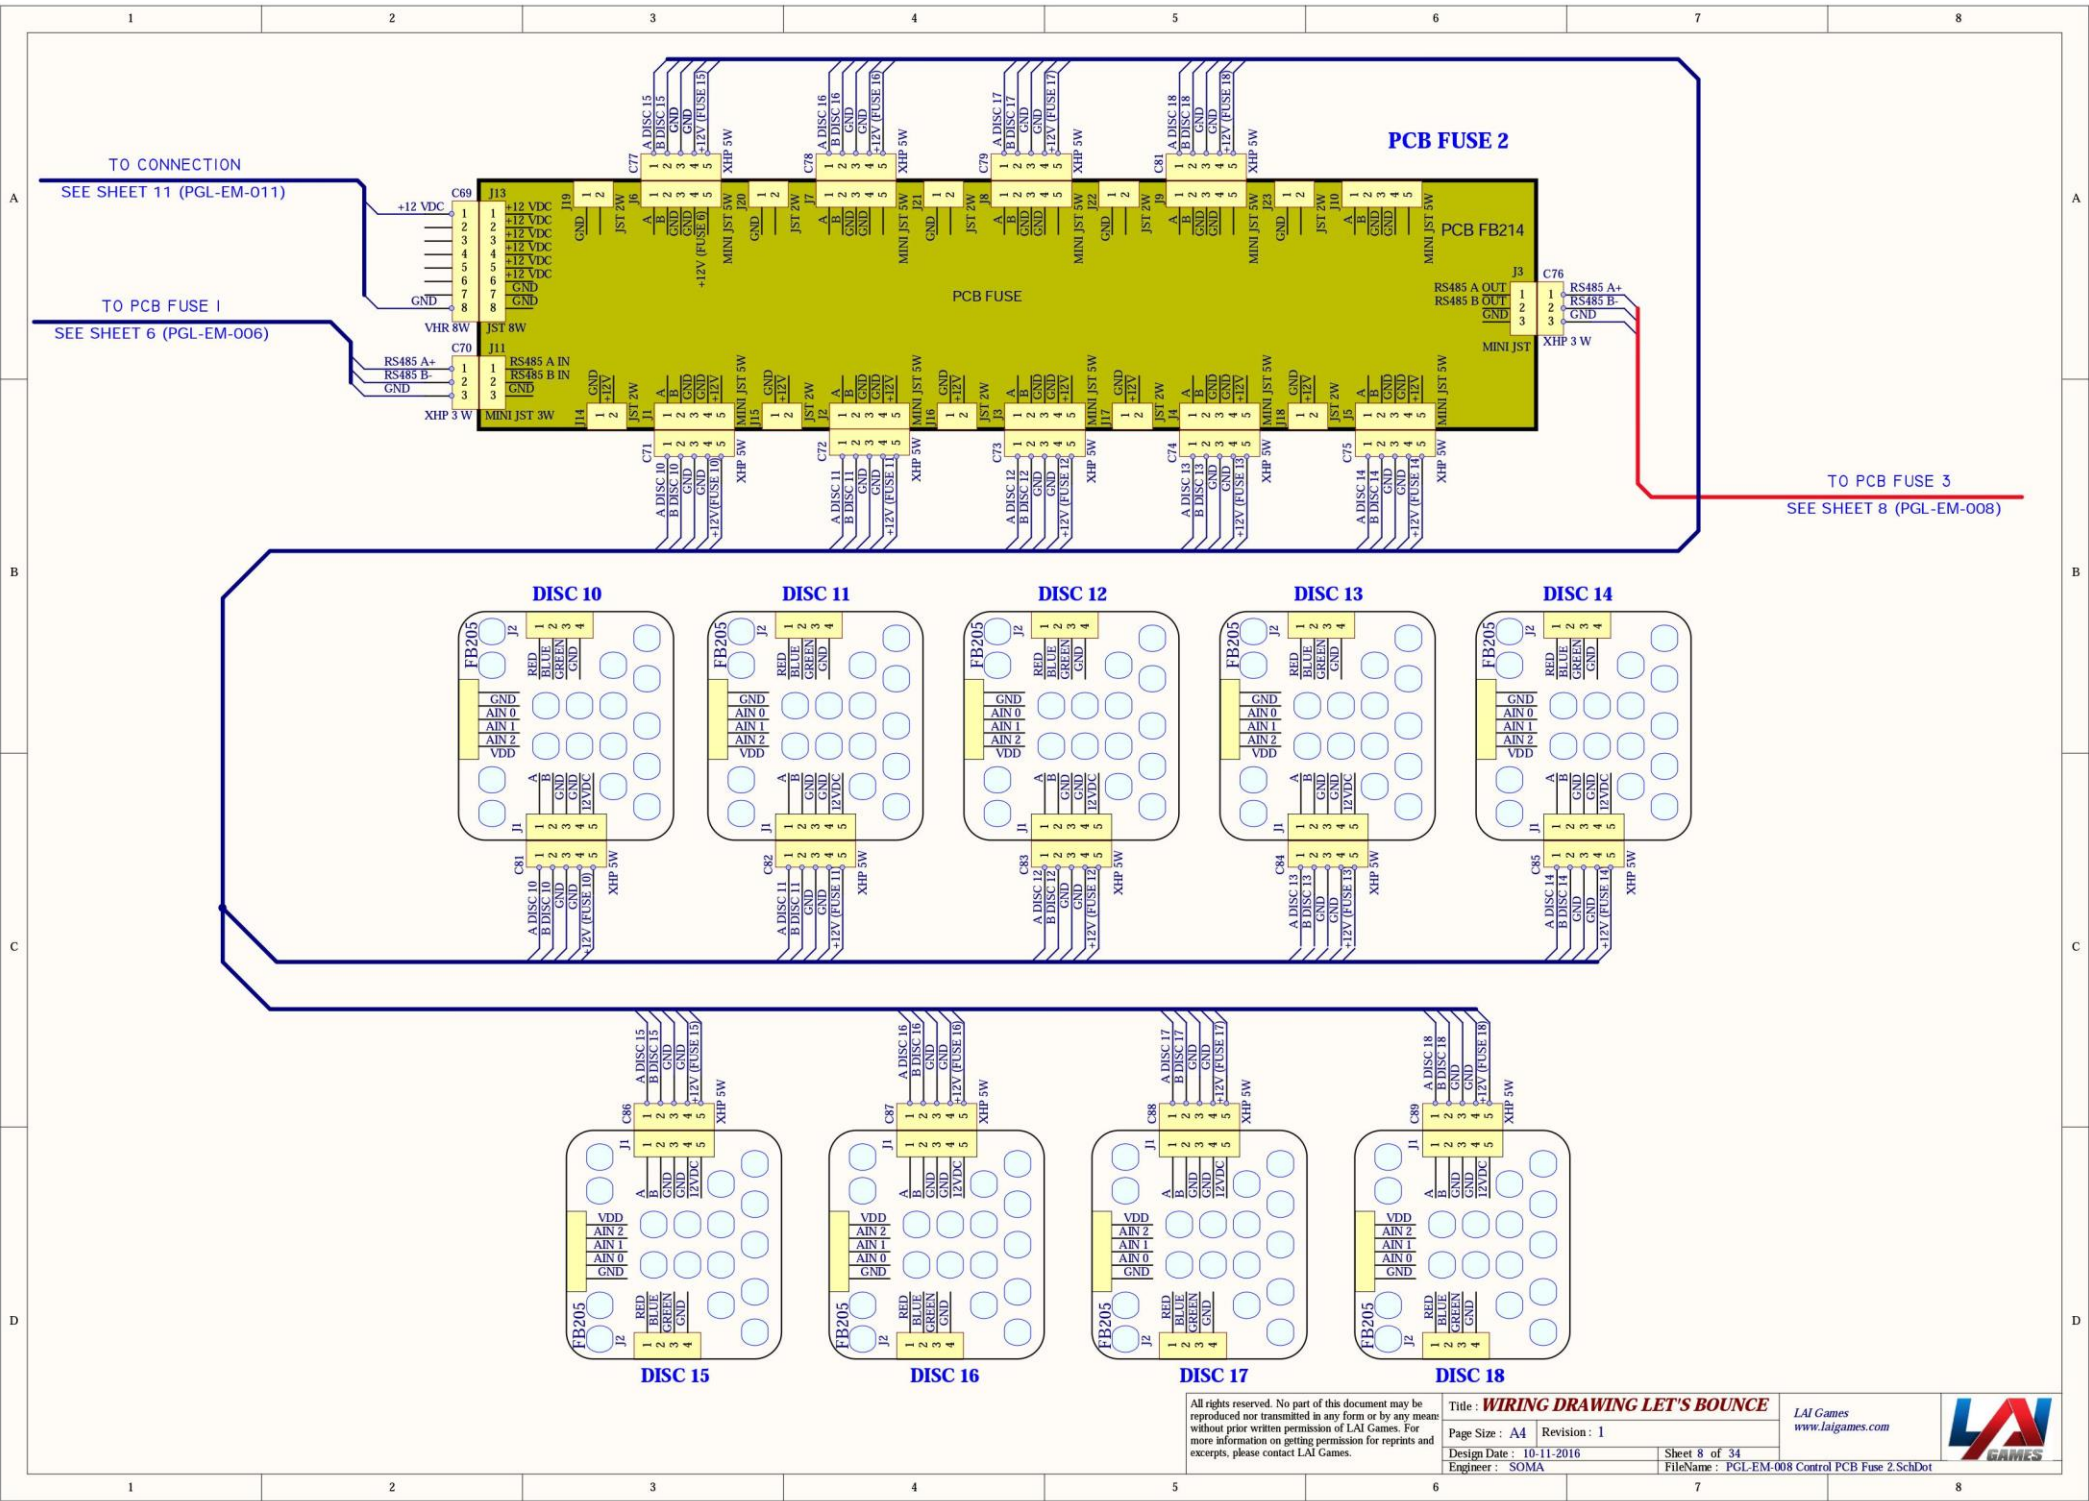


All rights reserved. No part of this document may be reproduced or transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title: **WIRING DRAWING LET'S BOUNCE**
 Page Size: A4 Revision: 1
 Design Date: 10-11-2016
 Engineer: SOMA

LAI Games
www.laigames.com

Sheet 8 of 34
 FileName: PGL-EM-008 Control PCB Fuse 2.SchDot



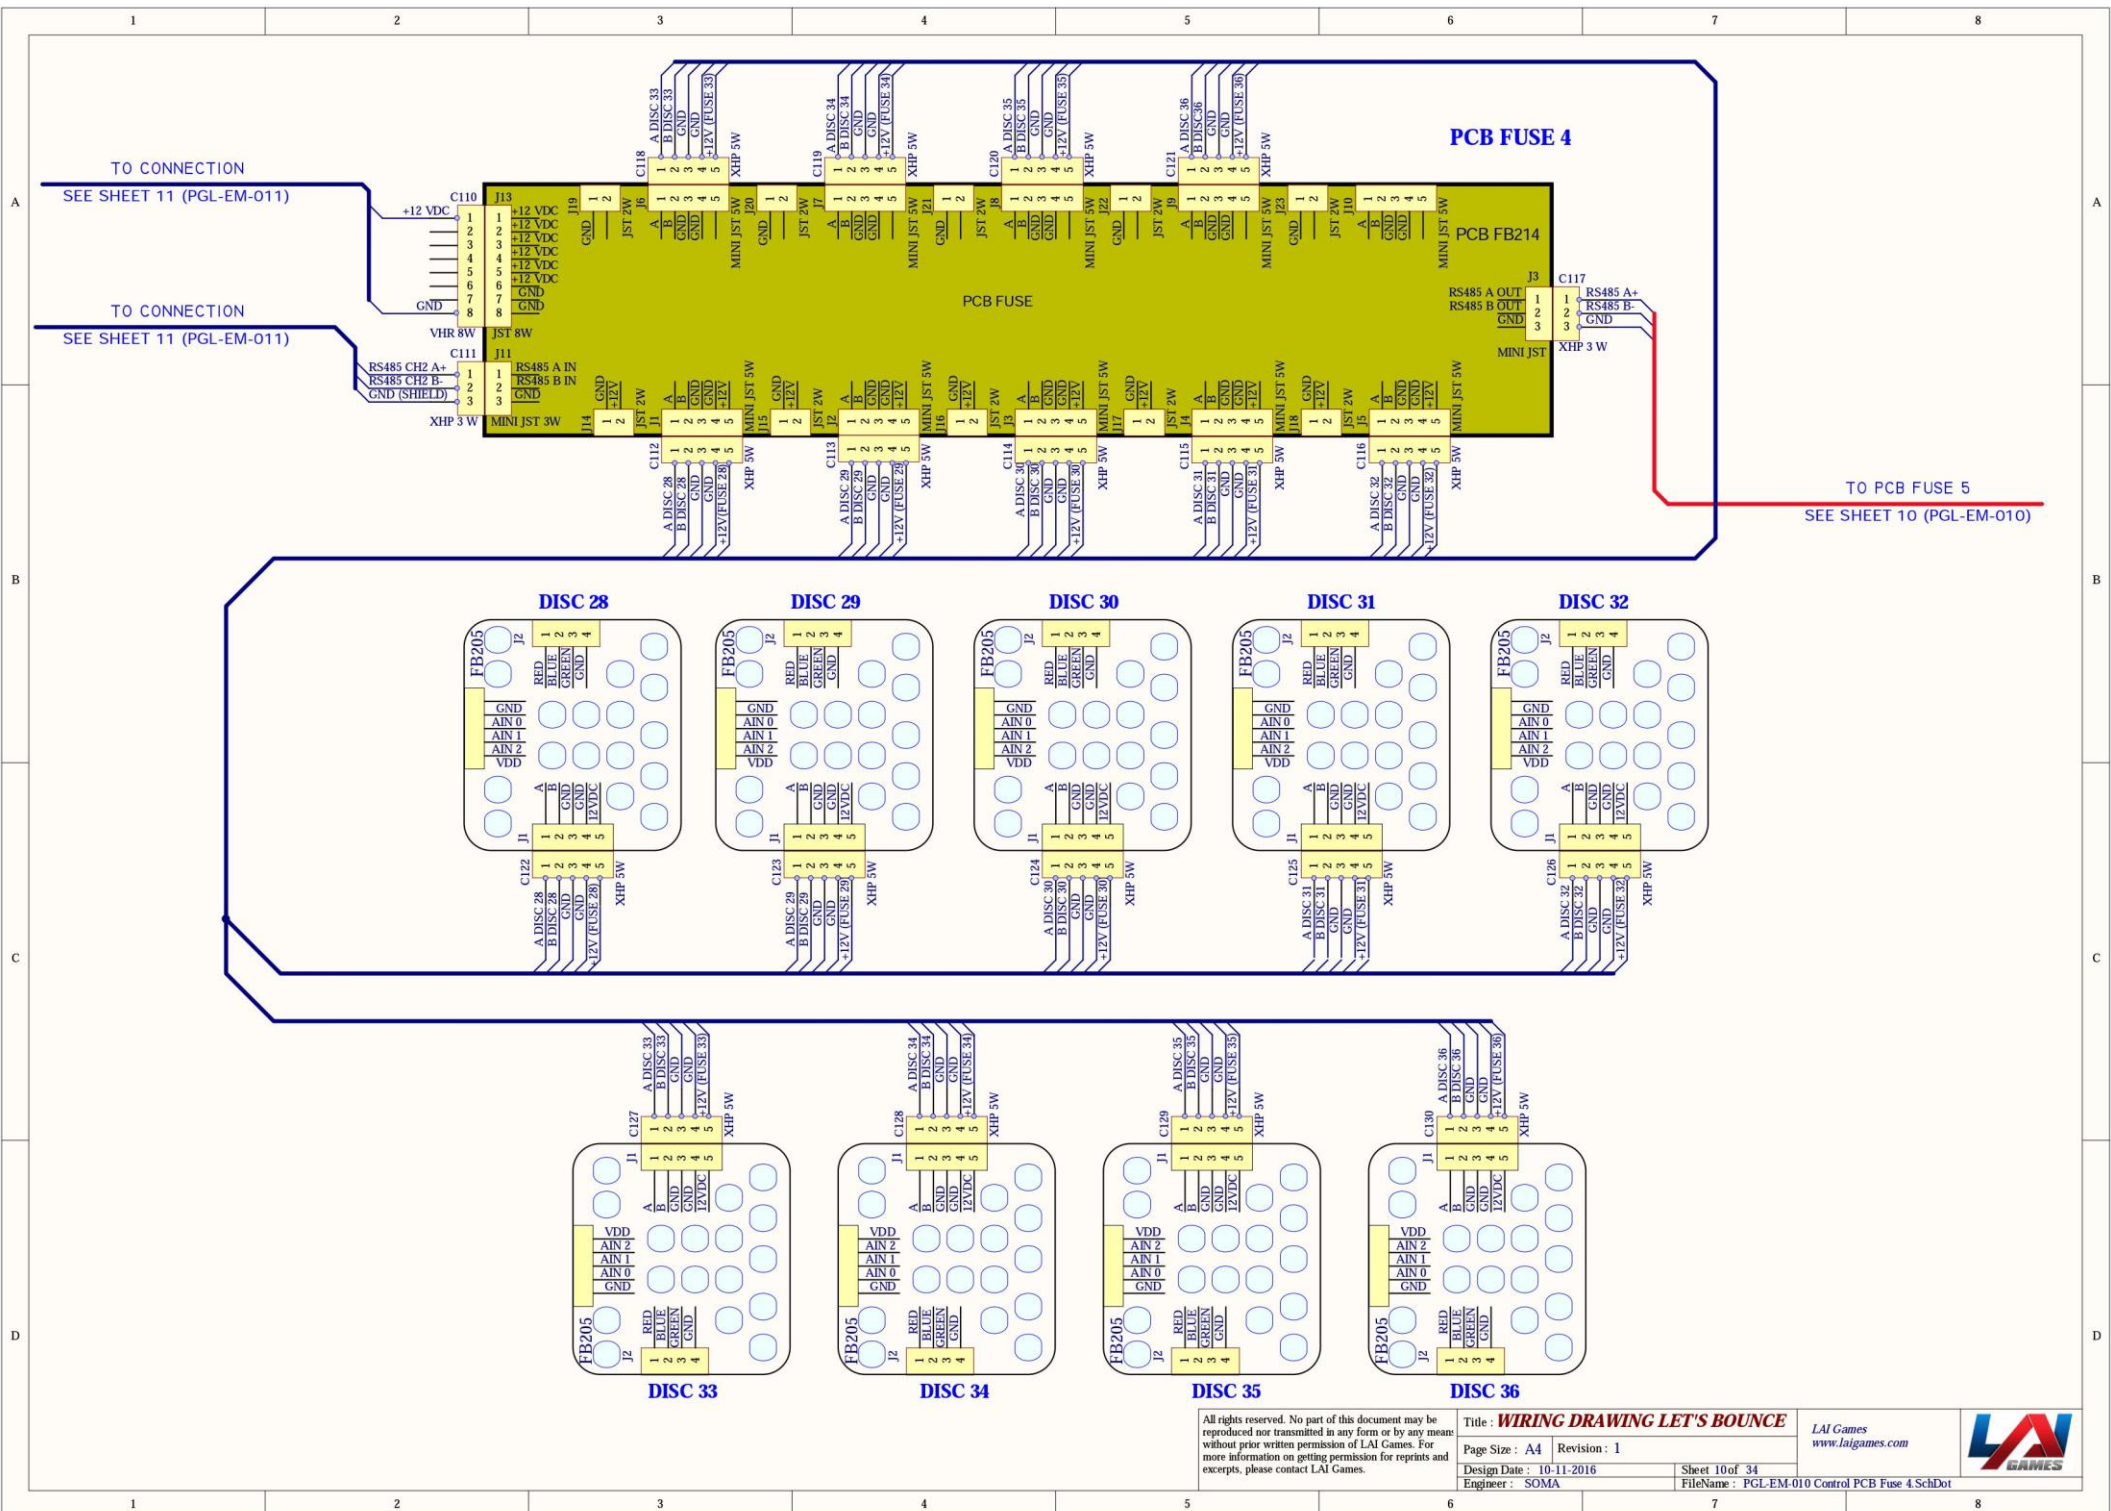


All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title: **WIRING DRAWING LET'S BOUNCE**
 Page Size: A4 Revision: 1
 Design Date: 10-11-2016
 Engineer: SOMA

LAI Games
 www.laigames.com
 Sheet 10 of 34
 FileName: PGL-EM-010 Control PCB Fuse 4.SchDot



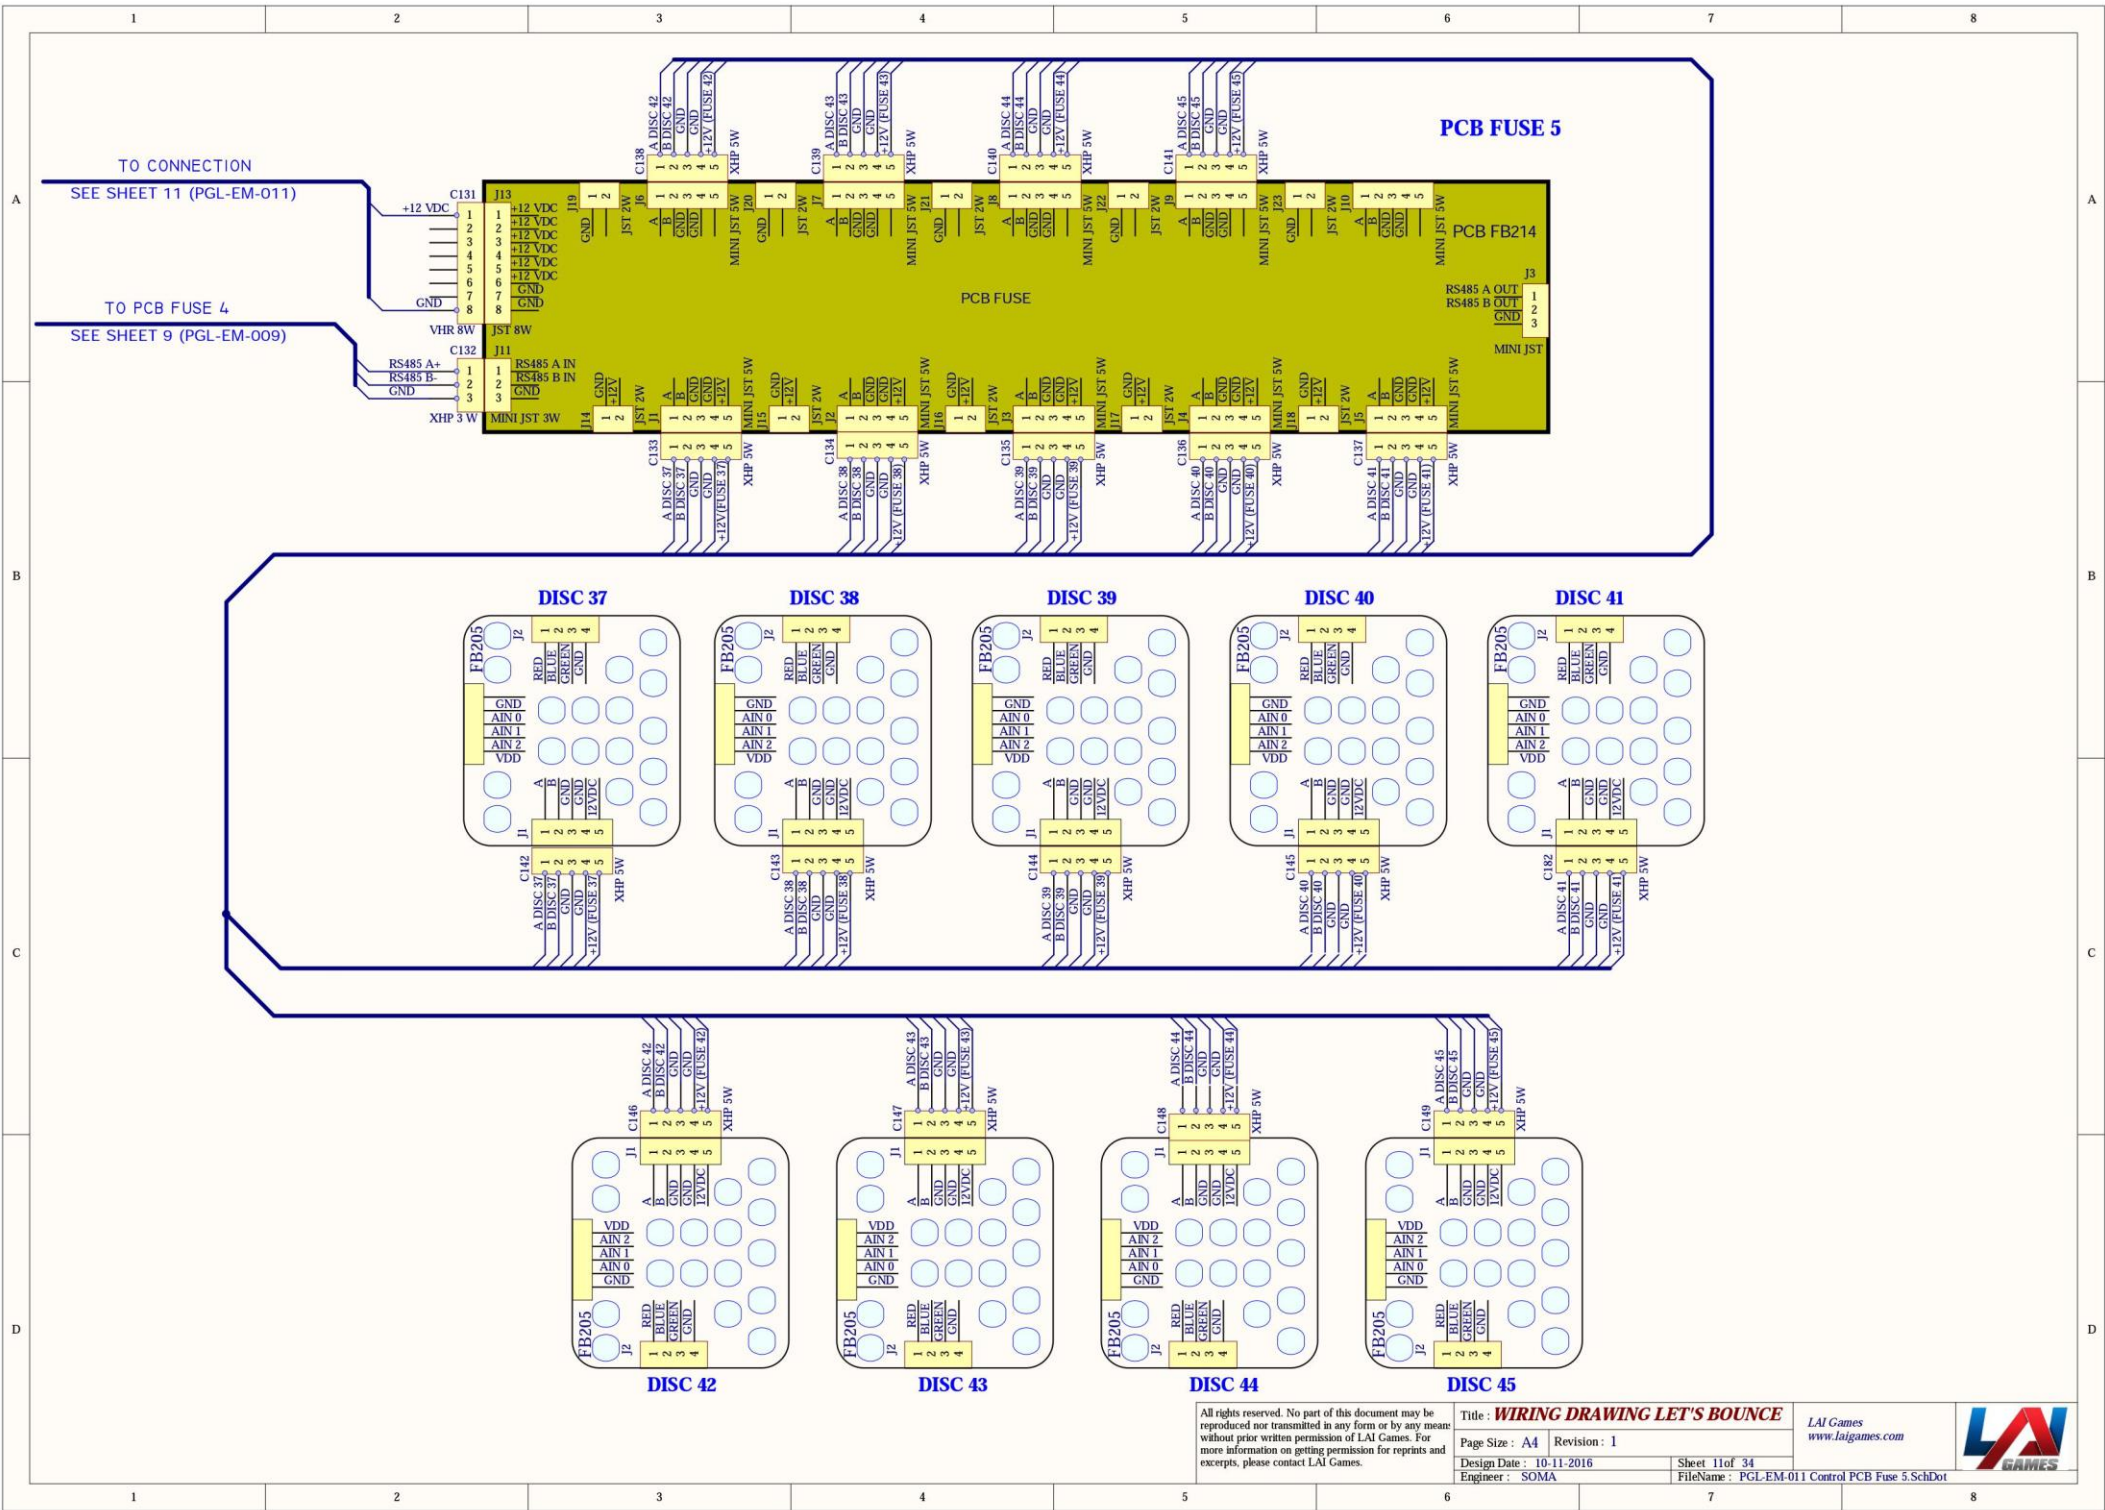


All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.



Title: **WIRING DRAWING LET'S BOUNCE**
 Page Size: A4 Revision: 1
 Design Date: 10-11-2016 Sheet 11of 34
 Engineer: SOMA FileName: PGL-EM-011 Control PCB Fuse 5_SchDot



CONNECTION MIDDLE R

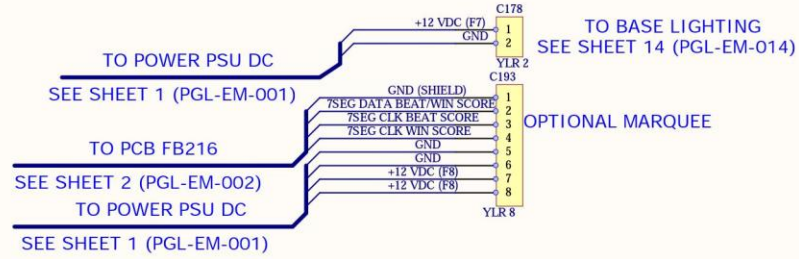

CONNECTION MIDDLE L

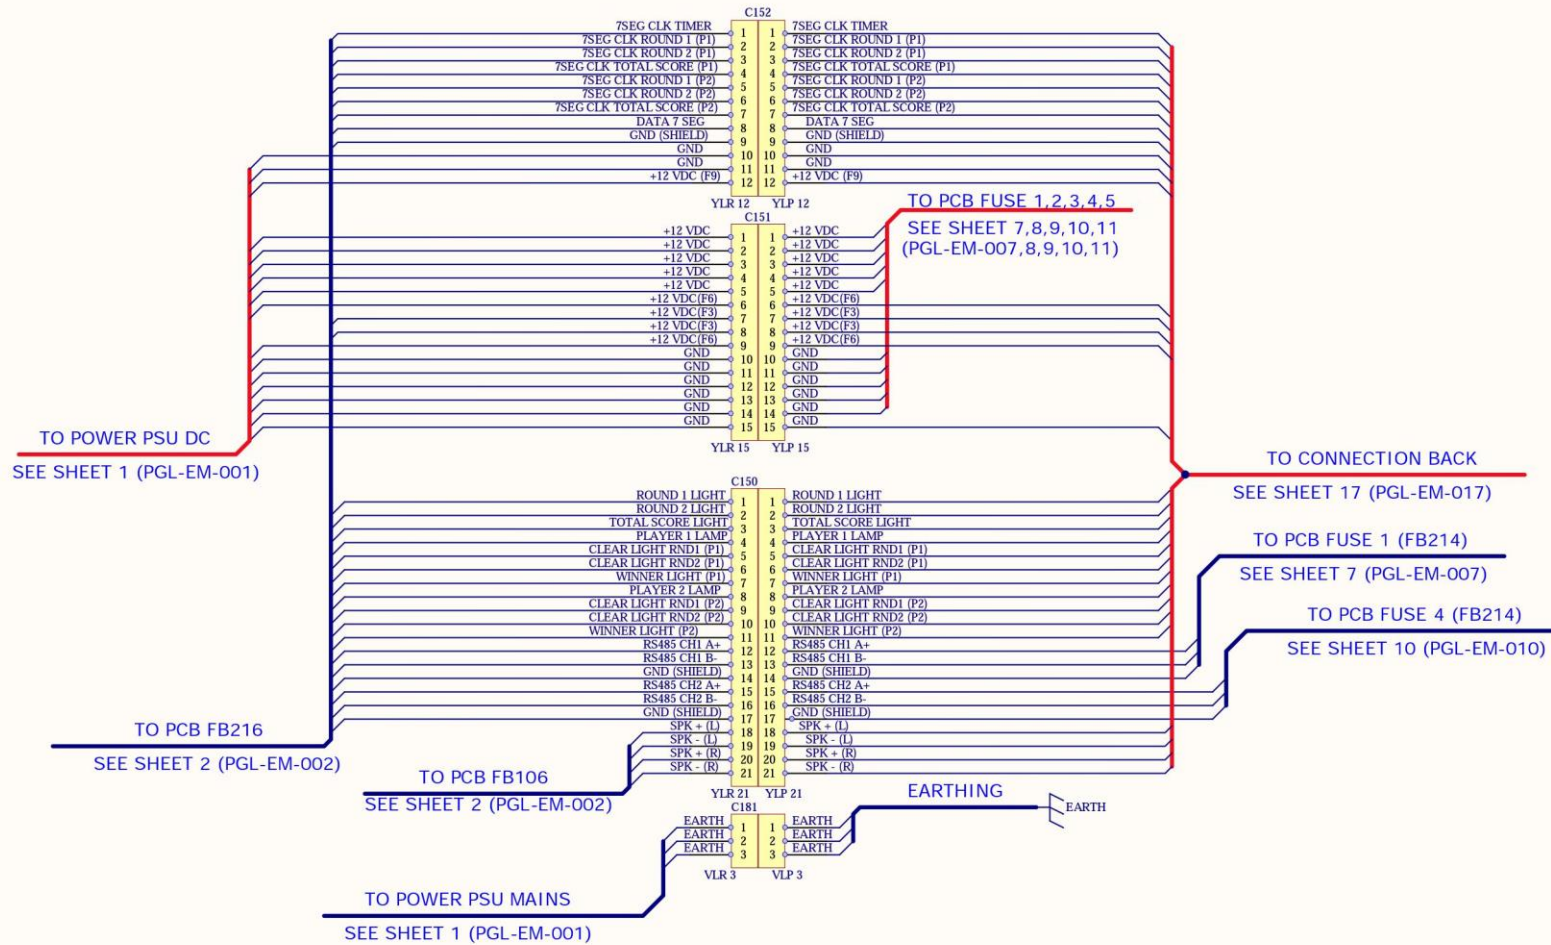


All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title WIRING DRAWING LET'S BOUNCE	
Page Size: A3	Revision: 1
Design Date: 10-11-2016	Sheet 12 of 34
Engineer: SOMA	FileName: PGL-EM-012 Connection Middle SchDoc

LAI Games
www.laigames.com



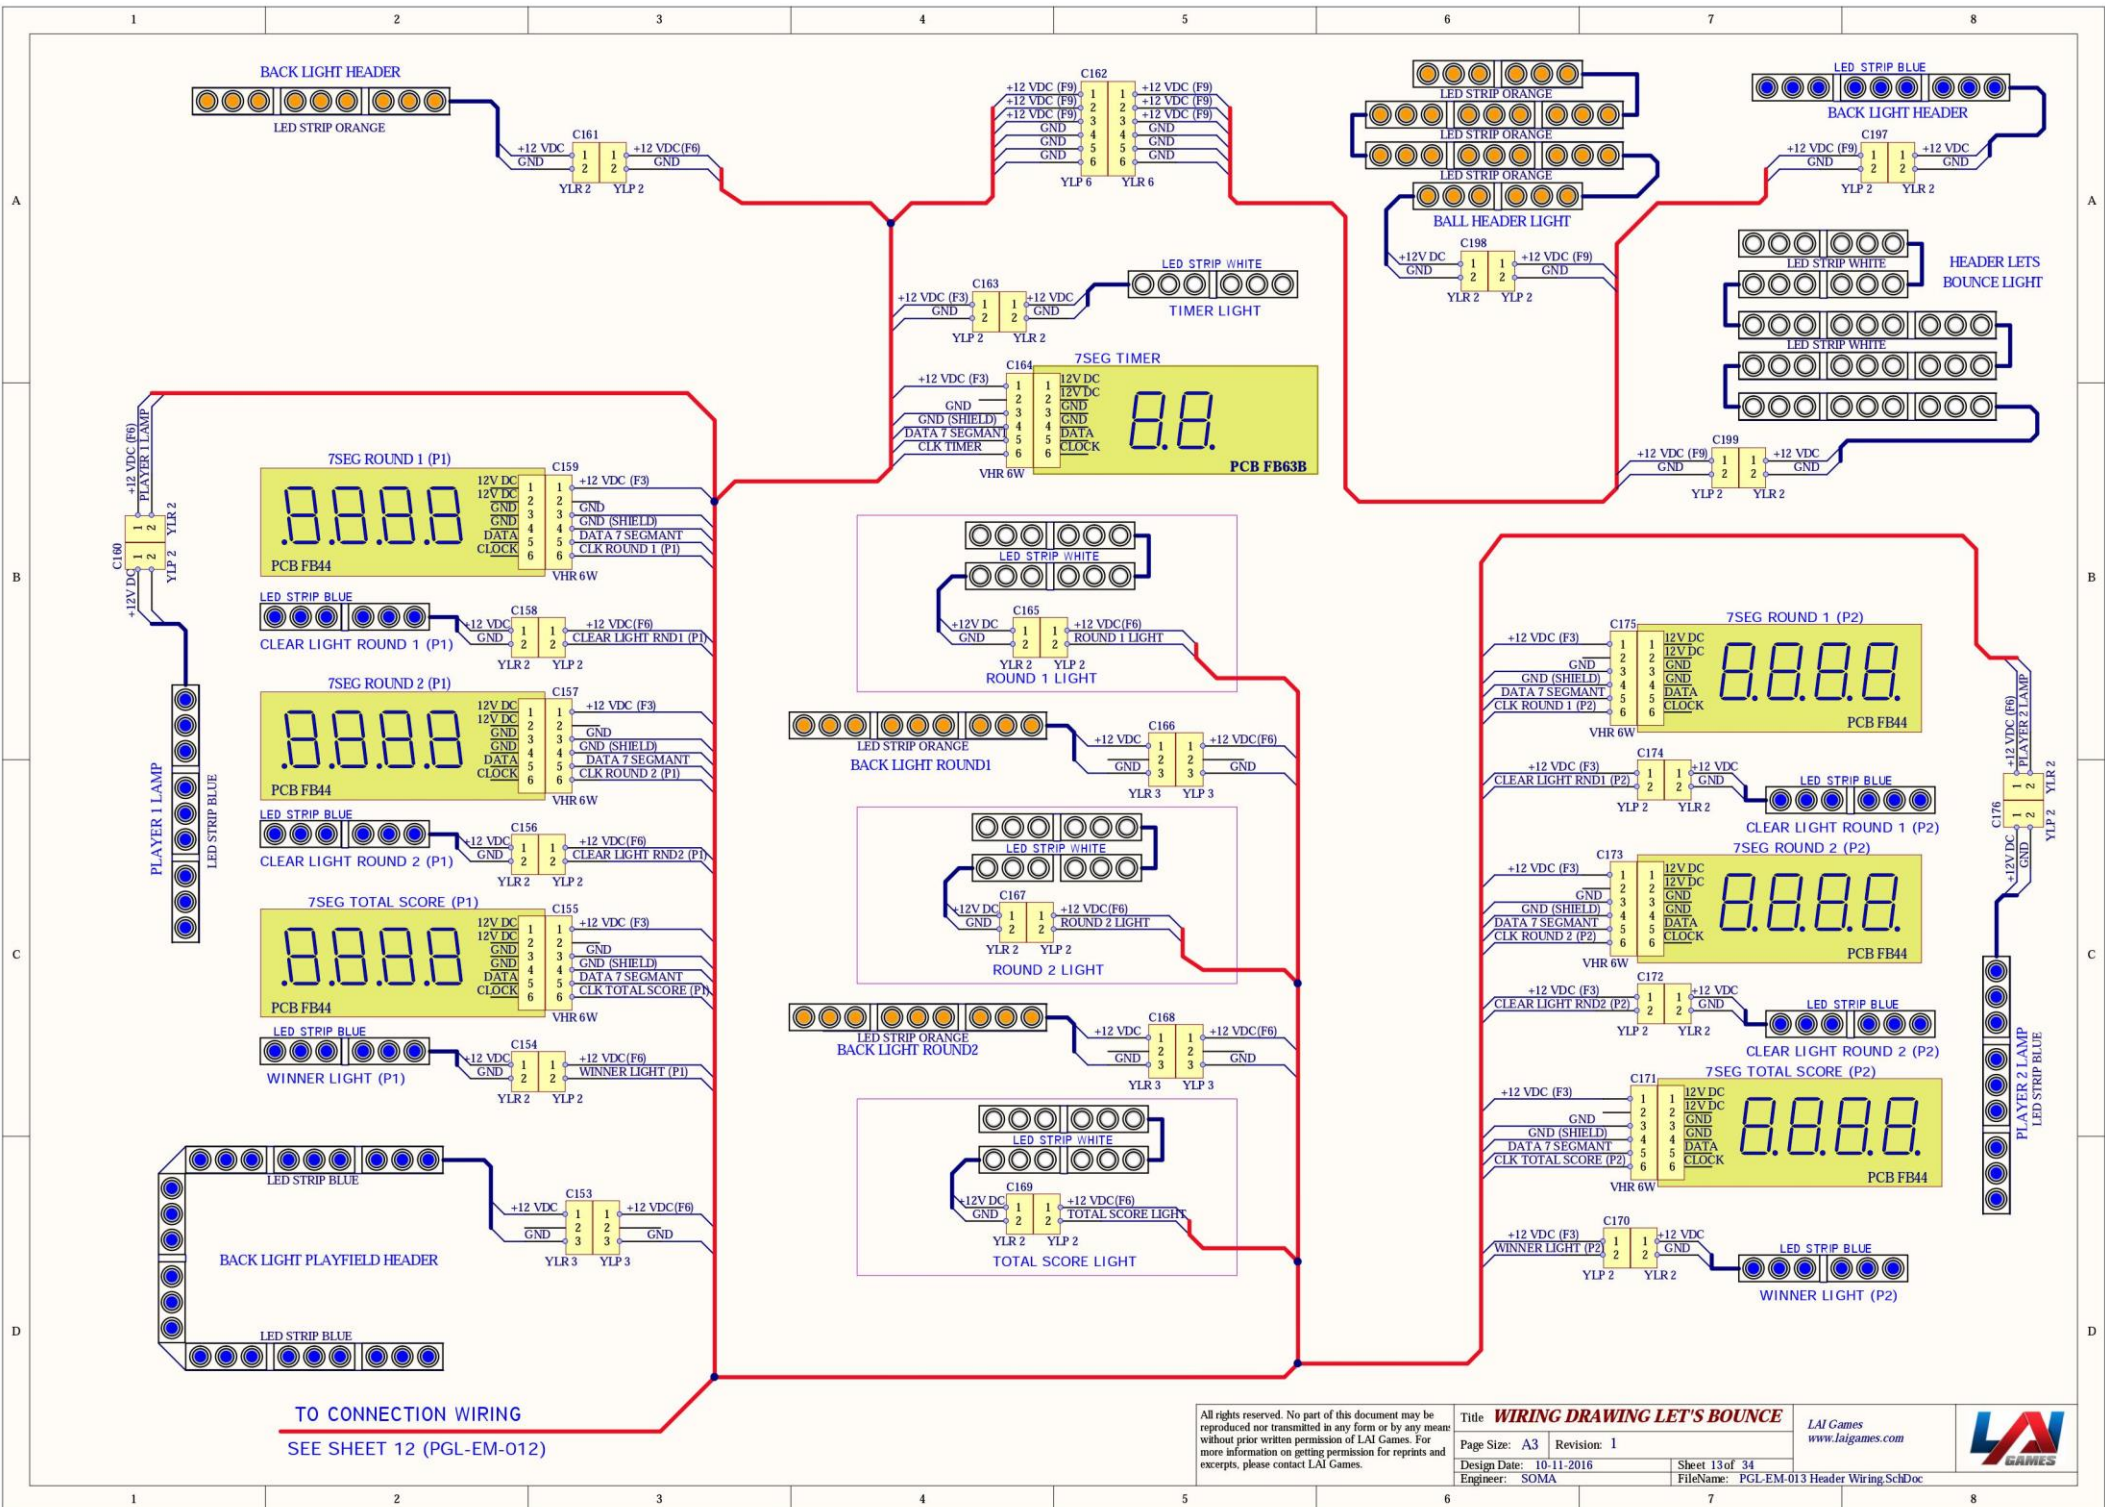

TO CONNECTION WIRING
SEE SHEET 12 (PGL-EM-012)

All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title **WIRING DRAWING LET'S BOUNCE**

Page Size: A3 Revision: 1

Design Date: 10-11-2016


Engineer: SOMA

LAI Games
www.laigames.com



Sheet 13 of 34

FileName: PGL-EM-013 Header Wiring.SchDoc

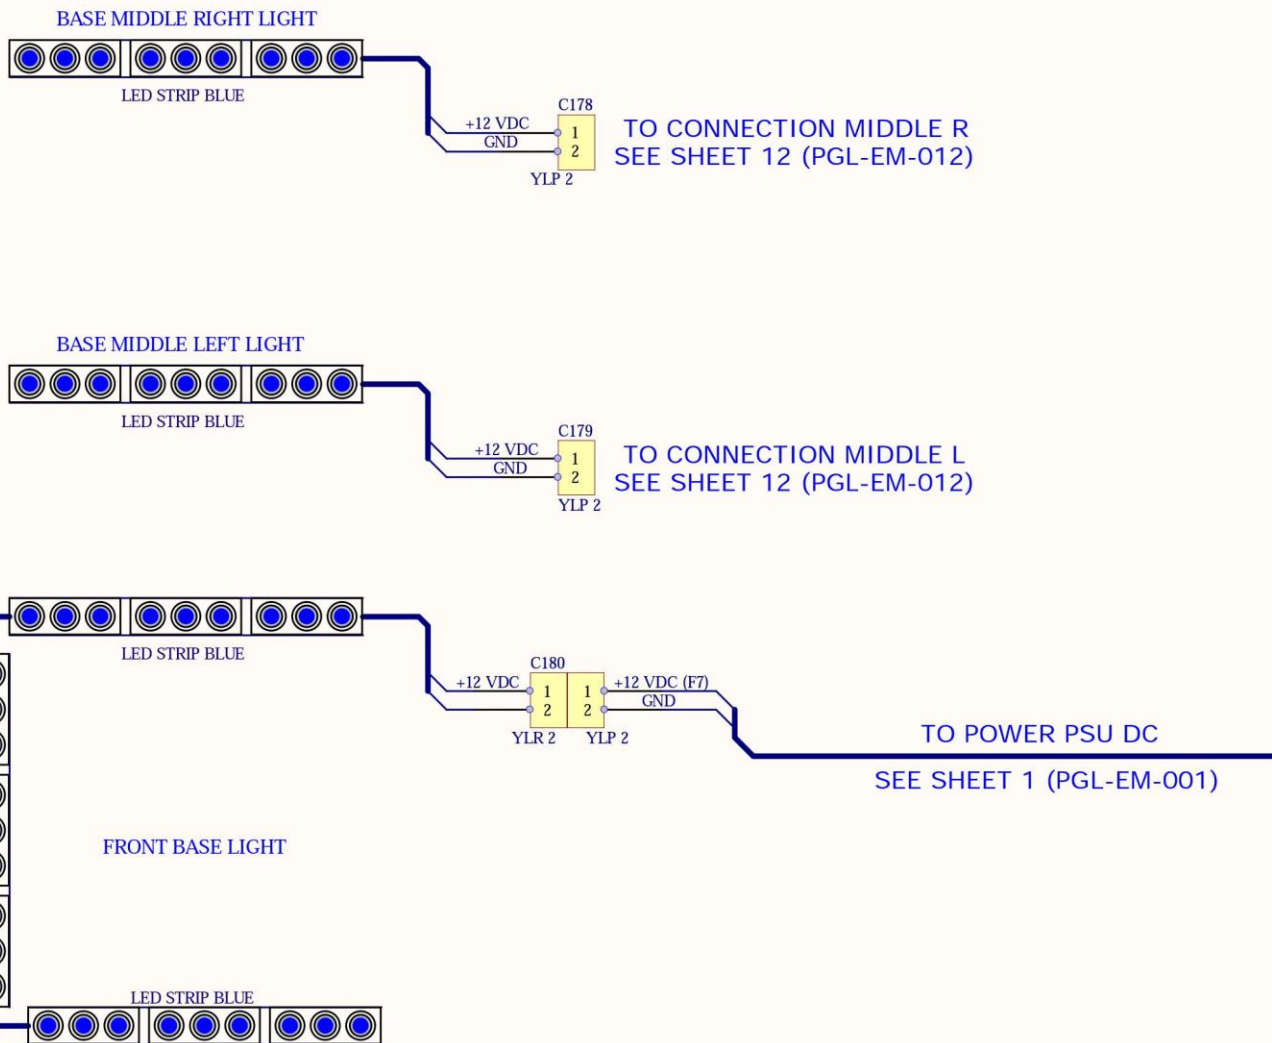

All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title **WIRING DRAWING LET'S BOUNCE**

LAI Games
www.laigames.com

Page Size: A3 Revision: 1

Design Date: 10-11-2016

Sheet 14 of 34

Engineer: SOMA


FileName: PGL-EM-014 Base Lighting.SchDoc



(OPTIONAL)
WIRING FOR COIN DOOR
WITH IDC NRI G.13

FOR OPTIONAL IDC NRI G.13

NOTE:-
PIN 1 = BLACK
PIN 2 = YELLOW
PIN 3 =
PIN 4 =
PIN 5 =
PIN 6 = BLACK
PIN 7 =
PIN 8 =
PIN 9 = COIN 1
PIN 10 = COIN 2

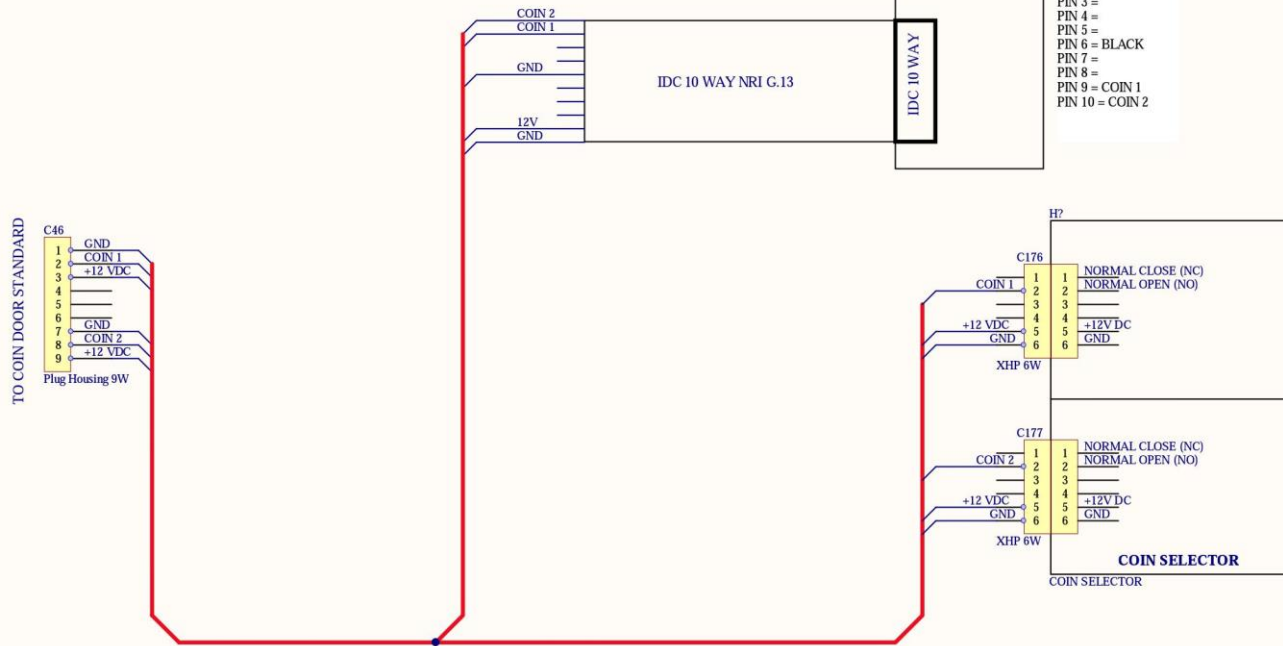

All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title **WIRING DRAWING LET'S BOUNCE**
Page Size: A3 Revision: 1
Design Date: 10-11-2016 Sheet 15 of 34
Engineer: SOMA FileName: PGL-EM-015 Optional Coin Selector SchDoc

LAI Games
www.laigames.com



1

2

3

4

A

A

B





B

C

C

D



D

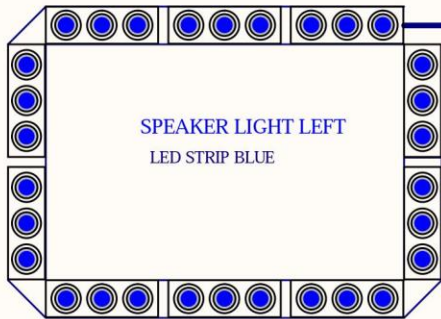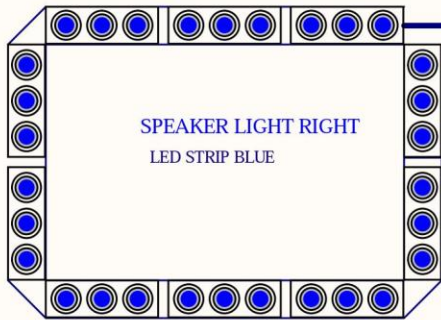

TO CONNECTION WIRING
SEE SHEET 11 (PGL-EM-011)

TO CONNECTION WIRING
SEE SHEET 11 (PGL-EM-011)

TO CONNECTION WIRING
SEE SHEET 11 (PGL-EM-011)

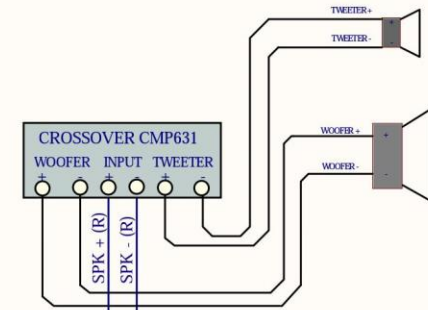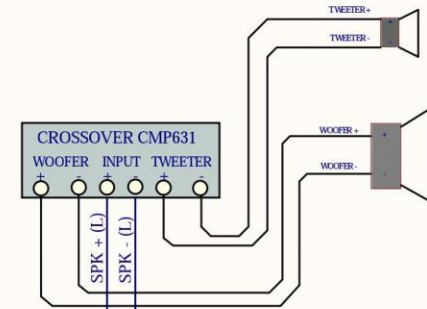

All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title : **WIRING DRAWING LET'S BOUNCE**

LAI Games
www.laigames.com

Page Size : A4 Revision : 1

Design Date : 10-11-2016

Sheet 16 of 34

Engineer : SOMA

FileName : PGL-EM-016 Speaker.SchDoc




1

2

3

4

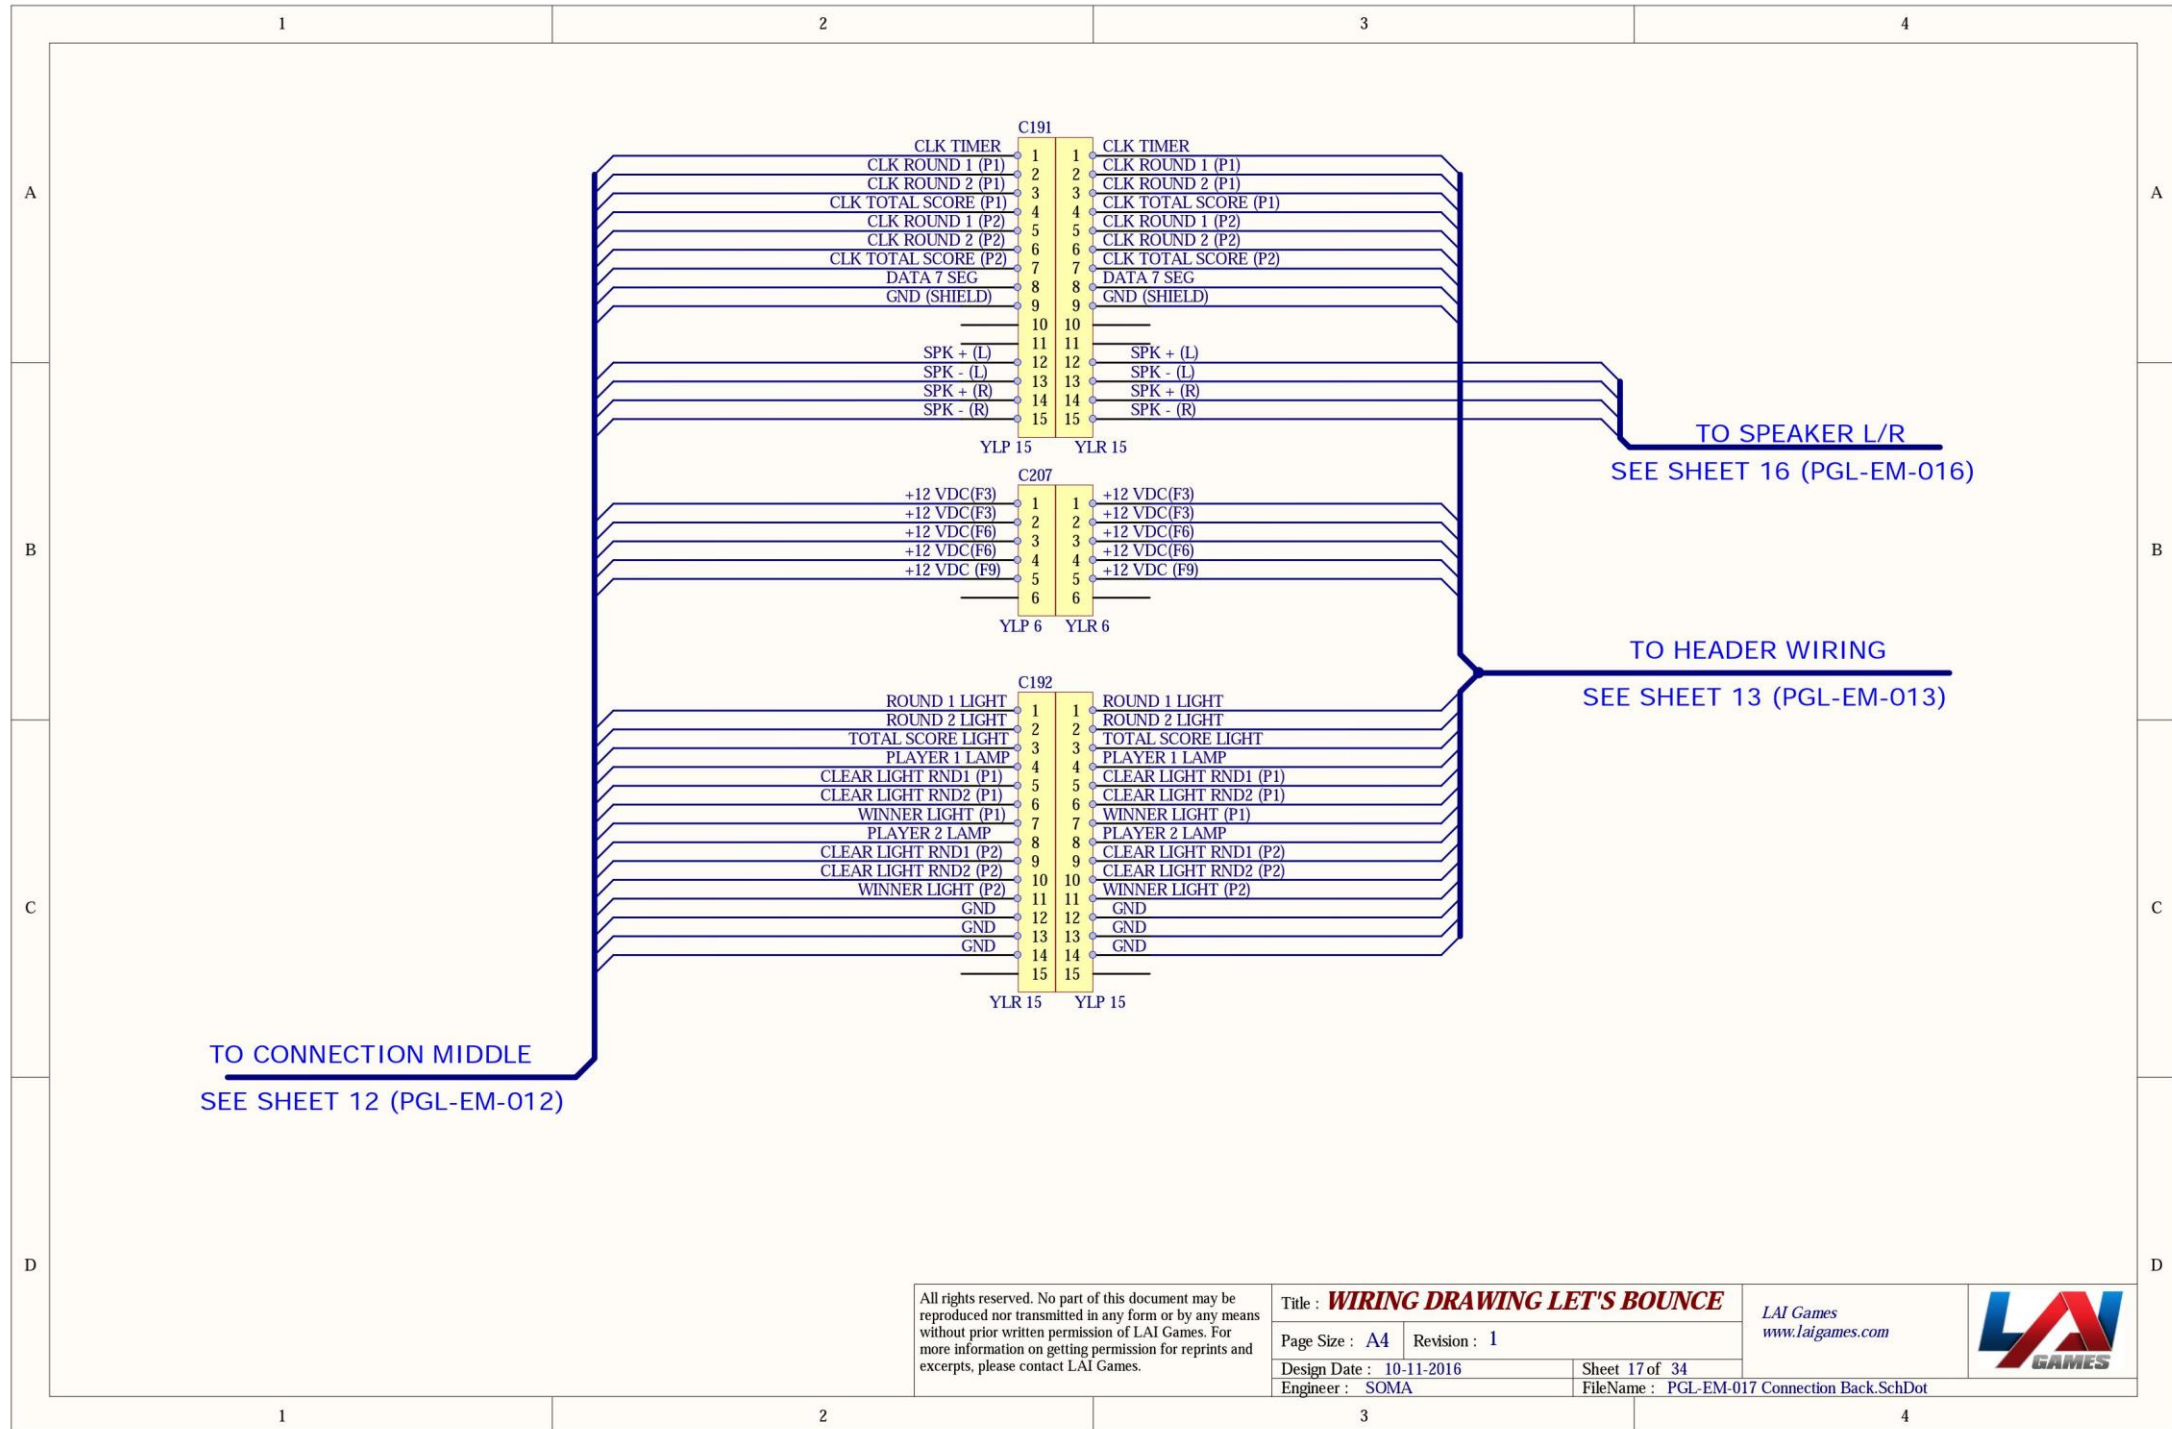

All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title : **WIRING DRAWING LET'S BOUNCE**

LAI Games
www.laigames.com

Page Size : A4 Revision : 1

Design Date : 10-11-2016

Sheet 17 of 34


Engineer : SOMA

FileName : PGL-EM-017 Connection Back.SchDot



COIN ENABLE OPTIONAL

TO COIN DOOR CONNECTION

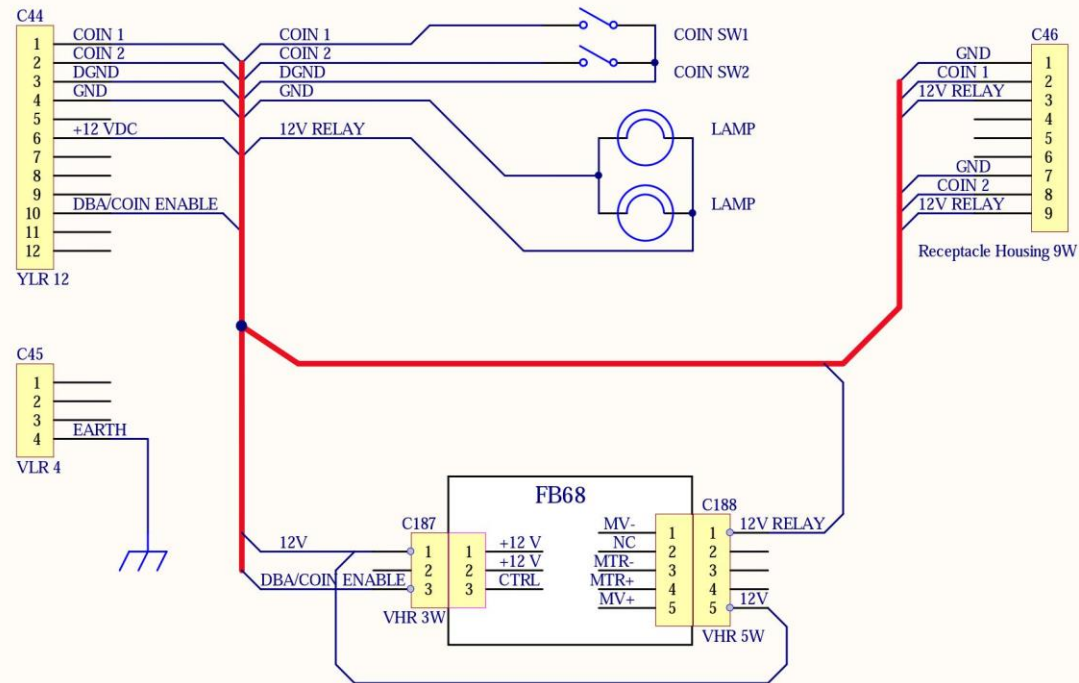

All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title **WIRING DRAWING LET'S BOUNCE**

LAI Games
www.laigames.com

Page Size: A3 Revision: 1

Design Date: 10-11-2016


Sheet 18 of 34

Engineer: SOMA

FileName: PGL-EM-018 Optional Coin Enable.SchDoc



OPTIONAL DBA ENABLE MARS BILL ACCEPTOR (AE-2654-U5)

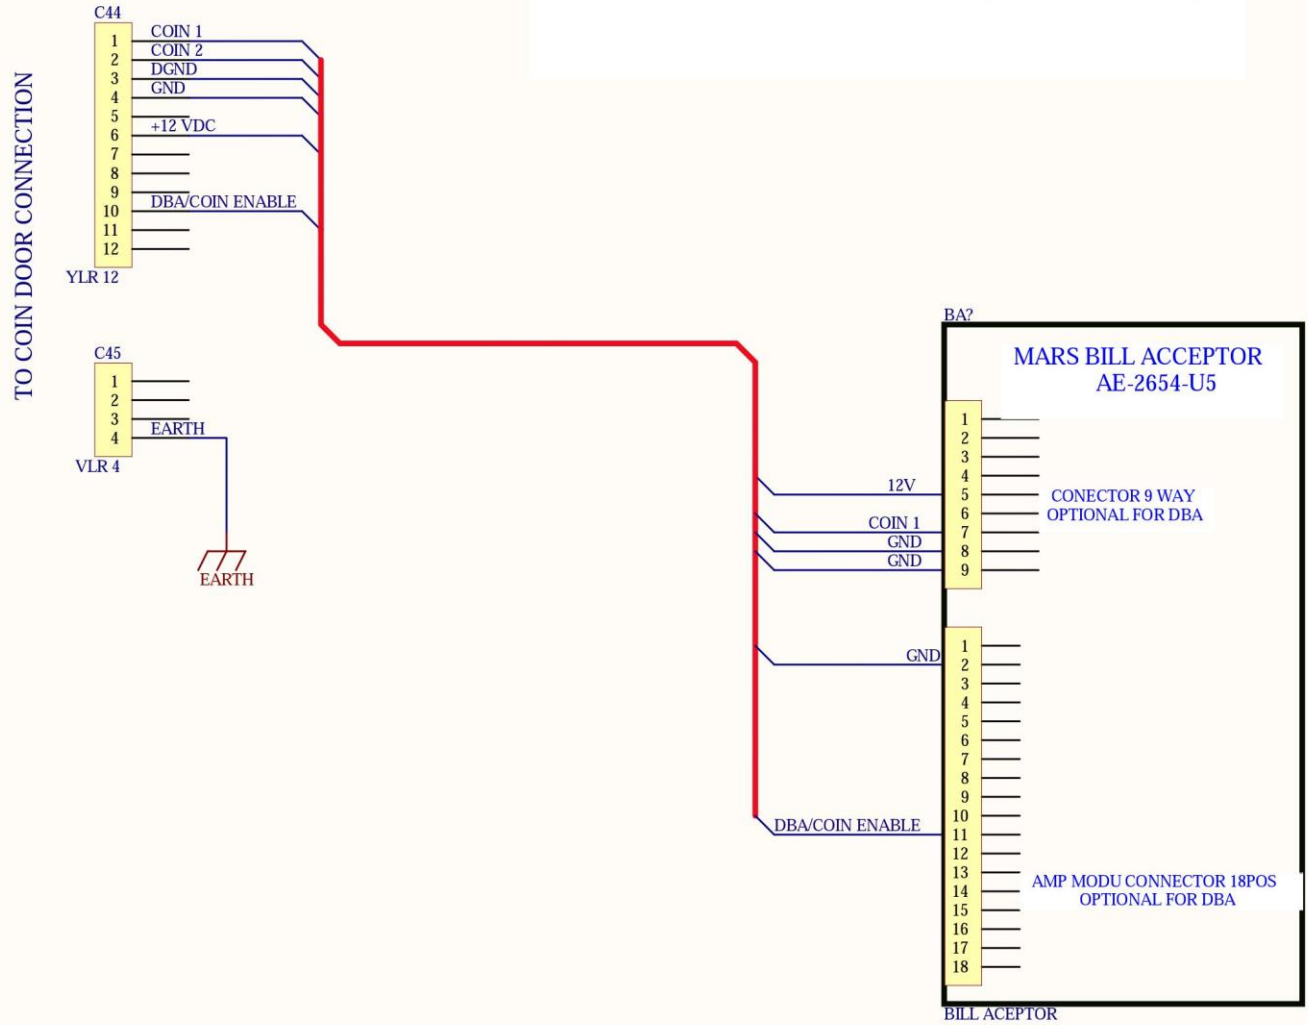

All rights reserved. No part of this document may be reproduced nor transmitted in any form or by any means without prior written permission of LAI Games. For more information on getting permission for reprints and excerpts, please contact LAI Games.

Title **WIRING DRAWING LET'S BOUNCE**

LAI Games
www.laigames.com

Page Size: A3 Revision: 1

14:33:40 10-11-2016 Sheet 19 of 34

Engineer: SOMA


FileName: PGL-EM-019 Optional DBA Enable.SchDoc



MECHANICAL ILLUSTRATIONS


MAIN ASSEMBLY

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Let's Bounce - Front Panel	PG1-Assy-01-R0	1
2	Let's Bounce - Playfield	PG1-Assy-27-R0	1
3	Let's Bounce - Display Panel	PG1-Assy-19-R0	1
4	Let's Bounce - Side Wall R	PG1-Assy-25-R0	1
5	Let's Bounce - Side Wall L	PG1-Assy-26-R0	1

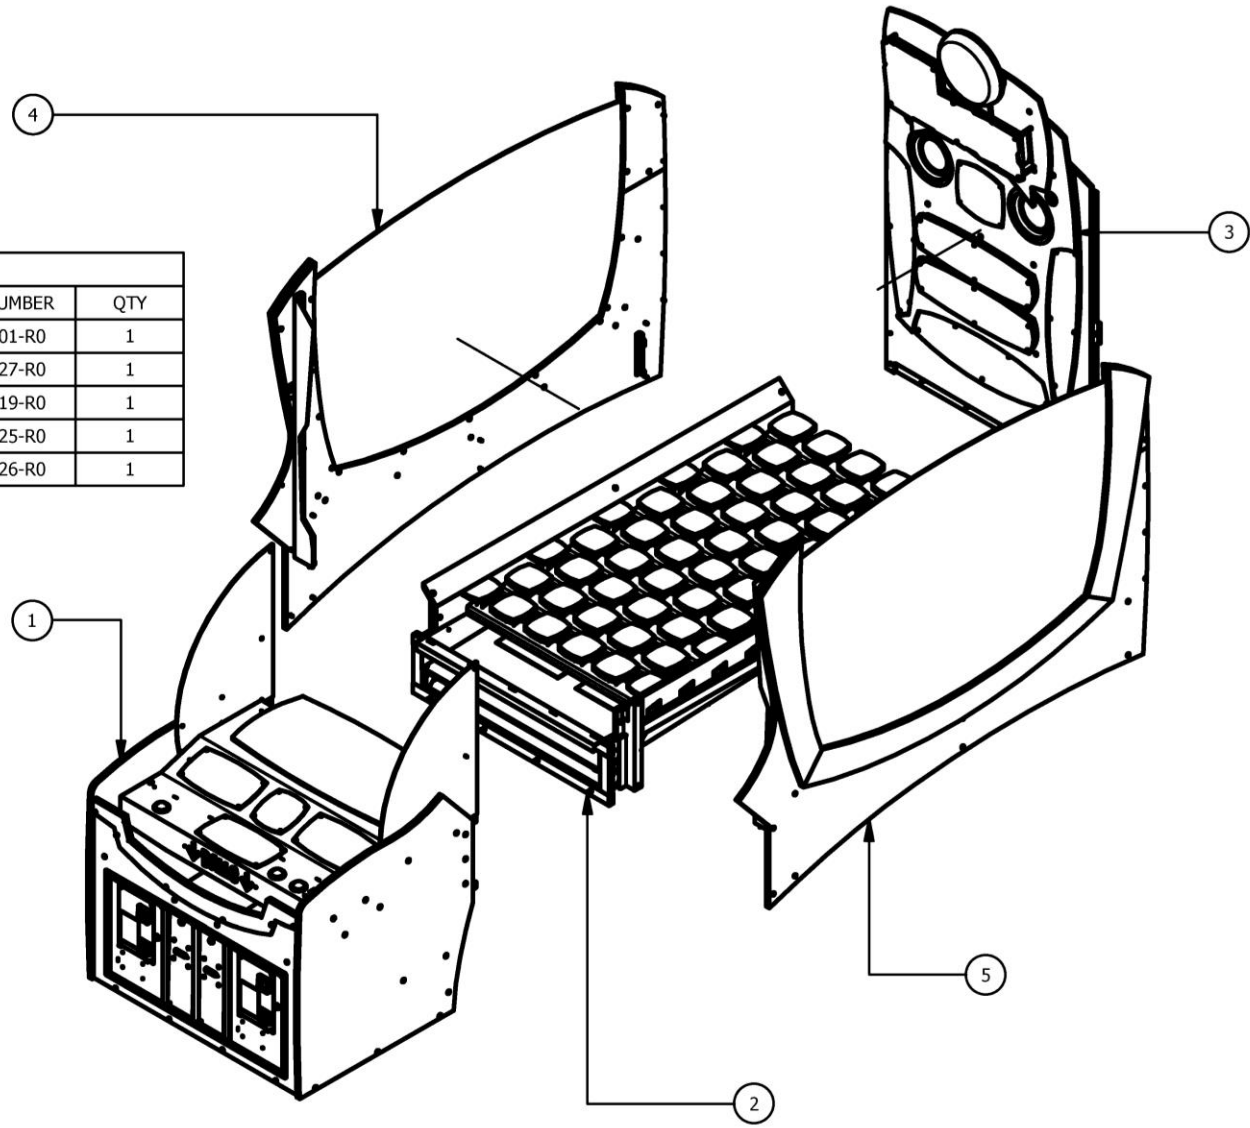


FRONT PANEL

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Let's Bounce - Base Front Panel	PG1-Assy-06-R0	1
2	Ticket Holder	PG1-FM-041-R0	2
3	Let's Bounce - Cash Box	PG1-Assy-07-R0	2
4	Let's Bounce - Operator Panel	PG1-Assy-14-R0	1
5	Let's Bounce - Panel Door	PG1-Assy-02-R0	1
6	Front Enclosure Side L	PG1-FW-003-R0	1
7	Front Enclosure Side R	PG1-FW-004-R0	1
8	Let's Bounce - Stoper Player Panel R	PG1-Assy-17-R0	1
9	Let's Bounce - Stoper Player Panel L	PG1-Assy-18-R0	1
10	Lower Frame Structure	PG1-FM-042-R1	1
11	Top Frame Structure	PG1-SA-007-R1	1
12	Gate Wall Main	PG1-FW-005-R0	1
13	Let's Bounce - Ball Gate	PG1-Assy-09-R0	1
14	Let's Bounce - Ball Lifter	PG1-Assy-11-R0	1
15	Let's Bounce - Ball Hooper Chute	PG1-Assy-12-R0	1
16	Let's Bounce - Power Supply	PG1-Assy-15-R0	1
17	Let's Bounce - DB Box	PG1-Assy-16-R0	1
18	Serial Number Plate	PG1-FM-045-R0	1
19	Rear Frame Structure SA	PG1-SA-008-R1	1
20	Acrylic Front Panel R	PG1-FP-026-R-R1	1
21	Acrylic Front Panel L	PG1-FP-026-L-R0	1
22	Let's Bounce - Player Panel	PG1-Assy-08-R0	1
23	Connector Back Panel	PG1-FM-046-R1	1
24	PCBFB106 Sound Amplifier	BAFB106	1
25	GAME BOARD	FB216	1

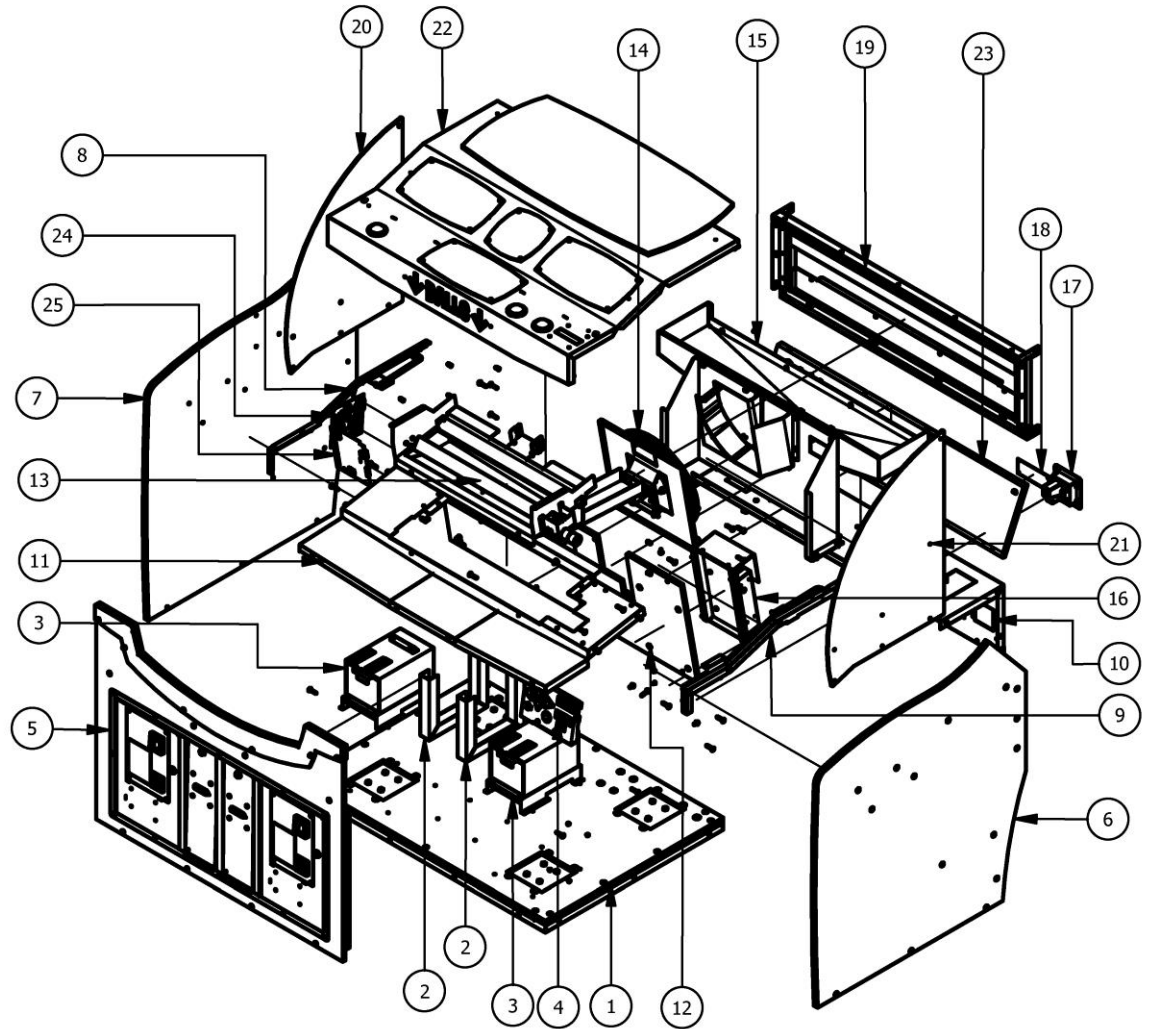


PANEL DOOR AND BASE FRONT PANEL

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Front Enclosure Panel	PG1-FW-001-R0	1
2	Front Trimming	PG1-FP-001-R0	2
3	Frame Panel SA	PG1-SA-001-R0	1
4	Let's Bounce - Coin Door	PG1-Assy-03-R0	2
5	Let's Bounce - Ticket Door	PG1-Assy-05-R0	2
6	Clitting 540 mm	WS0001	2

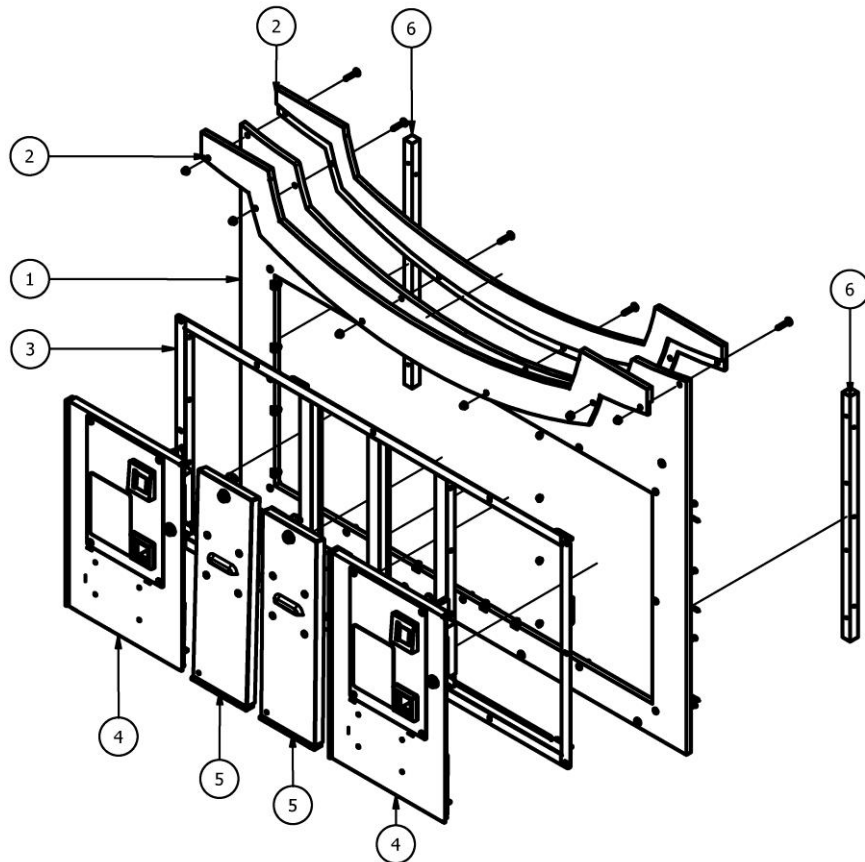


PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Base Front Panel	PG1-FW-002-R0	1
2	Frame Base Front Panel SA	PG1-SA-003-R0	1
3	Bracket Castor	PG1-FM-038-R0	4
4	Castor Wheel 3" (Swivel without Brake) VC PU	HM0092	4
5	Bracket Mounting	PG1-FM-039-R0	2
6	Rubber Foot Mounting M16x60mm	HM3022	2
7	Bracket LED Base 1	PG1-FM-088-R0	2
8	Bracket LED Base 2	PG1-FM-089-R0	1

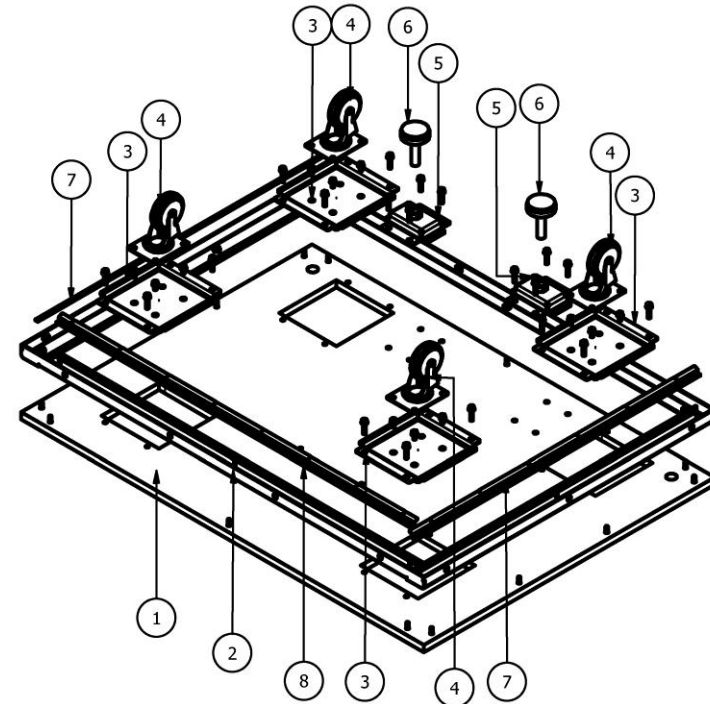


COIN DOOR AND TICKET DOOR

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Coin Door SA	PG1-SA-002-R0	1
2	Plate COin & DBA Assy	PG1-Assy-04-R0	1
3	Hinge Coin Door	PG1-FM-091-R0	1
4	Cam Lock	HM0004	1
5	Plate Grounded	PG1-FM-035-R0	1
6	Cam Lock Coin Door	PG1-FM-032-R1	1
7	Triple Lock Coin Door 1	PG1-FM-033-R0	1
8	Triple Lock Coin Door 2	PG1-FM-034-R0	1

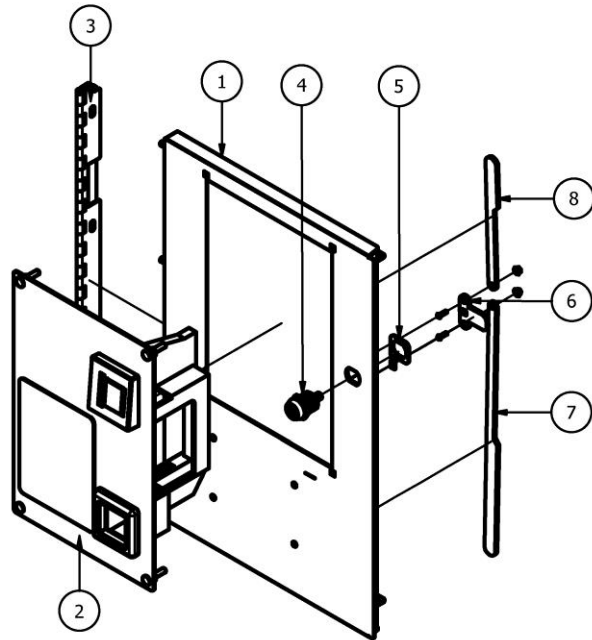


PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Ticket Door	PG1-FM-036-R0	1
2	Ticket Dispenser DL-1275 ELECTRONIC LABS INC	EA 1103	1
3	Cam Lock	HM0004	1
4	Plate Grounded	PG1-FM-035-R0	1
5	Cam Lock Ticket Door	PG1-FM-037-R0	1
6	Hinge Ticket Door	PG1-FM-092-R0	1

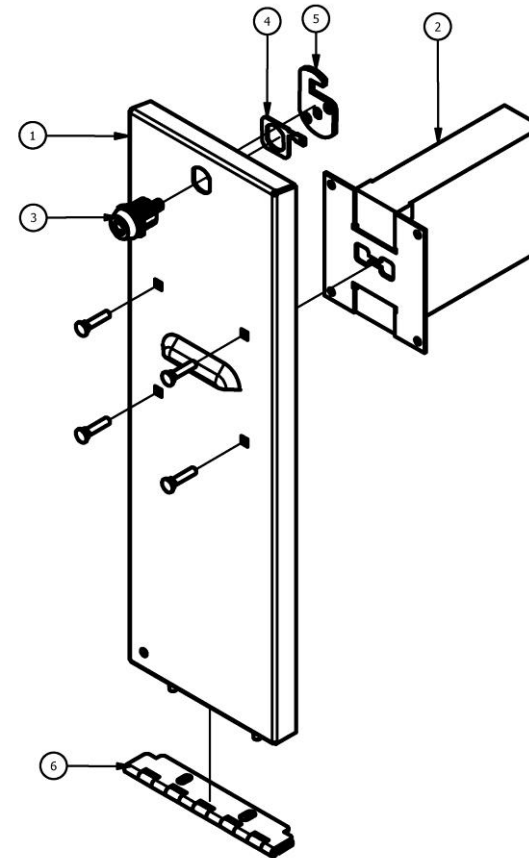


COIN PLATE WITH DBA AND CASH BOX

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Coin & DBA Plate	PG1-FM-030-R0	1
2	Coin mechanism Holder Assy Single P/N. A07H02341000000	HA 0014	1
3	Cover DBA	PG1-FM-031-R0	1

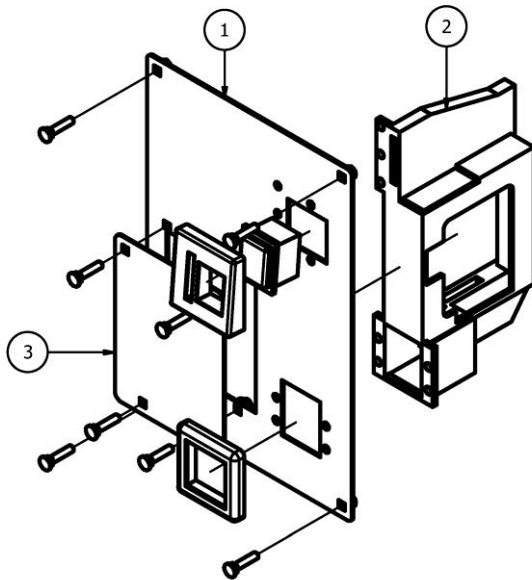


PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Base Cash Box	PG1-FM-040-R1	1
2	Housing Cash Box SA	PG1-SA-004-R1	1
3	Cash Box SA	PG1-SA-005-R0	1
4	Acrylic Spacer Cash Box	PG1-FP-002-R0	1

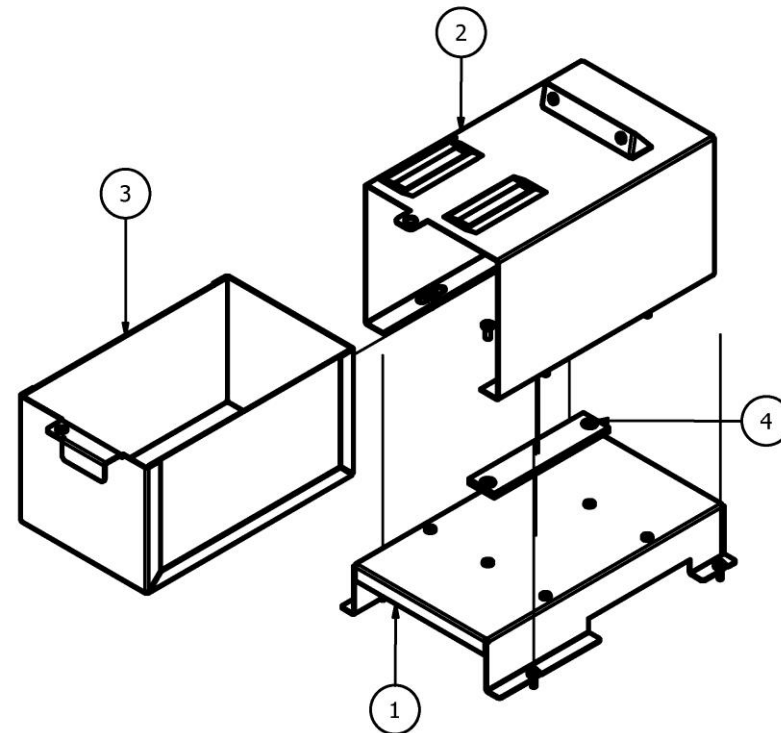


OPERATOR PANEL AND POWER SUPPLY

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Service Bracket SA	PG1-SA-006-R0	1
2	Switch Button Triangle CW-408 Blue	EA0588	2
3	Switch Button Triangle CW-408 Green	EA0590	1
4	Switch Button Triangle CW-408 Red	EA0589	1
5	Switch Small Round White Button P/N : HS-02 M5	EA0521	1
6	Coin Counter 12v Rear Mounting (Bracket)	EA1252	4
7	Potentiometer Carbon Duel Gang 50K ohm	EE0689	1


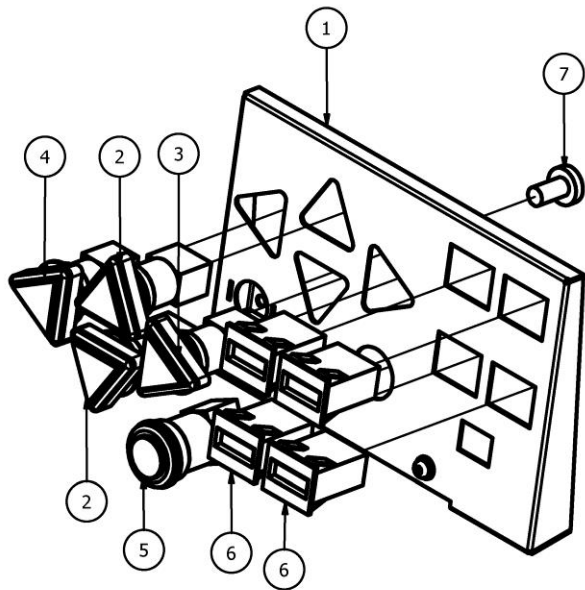


PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Bracket Power Supply	PG1-FM-047-R0	1
2	Power Supply TDK Lambda SWS1000L-12 MCM LITE DB	EA1291	1
3	Cover Power Supply	PG1-FP-003-R1	1

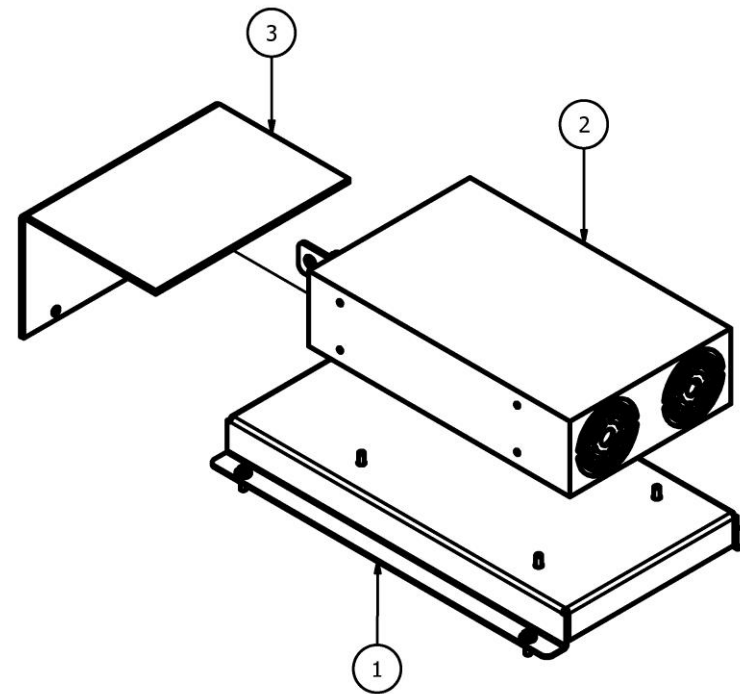


PLAYER PANEL

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Player Panel SA	PG1-SA-014-R1	1
2	Push Button (Yeloow Color) P/N : S9205D5	EA0571	3
3	Acrylic Cover Display Panel 1	PG1-FP-007-R0	3
4	Acrylic Cover Display Panel 2	PG1-FP-008-R0	1
5	Bracket Bounce Pad	PG1-FM-007-R0	1
6	Bounce Pad	PG1-FP-009-R1	1
7	Acrylic Balls	PG1-FP-005-R0	1
8	Hinge Player Panel	PG1-FM-096-R0	1
9	Clamp LED Bounce 1	PG1-FM-097-R0	3
10	Clamp LED Bounce 2	PG1-FM-098-R0	2
11	LED Box Balls	PG1-FM-055-R0	1
12	Acrylic Display Panel	PG1-FP-006-R0	3
13	LED Box Player Panel	PG1-FM-056-R0	1
14	Acrylic Credit Display	PG1-FP-004-R0	1
15	Bracket Credit Display	PG1-FM-054-R0	1
16	LCD Character Display Modules & Accessories STN-BLUE Transm 122.0 x 44.0	EA1044	1

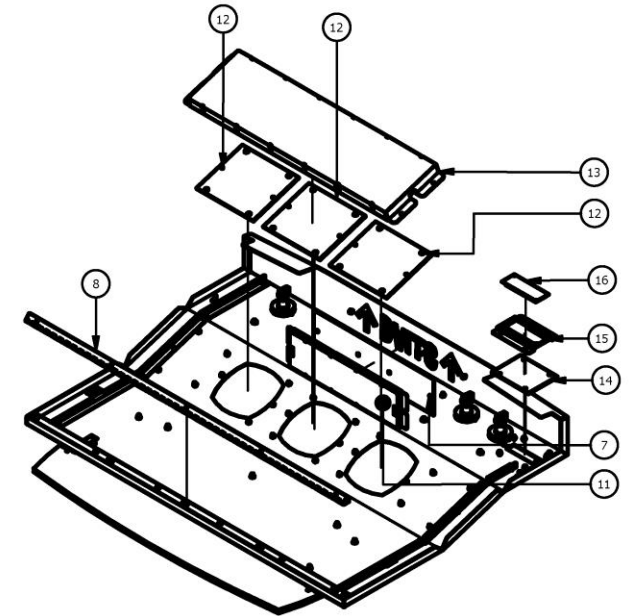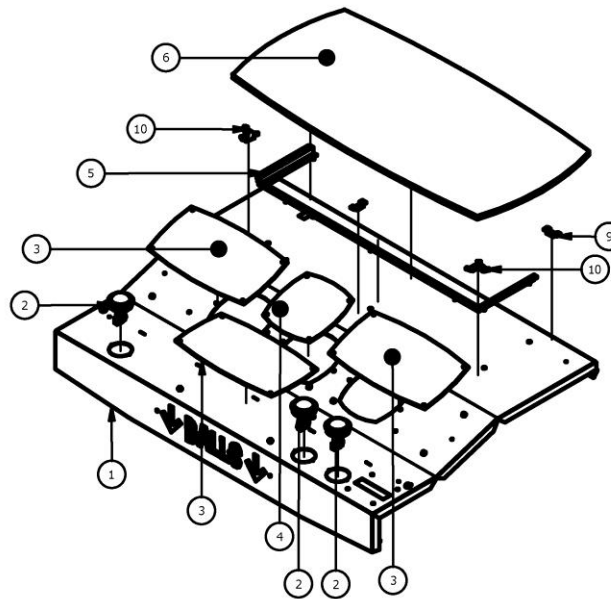


RIGHT AND LEFT PLAYER PANEL STOPPER

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Player Panel Board Stopper R	PG1-FM-050-R1	1
2	Support Struts R	PG1-FM-093-R-R0	1

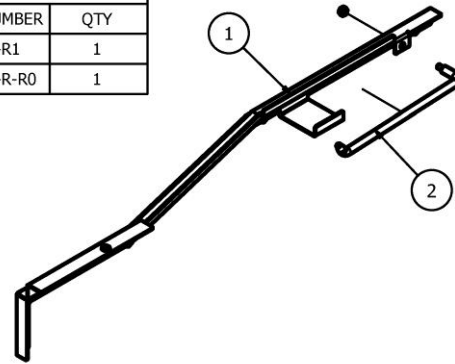


PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Player Panel Board Stopper L	PG1-FM-051-R1	1
2	Support Struts L	PG1-FM-093-L-R0	1

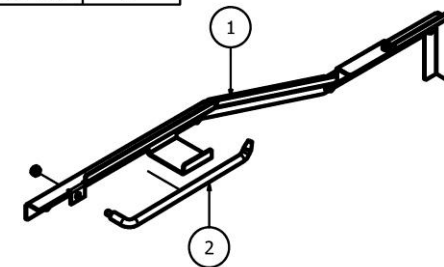


BALL GATE AND DB BOX


PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Ball Chute SA	PG1-SA-012-R0	1
2	Ball Gate SA	PG1-SA-13-R0	1
3	Let's Bounce - Motor Ball Gate	PG1-Assy-10-R0	1
4	Ball Gate Nylon Bush	PG1-FM-090-R0	1
5	Ball Gate Nylon Bush	PG1-FP-027-R0	1
6	Cover Ball Gate	PG1-FM-053-R1	1
7	PCB FB84a Sensor Ball Rev.1	BAFB84A	1
8	PCB FB84b Sensor Ball Rev.1	BAFB84B	1

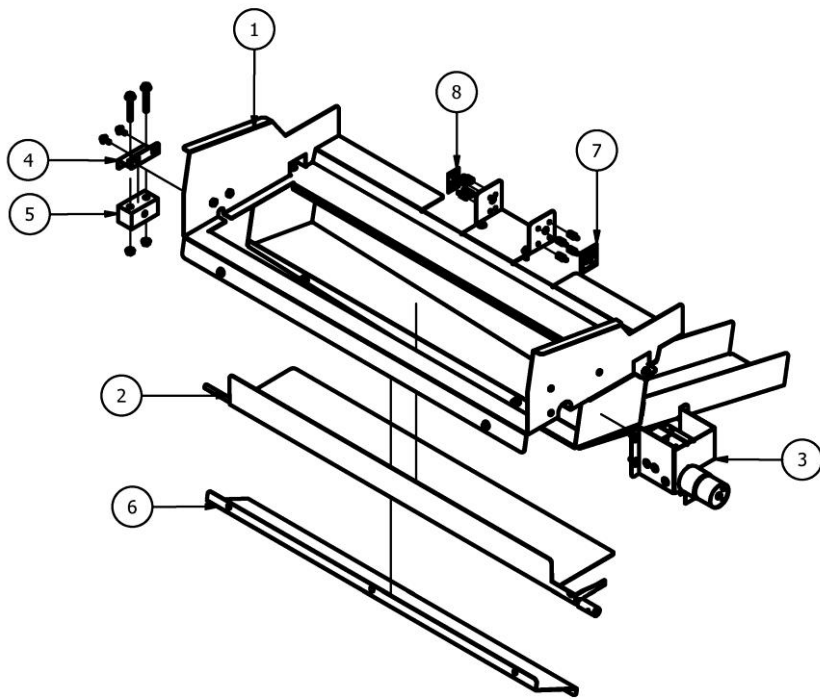

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	BD Box Front	PG1-FM-043-R0	1
2	IEC Type EMI Filter With Fuse And Switch UL Model : Delta 06AB25	EA0649	1
3	DB box housing	PG1-FM-044-R0	1
4	Binding Post Green	EA1356	1
5	Rubber cover deck 22mm	HM0234	1

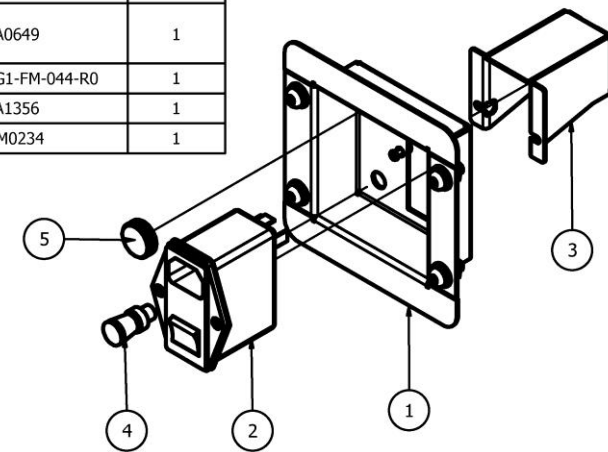


BALL GATE MOTOR AND DISPLAY SIGN


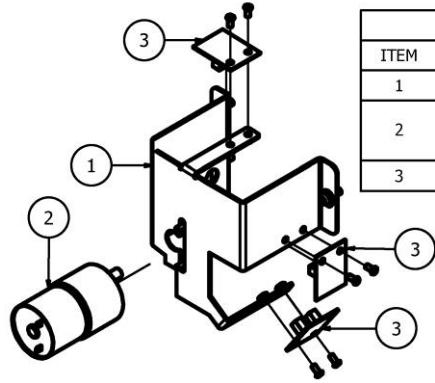


PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Ball Gate Motor	PG1-FM-052-R1	1
2	Prize Dispenser Arm 12VDC Motor JM 300 - 3259	EA1155C	1
3	PCB FB165 Opto Sensor	BAFB165	3

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Board Header Sign 1	PG1-FW-023-R0	1
2	Board Header Sign 2	PG1-FW-024-R0	1
3	Box LED Balls Header	PG1-FM-087-R1	1
4	Lower Door Playfield	PG1-FM-100-R0	1
5	Bracket Header Display SA	PG1-SA-016-R1	1
6	Header Plastic Mold	PG1-FP-010-R1	1
7	LED Header Display	PG1-FM-062-R1	1
8	Spacer Acrylic Sign 1	PG1-FM-106-R0	5
9	Spacer Acrylic Sign 2	PG1-FM-107-R0	2
10	Acrylic Header Sign	PG1-FP-028-R0	1
11	Bracket Sign 1	PG1-FM-101-R0	1
12	Bracket Sign 2	PG1-FM-102-R0	1
13	Bracket LED Board Sign1	PG1-FM-103-R0	1
14	Bracket LED Board Sign 2	PG1-FM-104-R0	1
15	Bracket LED Board Sign 3	PG1-FM-105-R0	1

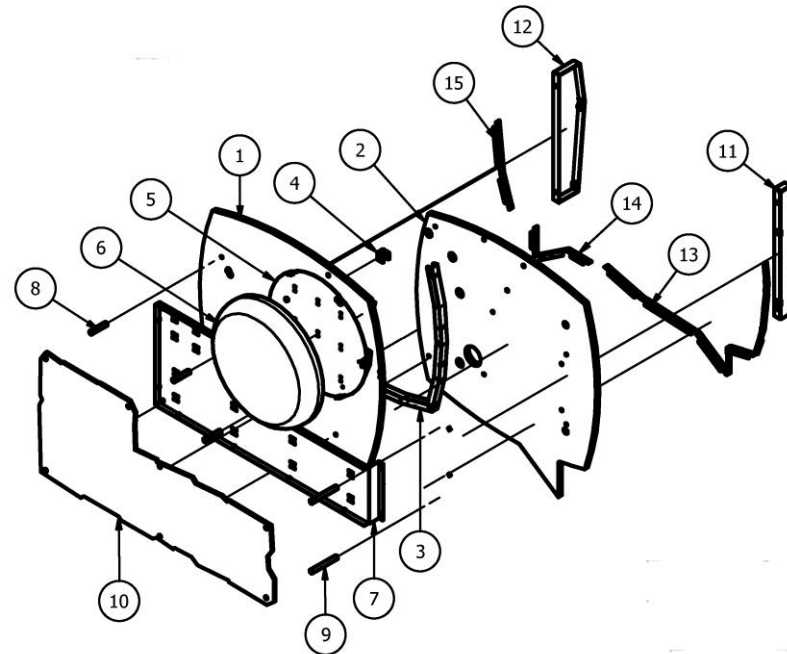


BALL LIFTER AND BALL HOPPER CHUTE

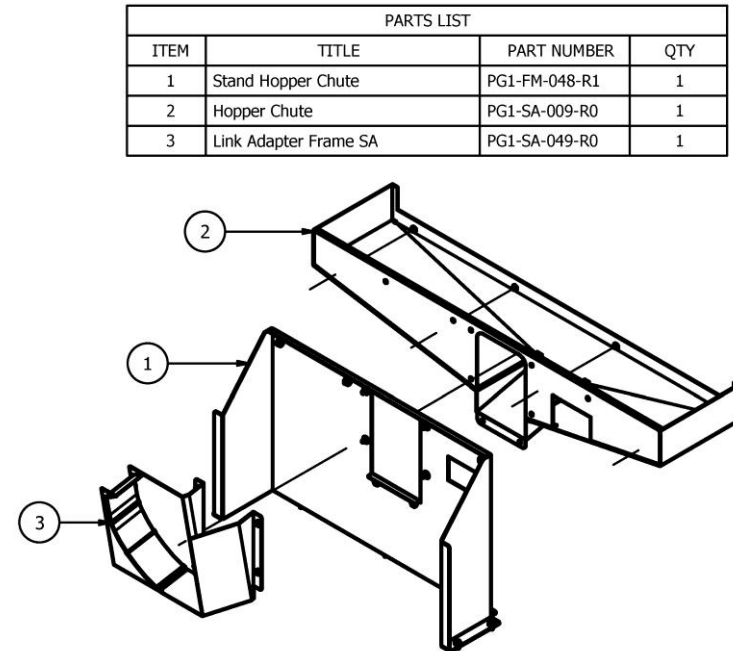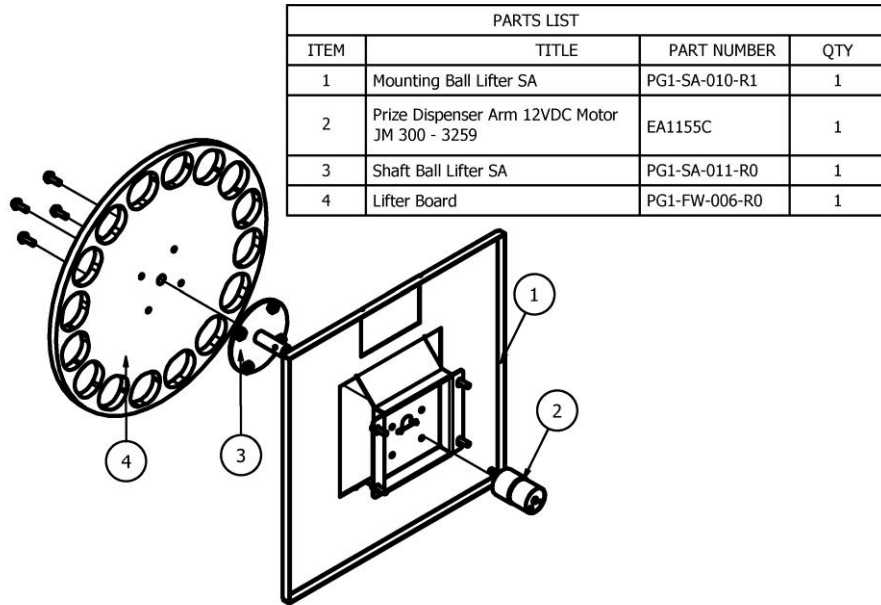


DISPLAY PANEL AND BASE DISPLAY PANEL

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Let's Bounce - Base Display Panel	PG1-Assy-20-R0	1
2	Let's Bounce - Base Score Panel	PG1-Assy-21-R0	1
3	Let's Bounce - Board Display Round 1	PG1-Assy-23-R0	1
4	Let's Bounce - Board Display Round 2	PG1-Assy-24-R0	1
5	Let's Bounce - Display Sign	PG1-Assy-22-R0	1
6	Back Cover Lower Display	PG1-FM-061-R1	1


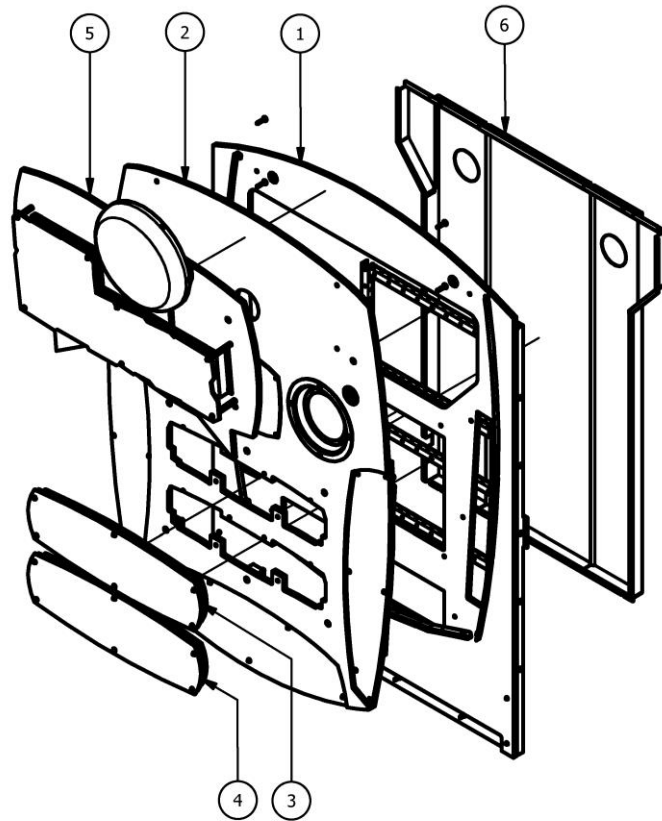


PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Back Panel Display	PG1-FW-009-R1	1
2	Reinforce Rear Display SA	PG1-SA-015-R1	1
3	LED Back Panel Layer 1	PG1-FM-058-R1	2
4	LED Back Panel 2	PG1-FM-059-R0	1

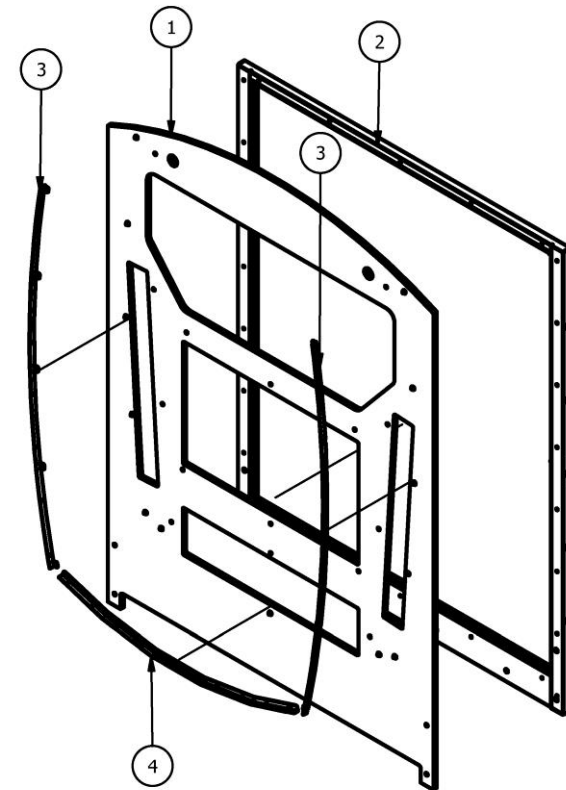


BASE SCORE PANEL

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Main Panel Display 1	PG1_FW-010-R1	1
	Main Panel Display 2	PG1_FW-011-R0	1
2	Acrylic Milk Player	PG1-FP-017-R0	2
3	Plate Player 1	PG1-FM-075-R0	1
4	Plate Player 2	PG1-FM-076-R0	1
5	Acrylic Grey Player	PG1-FP-013-R0	2
6	LED Box Main Display 1	PG1-FM-065-R0	1
7	Acrylic Milk Main Panel 2	PG1-FP-019-R0	2
8	Plate Total Score	PG1-FM-078-R0	1
9	Plate Winner	PG1-FM-077-R0	2
10	Acrylic Grey Total Score	PG1-FP-014-R0	1
11	Acrylic Milk Timmer	PG1-FP-016-R0	1
12	Plate Timmer	PG1-FM-074-R0	1
13	Acrylic Grey Timmer	PG1-FP-012-R0	1
14	Speaker Plastic Mold	PG1-FP-011-R0	2
15	Speaker Grill	PG1-FM-073-R0	2
16	Speaker Acrylic Inner Bezel	PG1-FM-072-R0	2
17	Speaker Acrylic Outer Bezel	PG1-FM-071-R1	2
18	Acrylic Milk Main Panel 1	PG1-FP-018-R0	1
19	LED Box Main Display 2	PG1-FM-066-R0	2
20	LED Box Main Display 3	PG1-FM-067-R0	2
21	LED Box Timmer	PG1-FM-068-R0	1
22	Spacer Big Display	PG1-FM-064-R0	8
23	Spacer Small Display	PG1-FM-063-R1	7
24	Spacer Speaker	PG1-FW-012-R0	2
25	Bracket LED Speaker	PG1-FM-070-R1	2
26	Bracket Small Speaker	PG1-FM-069-R0	2
27	PCB FB44 4 Digit 7 Segment	BAFB44	2
28	2 Digit 7 Segment 4" Display	FB63 rev3	1
29	Big Speaker		2
30	Small Speaker		2

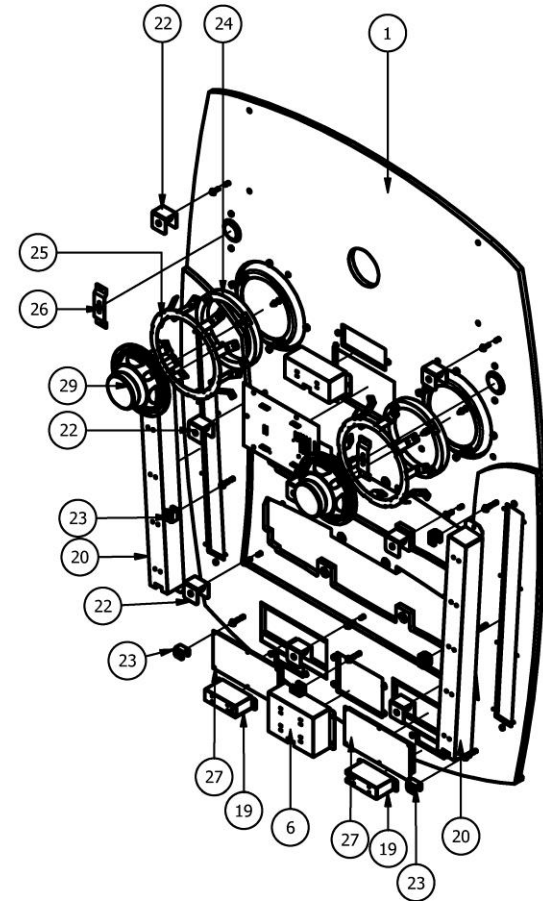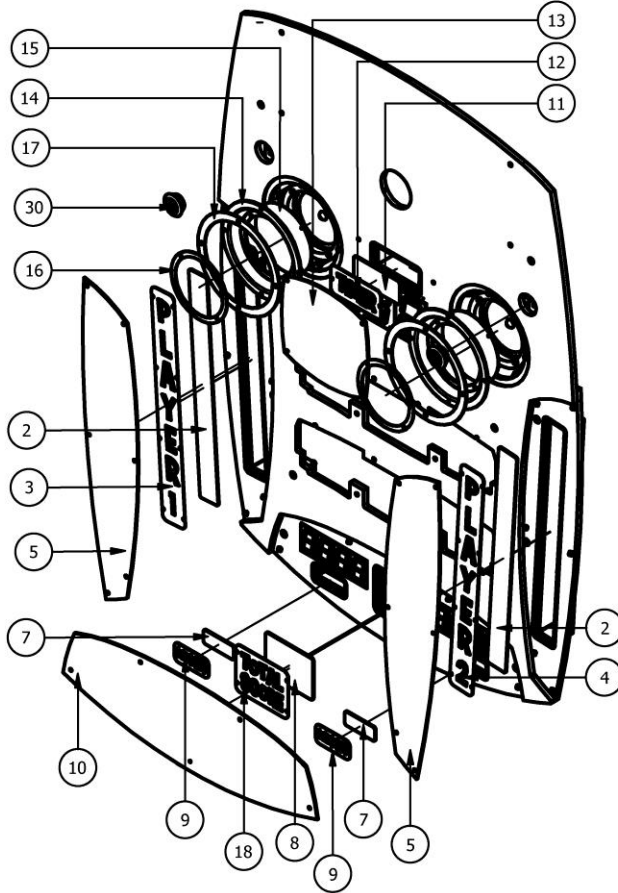


BOARD DISPLAY ROUND 1 AND BOARD DISPLAY ROUND 2

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Round Score Board	PG1-FW-013-R0	1
2	Acrylic Milk Main Panel 1	PG1-FP-018-R0	1
3	Acrylic Milk Main Panel 2	PG1-FP-019-R0	2
4	Plate Round 1	PG1-FM-080-R0	1
5	Plate Clear	PG1-FM-079-R0	2
6	Acrylic Grey Round Score	PG1-FP-015-R0	1
7	LED Box Main Display 1	PG1-FM-065-R0	1
8	LED Box Main Display 2	PG1-FM-066-R0	2
9	LED Round Score SA	PG1-SA-017-R0	1
10	PCB FB44 4 Digit 7 Segment	BAFB44	2

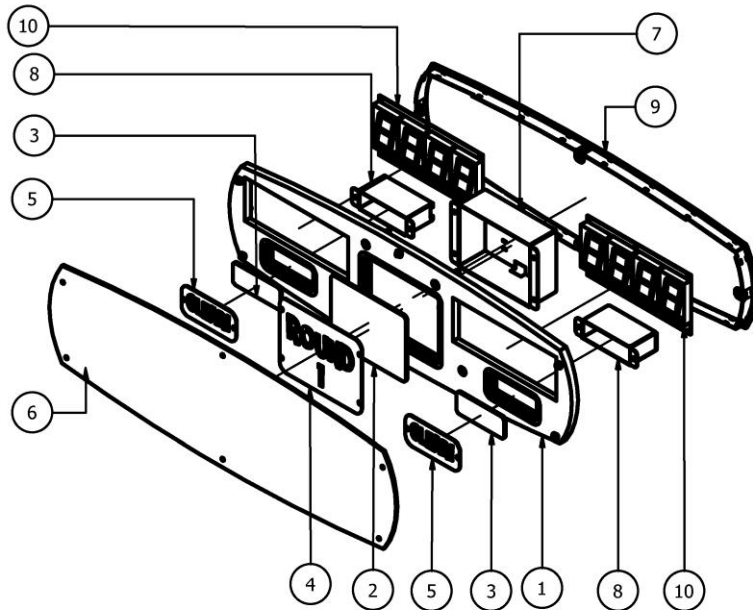


PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Round Score Board	PG1-FW-013-R0	1
2	Acrylic Milk Main Panel 1	PG1-FP-018-R0	1
3	Acrylic Milk Main Panel 2	PG1-FP-019-R0	2
4	a Plate Round 2	PG1-FM-081-R0	1
	b Plate Bonus Round	PG1-FM-094-R0	1
5	Plate Clear	PG1-FM-079-R0	2
6	Acrylic Grey Round Score	PG1-FP-015-R0	1
7	LED Box Main Display 1	PG1-FM-065-R0	1
8	LED Box Main Display 2	PG1-FM-066-R0	2
9	LED Round Score SA	PG1-SA-017-R0	1
10	PCB FB44 4 Digit 7 Segment	BAFB44	2

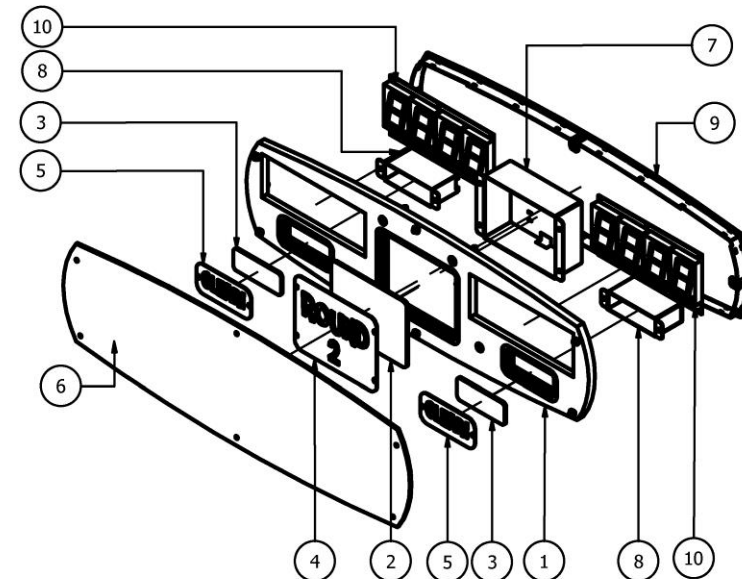


RIGHT AND LEFT SIDE WALLS

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Side Wall 1 R	PG1-FW-014-R-R0	1
2	Side Wall 2 R	PG1-FW-015-R-R0	1
3	Side Wall 3 R	PG1-FW-016-R-R0	1
4	Acrylic Side Wall	PG1-FP-023-R1	1
5	Plywood Timming 1 R	PG1-FW-025-R-R0	1
6	Plywood Timming 2 R	PG1-FW-026-R-R0	1
7	Plywood Timming 3 R	PG1-FW-027-R-R0	1
8	Reinforce Side Wall R	PG1-FM-082-R-R0	1
9	Hook Side Wall R	PG1-FM-083-R-R0	1

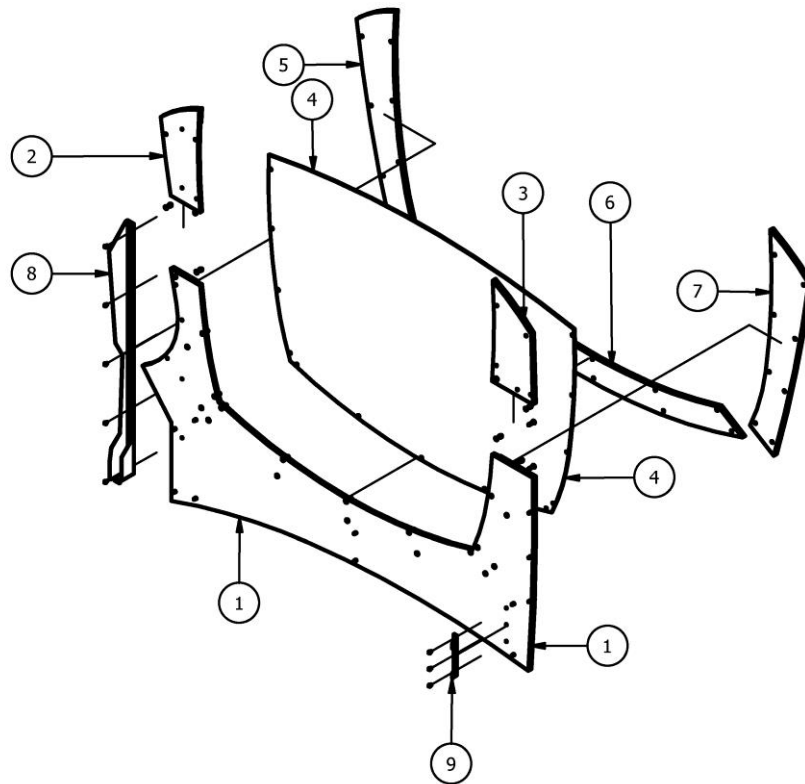


PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Side Wall 1 L	PG1-FW-014-L-R0	1
2	Side Wall 2 L	PG1-FW-015-L-R0	1
3	Side Wall 3 L	PG1-FW-016-L-R0	1
4	Acrylic Side Wall	PG1-FP-023-R1	1
5	Plywood Timming 1 L	PG1-FW-025-L-R0	1
6	Plywood Timming 2 L	PG1-FW-026-L-R0	1
7	Plywood Timming 3 L	PG1-FW-027-L-R0	1
8	Reinforce Side Wall L	PG1-FM-082-L-R0	1
9	Hook Side Wall L	PG1-FM-083-L-R0	1

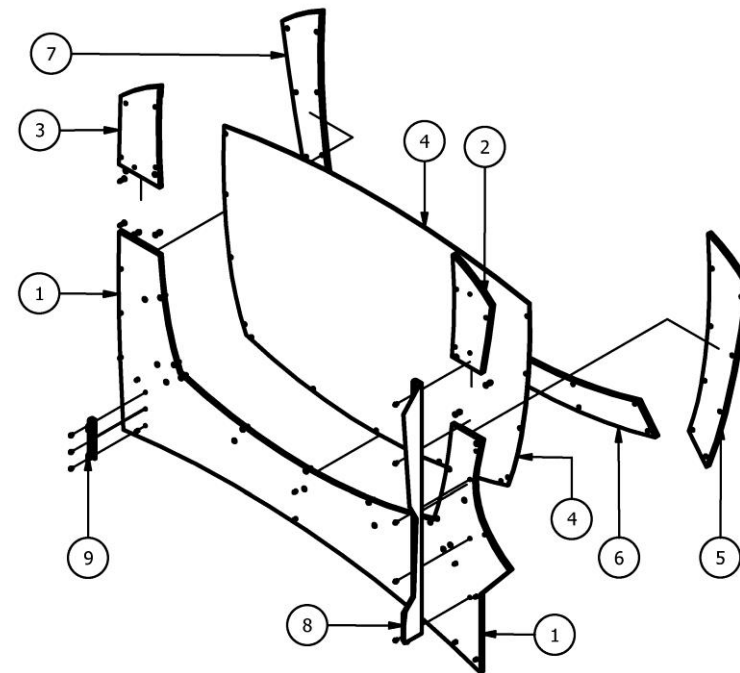


MAIN PLAYFIELD, BEAM FOUR TILES AND BEAM FIVE TILES


PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Frame Main Playfield SA	PG1-SA-18-R1	1
2	MDF Main Playfield	PG1-FW-018-R1	1
3	Let's Bounce - Beam 4 Pegs	PG1-Assy-29-R0	5
4	Let's Bounce - Beam 5 Pegs	PG1-Assy-28-R0	5
5	MDF gutter board	PG1-FW-017-R1	2
6	HDPE gutter board	PG1-FP-024-R0	2
7	Leg Frame SA	PG1-FM-020A-R1	1
8	Castor Wheel 3" (Swivel with Brake) VC PU	HM0091	2
9	FB214 Fuse PCB	BAFB214	5

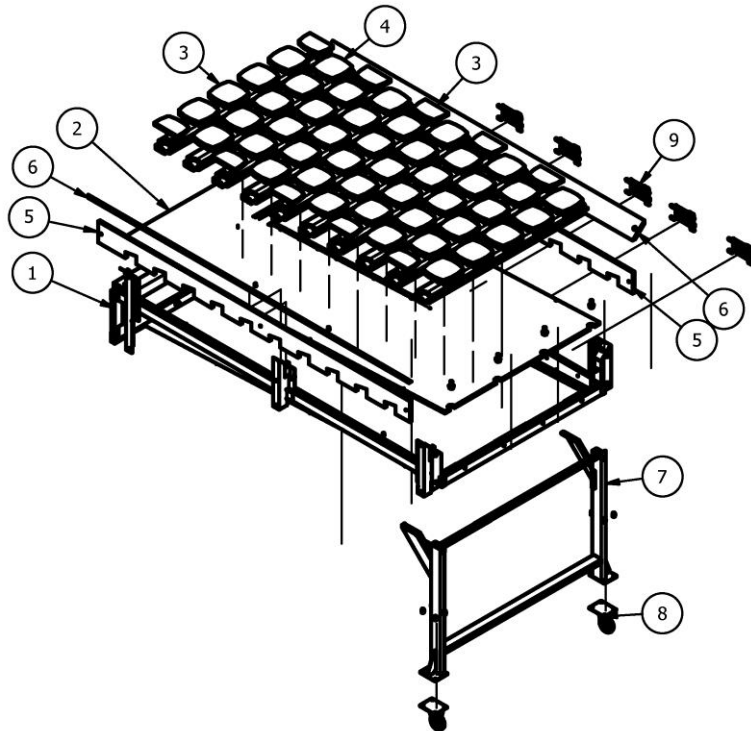

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Beam 4 Pegs SA	PG1-SA-019-A-R1	1
2	Foam Rubber Beam 1	PG1-FW-019-R0	1
3	Dead Tile Plate Base	PG1-FM-084-R0	2
4	MDF Dead Tile	PG1-FW-022-R0	2
5	Damper Foam	PG1-FW-021-R0	4
6	Tile Base plate bottom	PG1-FM-085-R0	4
7	Tile PCB Base	PG1-FM-086-R0	4
8	FB205 Peggle Disc Sensor Ver 1.1	BAFB205	4
10	PEGS	PG1-FP-025-R0	4

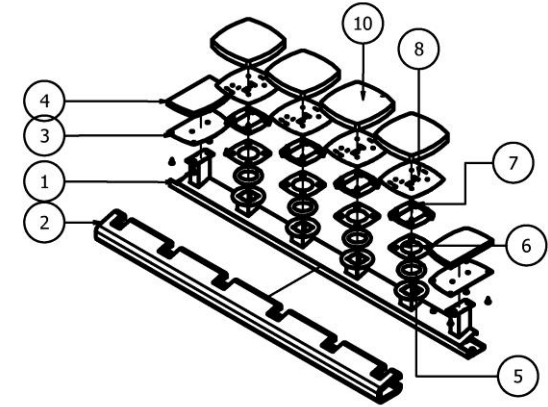

PARTS LIST			
ITEM	TITLE	PART NUMBER	QTY
1	Beam 5 Pegs SA	PG1-SA-019-B-R0	1
2	Foam Rubber Beam 2	PG1-FW-020-R0	1
3	Damper Foam	PG1-FW-021-R0	5
4	Tile Base plate bottom	PG1-FM-085-R0	5
5	Tile PCB Base	PG1-FM-086-R0	5
6	FB205 Peggle Disc Sensor Ver 1.1	BAFB205	5
7	PEGS	PG1-FP-025-R0	5

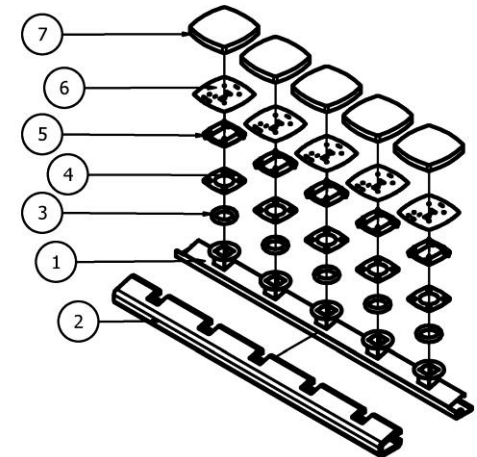



Disclaimer

OPERATOR, PLEASE NOTE

By accepting delivery of and placing this hardware and licensed software into operation, the Operator represents and warrants that it will only operate the hardware and licensed software provided by LAI Games in compliance with the regulatory requirements of the country, state, and/or municipality in which the hardware and licensed software are used and/or operated. LAI Games has provided this hardware and licensed the software **only** for legitimate and legal use, and any use of the hardware and licensed software in a manner that violates any laws of the country, state, and/or municipality in which the hardware and licensed software are used and/or operated is wholly unauthorized and shall be at Operator's sole and complete risk.

Operator assumes any and all risk and liability for any civil or criminal legal claims or causes of action arising from the unauthorized use and/or operation of the provided hardware and licensed software, such improper and unauthorized use specifically including, but not limited to:

- (a) Operating or allowing the operation of the hardware and licensed software in a manner that violates the laws and regulations of the country, state, and/or municipality in which the hardware and licensed software are used or operated;
- (b) Assembling or causing the assembly of the hardware in a manner not authorized by or disclosed in this manual;
- (c) Any tampering with, changes to, or modifications of the licensed software that occur after the software leaves LAI Games' factory that is not made by authorized LAI Games personnel and that is directly or indirectly caused by Operator; and
- (d) Any tampering with the computer chip/electronic programmable read only memory (EPROM) by or on behalf of Operator that directly or indirectly causes the tamper-indicating holographic seal on the computer chip/EPROM to be broken or damaged in any way.

LAI Games shall have no liability related to such improper and unauthorized use and/or operation of the hardware and licensed software, and Operator shall indemnify, defend, and hold LAI Games harmless for any claim or cause of action brought against LAI Games arising from Operator's or Operator's representative's improper and unauthorized use and/or operation of the hardware and licensed software.

Any improper and unauthorized use shall completely and totally void any and all warranties, both express and implied, of the hardware and licensed software provided by LAI Games.

WARRANTY

LAI Games warrants its manufactured products for a period of 3 months inclusive of parts and labor from the date of sale.

LAI Games exclusive obligation is to repair any item with any defects as a result of faulty workmanship or materials, providing the defective item or items of equipment are returned to the LAI Games distributor from which the machine was purchased.

LAI Games shall have no obligation to make repairs necessitated by negligence or interference to any component by any unauthorized personal. This will automatically void any existing warranty.

IF MAKING A WARRANTY CLAIM:

- (a) A copy of the sales invoice must accompany the claim.
- (b) To and from transport and freight costs are not covered by the warranty.
- (c) Warranty is not transferable with the sale of a machine from one owner to another.





Contact Us

Sales and Enquiries: sales@laigames.com
Technical Support: support@laigames.com
Website: www.laigames.com

For your nearest LAI Games Distributor, visit our web site at
www.laigames.com

ISO 9001 CERTIFIED ORGANIZATION



ISO 9001: 2008 Cert No.17460